
BLACK WOOD GRAIN LISBON SLIDER WARDROBE ASSEMBLY INSTRUCTIONS

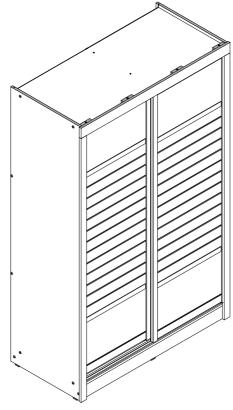





IMPORTANT PLEASE READ BEFORE YOU CONTINUE FURTHER FOR DOMESTIC USE ONLY

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.


ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXING.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET) $\underline{\text{DO NOT}}$ USE POLISH, DETERGENT OR CHEMICAL CLEANERS.

THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

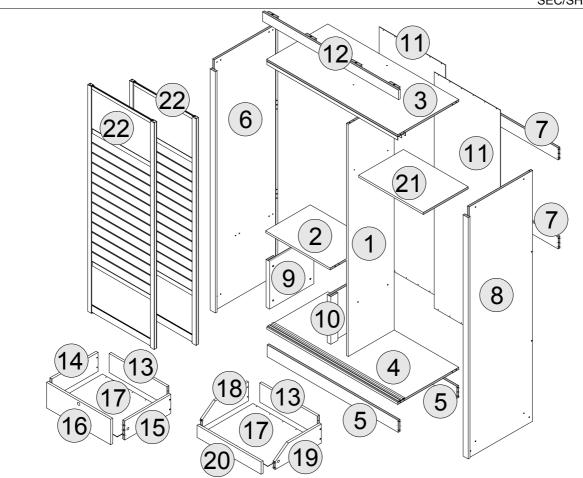


PART LIST

Part Number	Part Code	Part Description	Quantity	Carton
1	S100-101-060-EU1-01	Centre Panel	1	2/4
2	S100-101-060-EU1-02	Bottom Left Shelf	1	2/4
3	S100-101-060-EU1-03	Top Panel	1	3/4
4	S100-101-060-EU1-04	Base Panel	1	3/4
5	S100-101-060-EU1-05	Bottom Crossbeam	2	2/4
6	S100-101-060-EU1-06	Left Side Panel	1	1/4
7	S100-101-060-EU1-07	Back Crossbars	2	2/4
8	S100-101-060-EU1-08	Right Side Panel	1	1/4
9	S100-101-060-EU1-09	Inner Left Frame	1	3/4
10	S100-101-060-EU1-10	Inner Right Frame	1	3/4
11	S100-101-060-EU1-11	Back Panel	2	1/4
12	S100-101-060-EU1-12	Top Plinth	1	2/4
13	S100-101-060-EU1-13	Drawer Back	2	3/4
14	S100-101-060-EU1-14	Drawer Side - Left (Up)	1	3/4
15	S100-101-060-EU1-15	Drawer Side - Right (Up)	1	3/4
16	S100-101-060-EU1-16	Drawer Front (Up)	1	3/4
17	S100-101-060-EU1-17	Drawer Base	2	2/4
18	S100-101-060-EU1-18	Drawer Side - Left (Down)	1	3/4
19	S100-101-060-EU1-19	Drawer Side - Right (Down)	1	3/4
20	S100-101-060-EU1-20	Drawer Front (Down)	1	3/4
21	S100-101-060-EU1-21	Top Right Shelf	1	2/4
22	S100-101-060-EU1-22	Door	2	4/4

HARDWARE LIST


Α		DOWEL 6x30MM	42 PCS
В	<u> </u>	BOLT M6x50MM	20 PCS
С		SCREW M3.5x16MM	18 PCS
D		TACK	34 PCS
Е		SCREW M4 X 38MM	16 PCS
F	0	HANGING RAIL SUPPORT	4 PCS
G		HANGING RAIL	2 PCS
Н		SHELF SUPPORT	4 PCS
ı	O 00 0 0 00 00	DRAWER RUNNER A (L&R)	4 PCS
J		DRAWER RUNNER B (L&R)	4 PCS
K		SCREW M4 X 30MM	4 PCS
L	a	LOCK	1 SET
М) 1110	SCREW M3.5x12MM	24 PCS

N		CAM BOLT+CAM NUT	4 SETS
0			6 PCS
Р		SCREW M4 X 50MM	4 PCS
Q		PLASTIC H STRIP	1 PC
R		ALLEN KEY	1 PC
S		SPACING BLOCK FOR DOORS	1 PC
Т		ANTI - TIP STRAP	2 PCS
U		SCREW M4 X 16MM	2 PCS

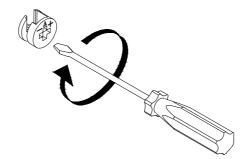


(SCREWDRIVER NOT PROVIDED)


USE A FLAT HEAD SCREWDRIVER TO TIGHTEN THE CAM NUTS. A QUARTER TURN CLOCKWISE IS ALL THAT IS NEEDED.

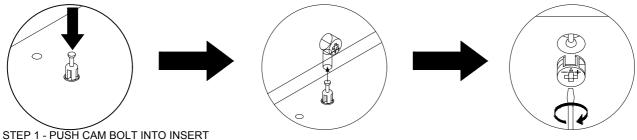



STEP 2 - ALIGN THE CAM BOLT WITH THE HOLE AND PUSH TOGETHER UNTIL FLUSH. (MAKE SURE THE ARROW OF THE CAM LOCK IS POINTING TOWARD ON THE EDGE OF THE PANEL.)

STEP 3 - THE HEAD OF THE BOLT GOES INTO THE WIDE MOUTH OF THE CAM LOCK. YOU THEN TURN THE LOCK SO THE NARROW PART CLOSES OVER THE BOLT.

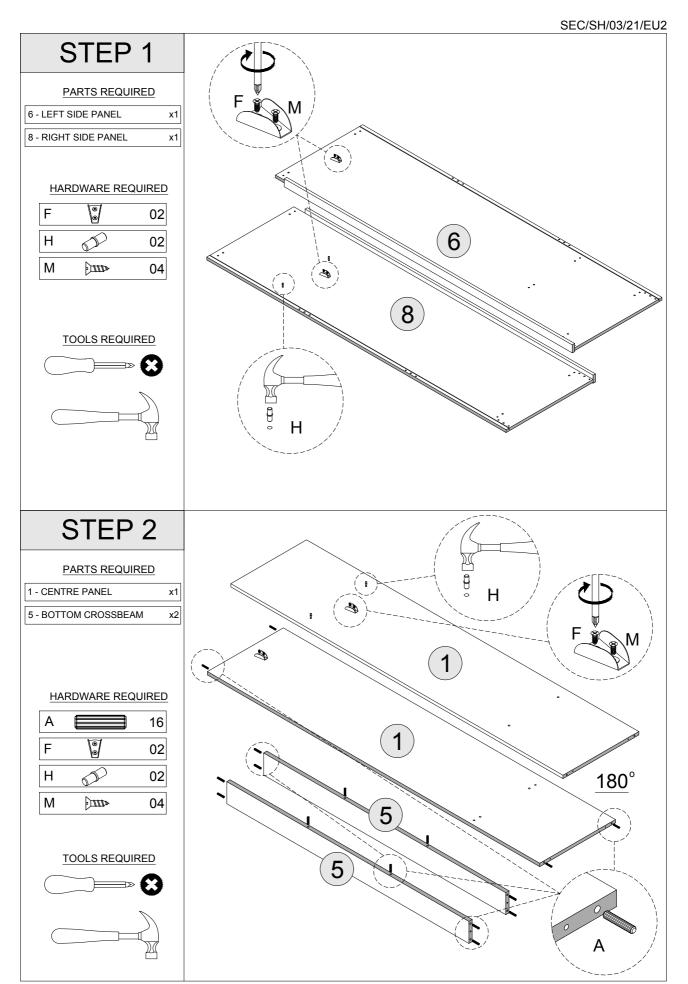


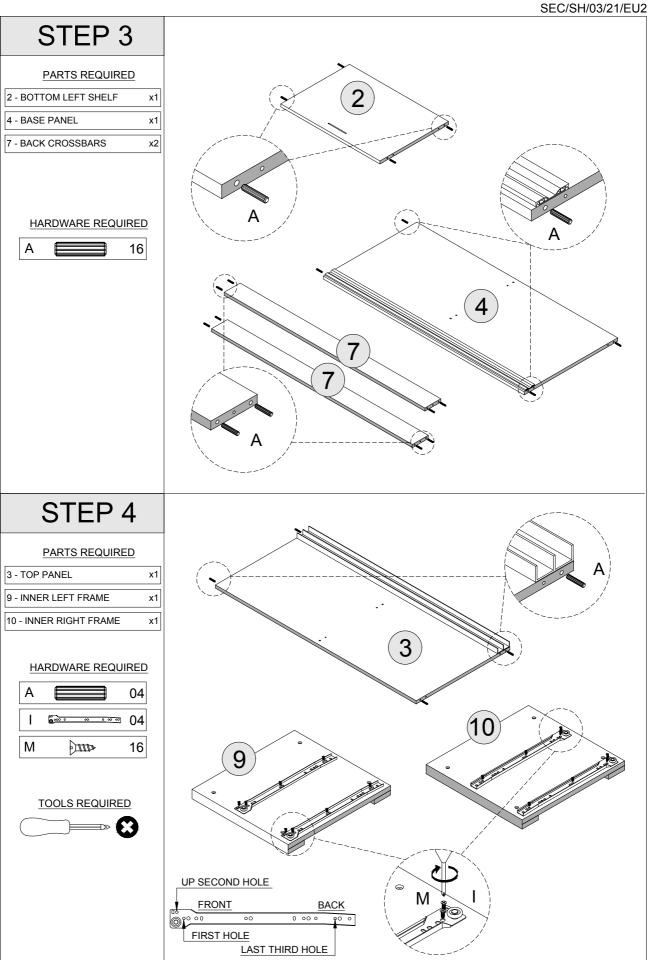

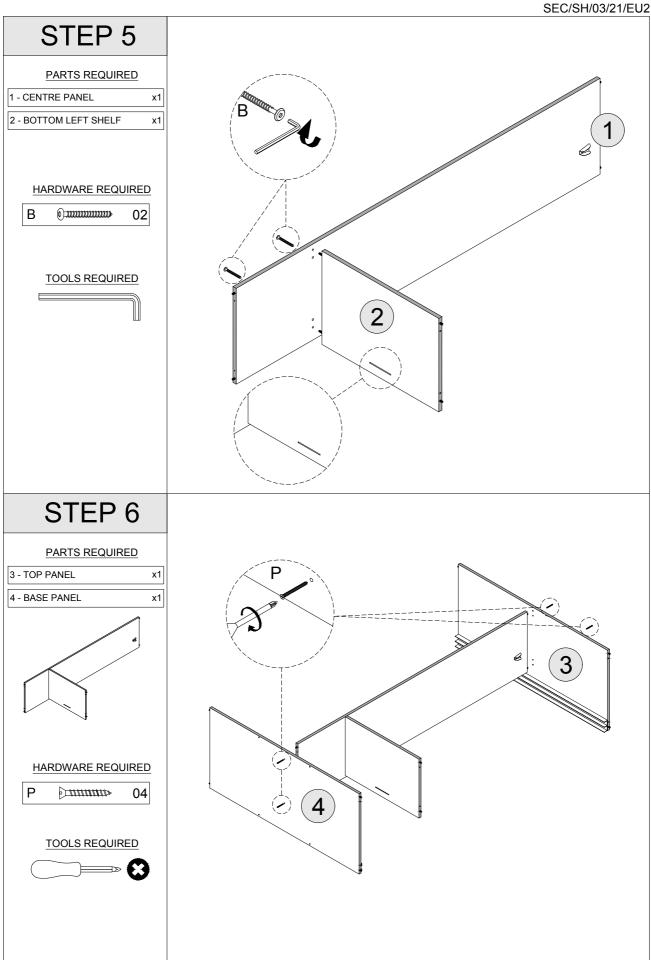


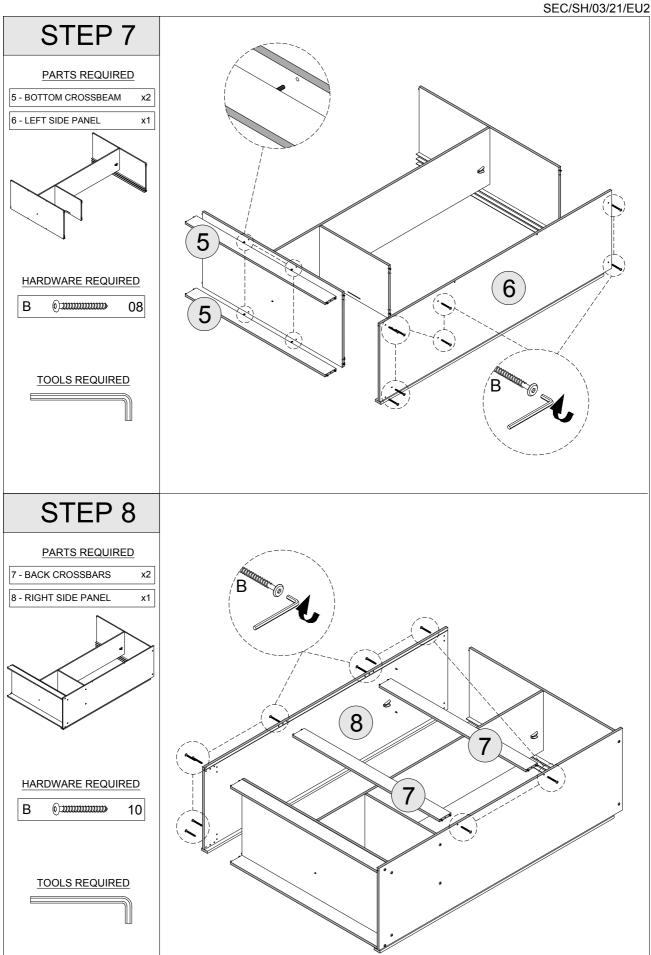



SEC/SH/03/21/EU2

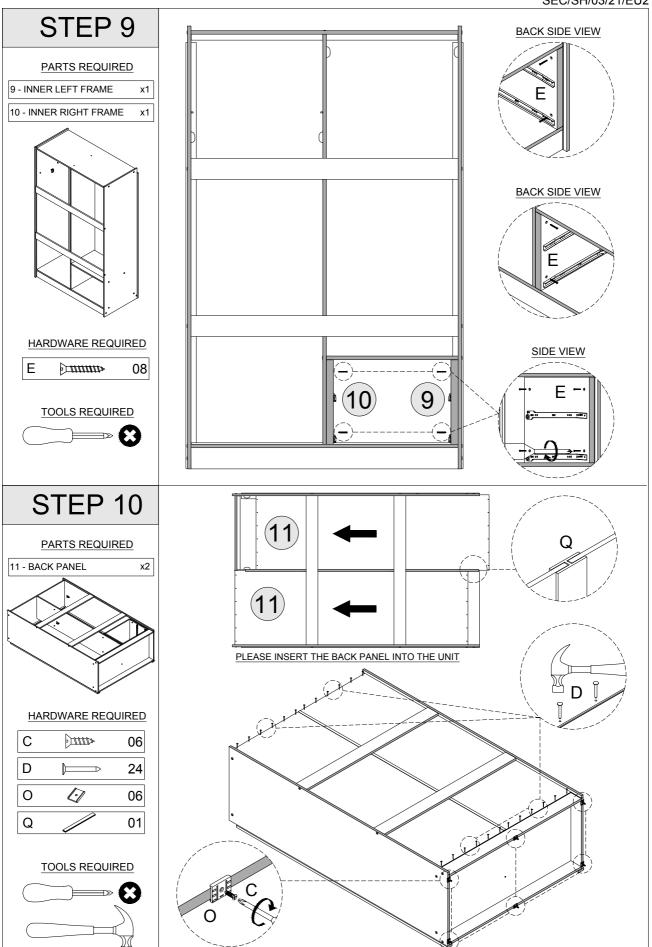


Page 08

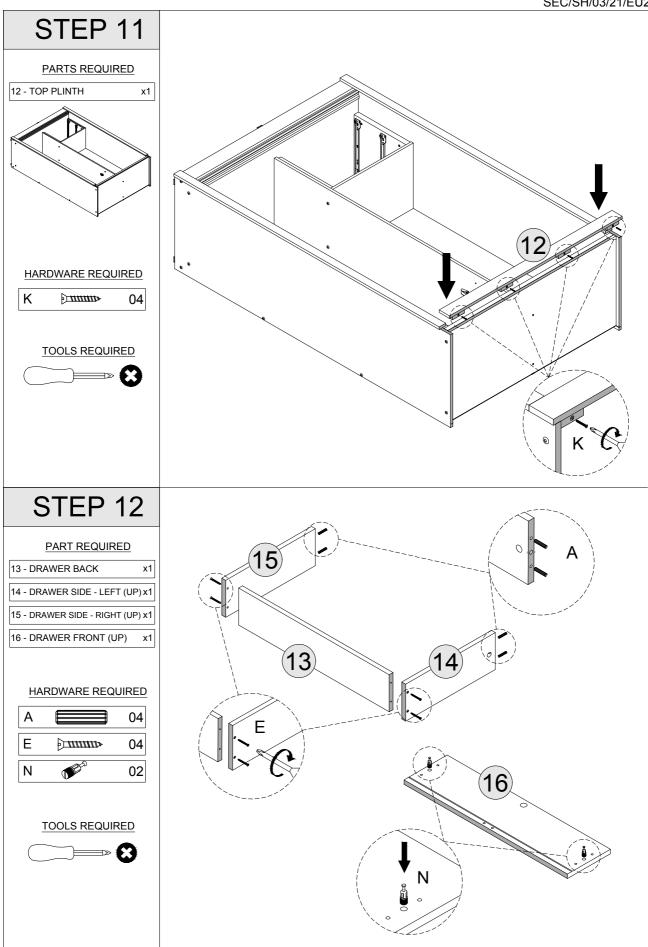

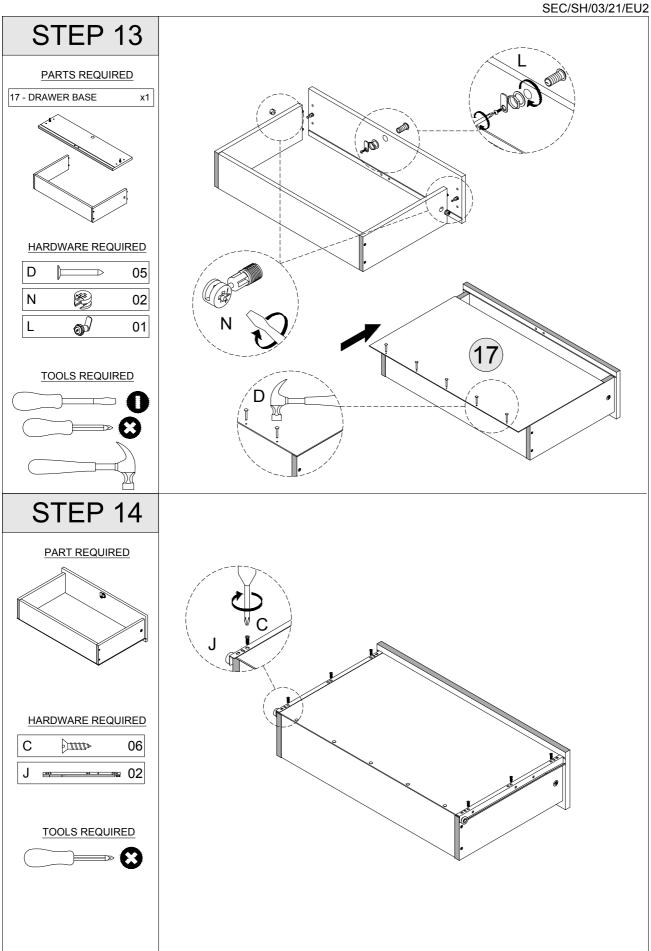


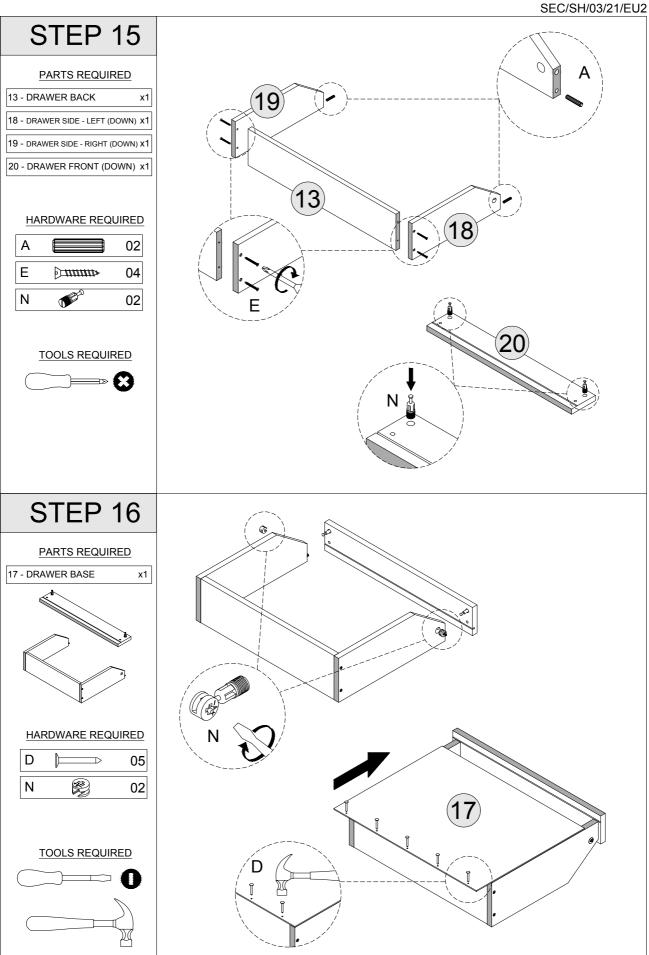

Page 11

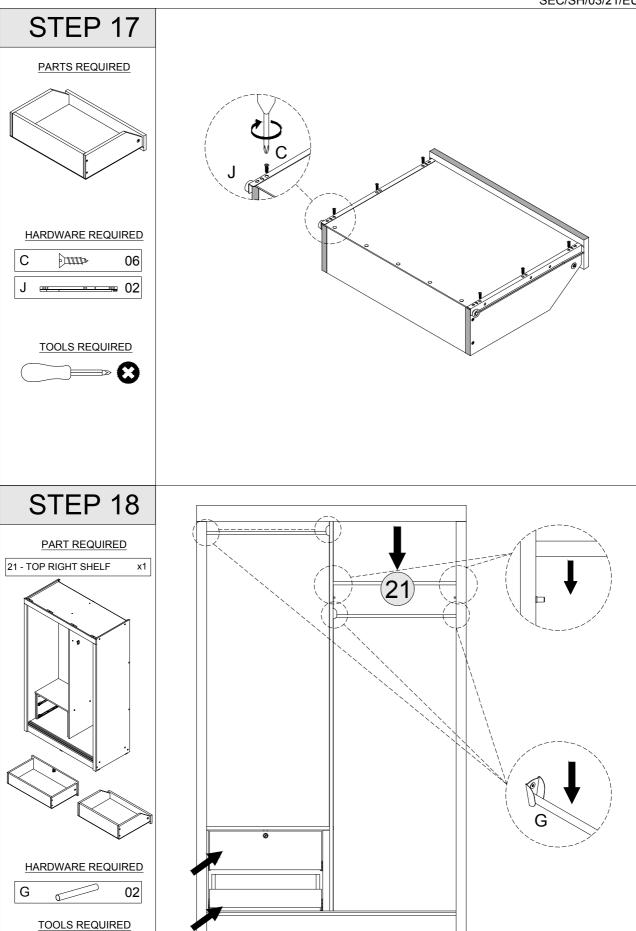

Page 12

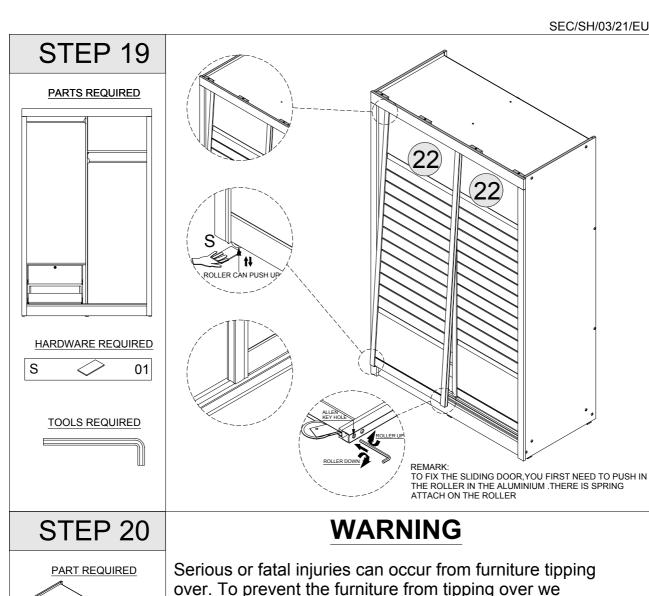

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make

