VERMONT 4 DRAWER CHEST ASSEMBLY INSTRUCTIONS WHITE/GREY

55122







IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE


After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.






- * Use of power tools to assemble this product will invalidate any claim and could damage this product making it unsafe!!!
- * Please assemble on a clean soft surface to avoid damage.
- * Please check contents and read the instructions before commencing assembly.
- * Assemble this product following the enclosed instructions carefully.
- * Please take care to avoid damaging parts during assembly.

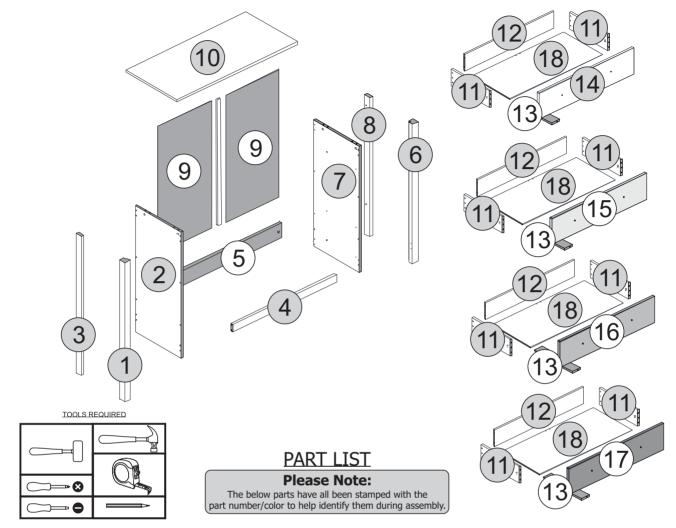

Part Number	Part Code	Part Description	Quantity	Carton
1	S100-102-111-DV1-01	Front Left Upright	1	1/1
2	S100-102-111-DV1-02	Left Side anel	1	1/1
3	S100-102-111-DV1-03	Left Rear Upright	1	1/1
4	S100-102-111-DV1-04	Front Crossbeam	1	1/1
5	S100-102-111-DV1-05	Rear Crossbeam	1	1/1
6	S100-102-111-DV1-06	Front Right Upright	1	1/1
7	S100-102-111-DV1-07	Right Side Panel	1	1/1
8	S100-102-111-DV1-08	Rear Right Upright	1	1/1
9	S100-102-111-DV1-09	Back Panel	2	1/1
10	S100-102-111-DV1-10	Top Panel	1	1/1
11	S100-102-111-DV1-11	Drawer Side	8	1/1
12	S100-102-111-DV1-12	Drawer Back	4	1/1
13	S100-102-111-DV1-13	Drawer Crossbar	4	1/1
14	S100-102-111-DV1-14	Drawer Front (White)	1	1/1
15	S100-102-111-DV1-15	Drawer Front (Ice)	1	1/1
16	S100-102-111-DV1-16	Drawer Front (Light Grey)	1	1/1
17	S100-102-111-DV1-17	Drawer Front (Dark Grey)	1	1/1
18	S100-102-111-DV1-18	Drawer Botom	4	1/1

FITTINGS LIST

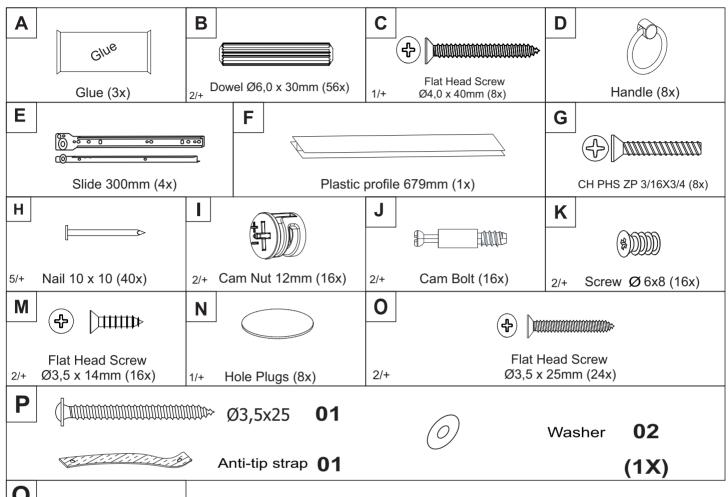




1/+





Flat Head Screw Ø3,5 x 10mm (6x)


TIPS FOR FITTINGS CAM-LOCKS

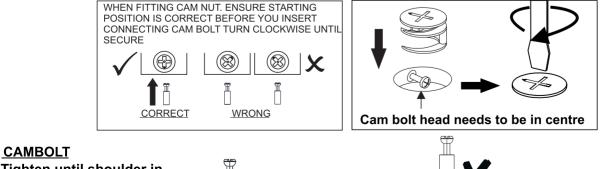


 
Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example beside)




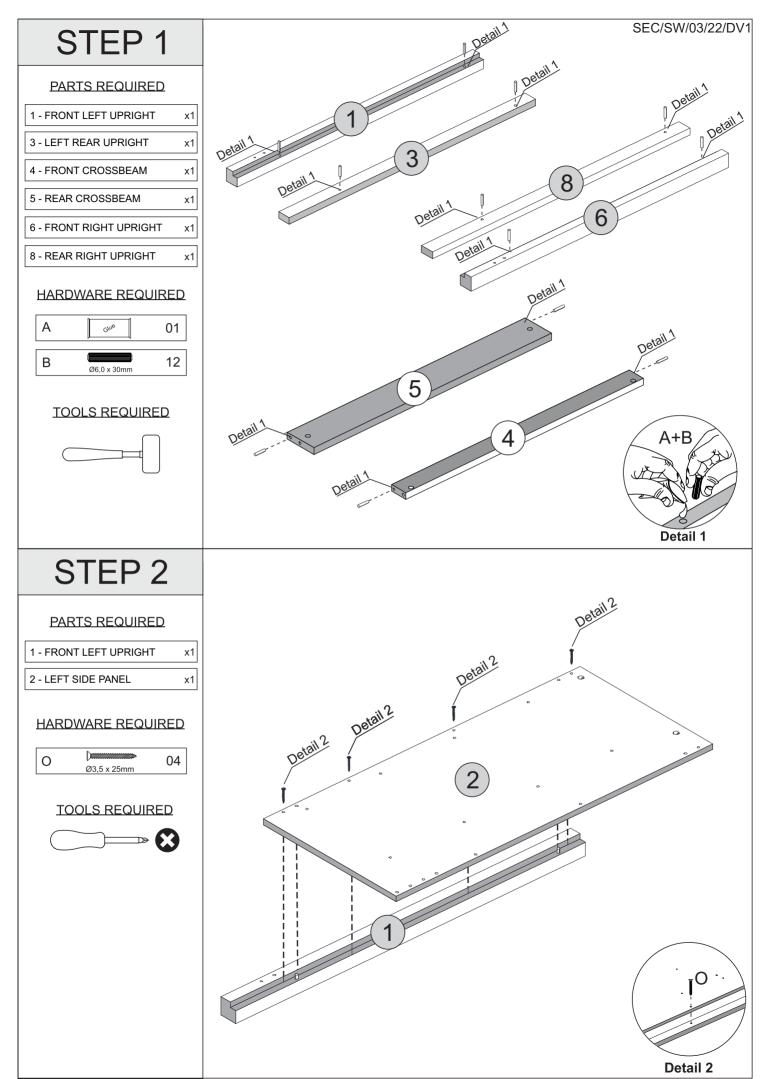


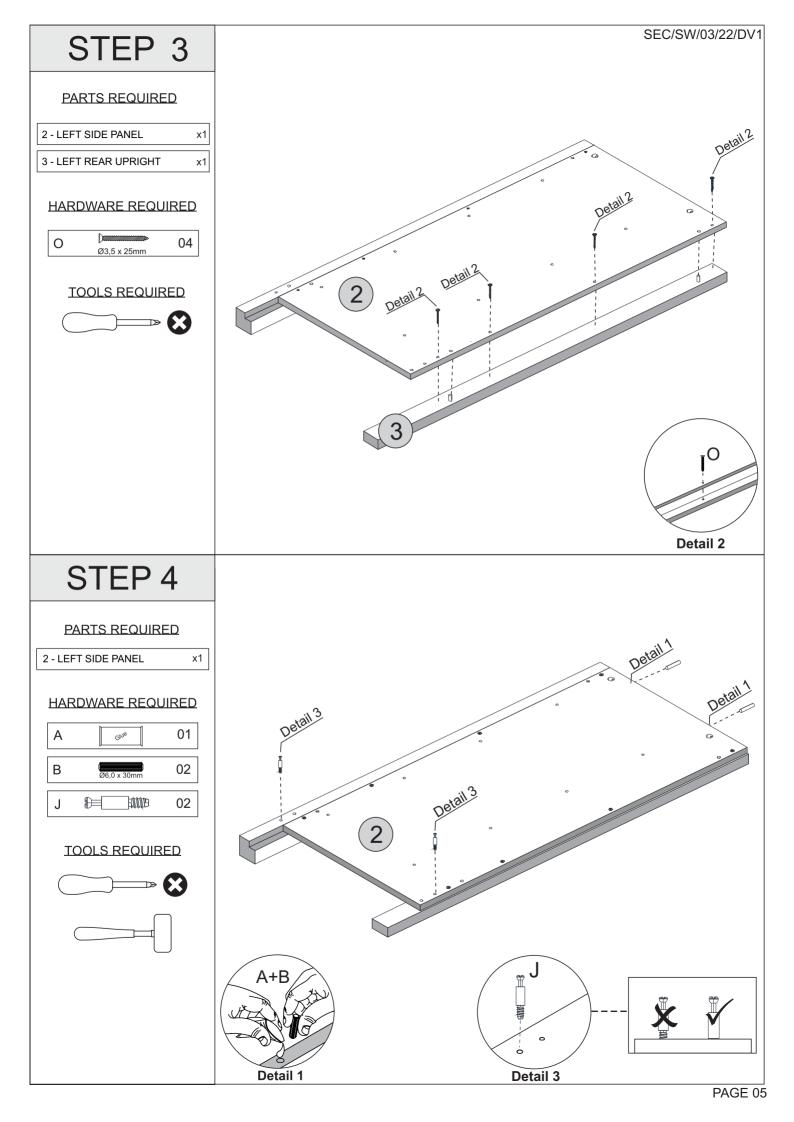


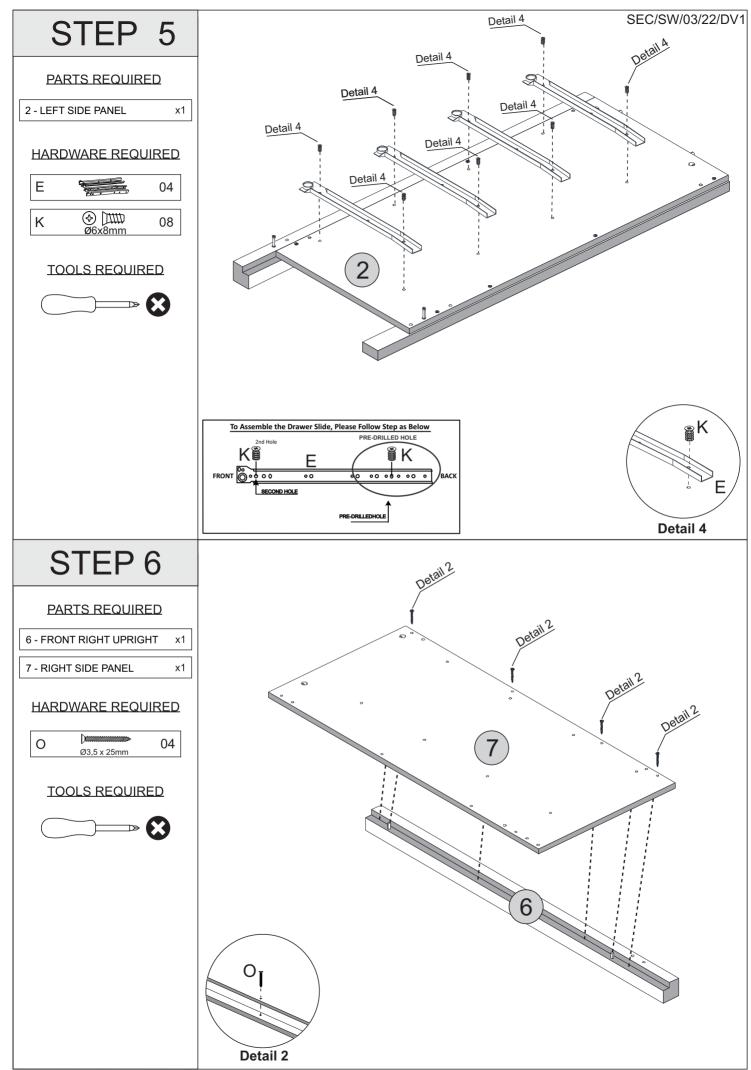


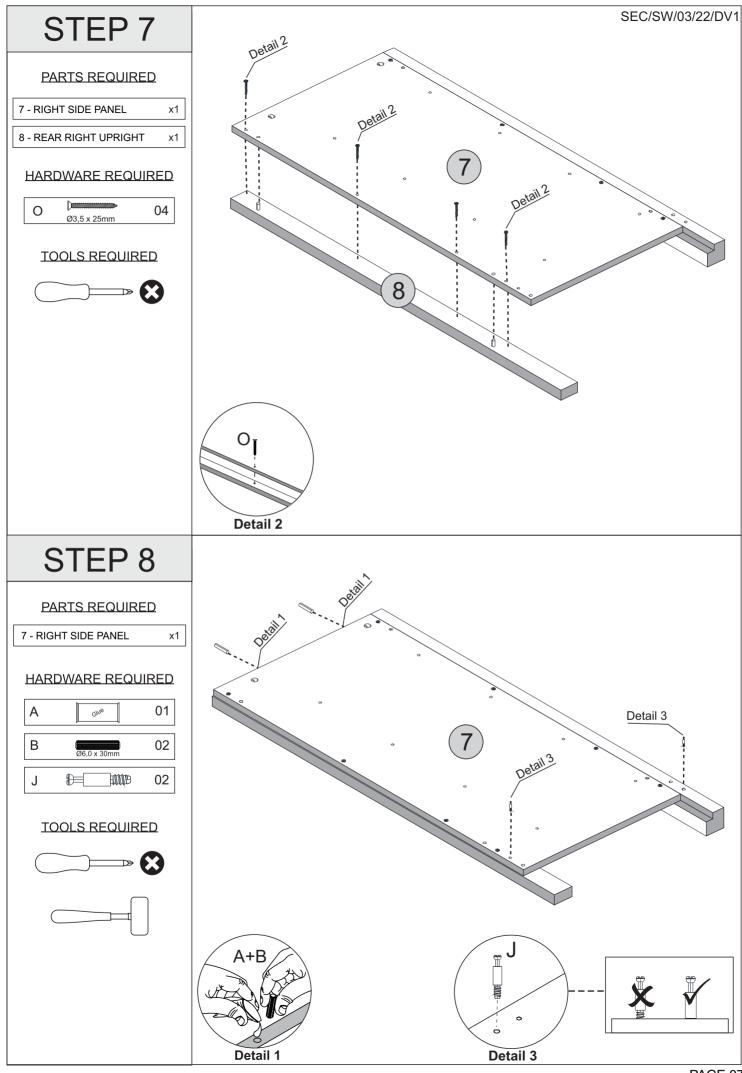


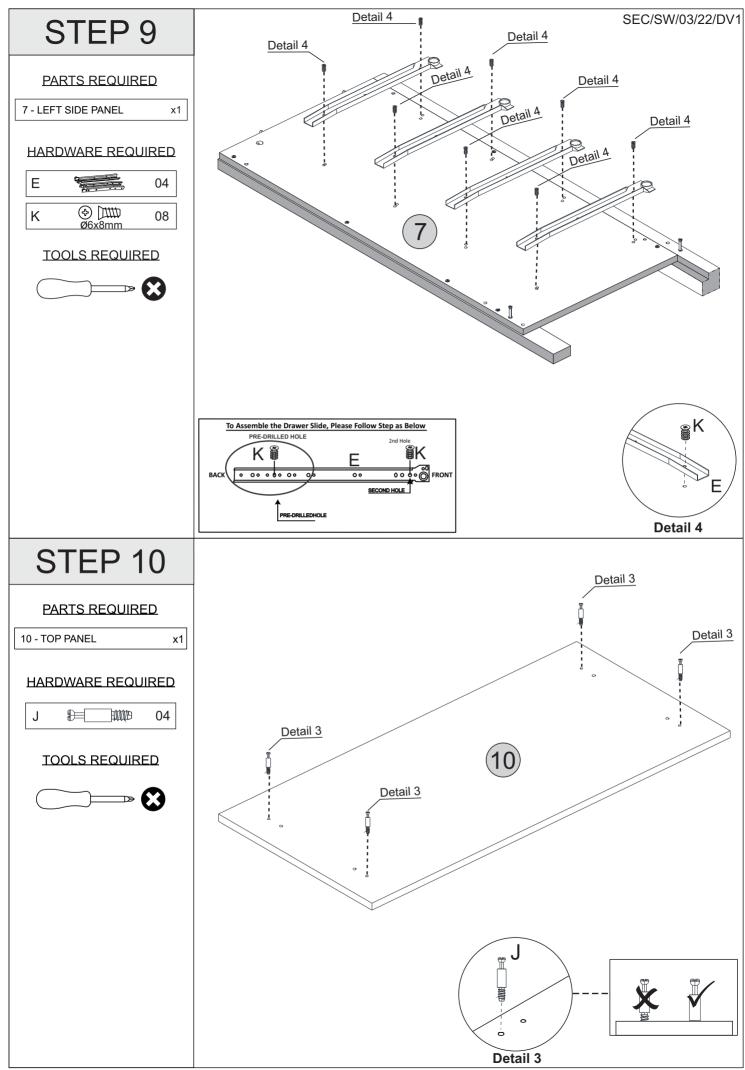


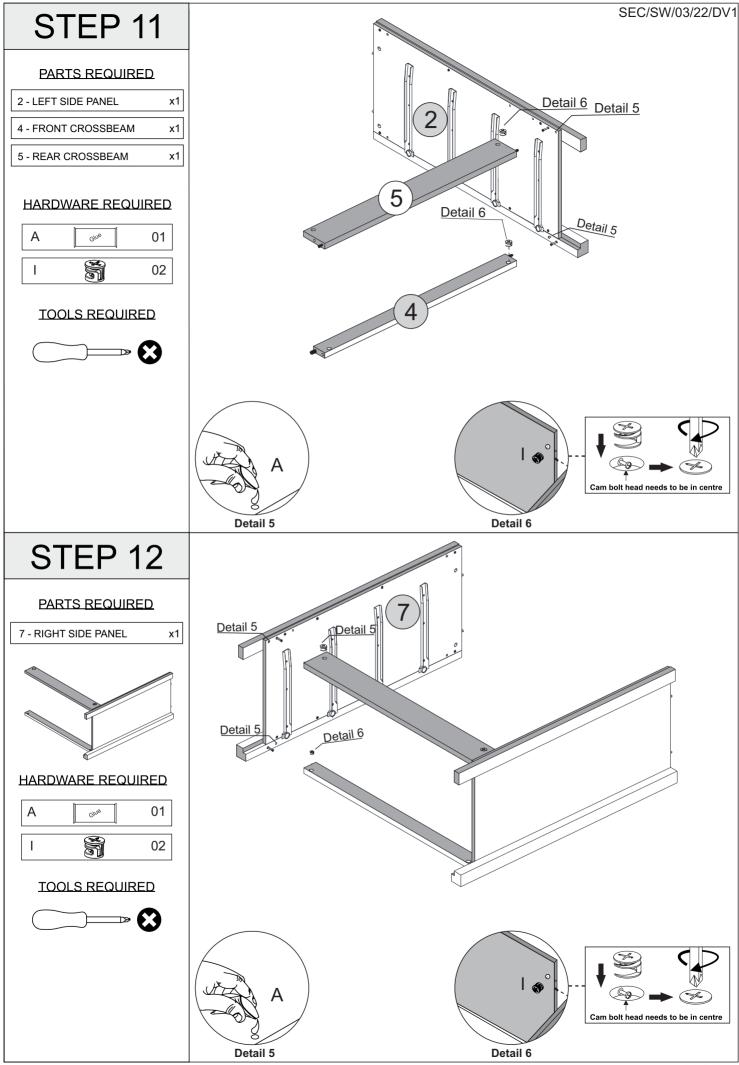

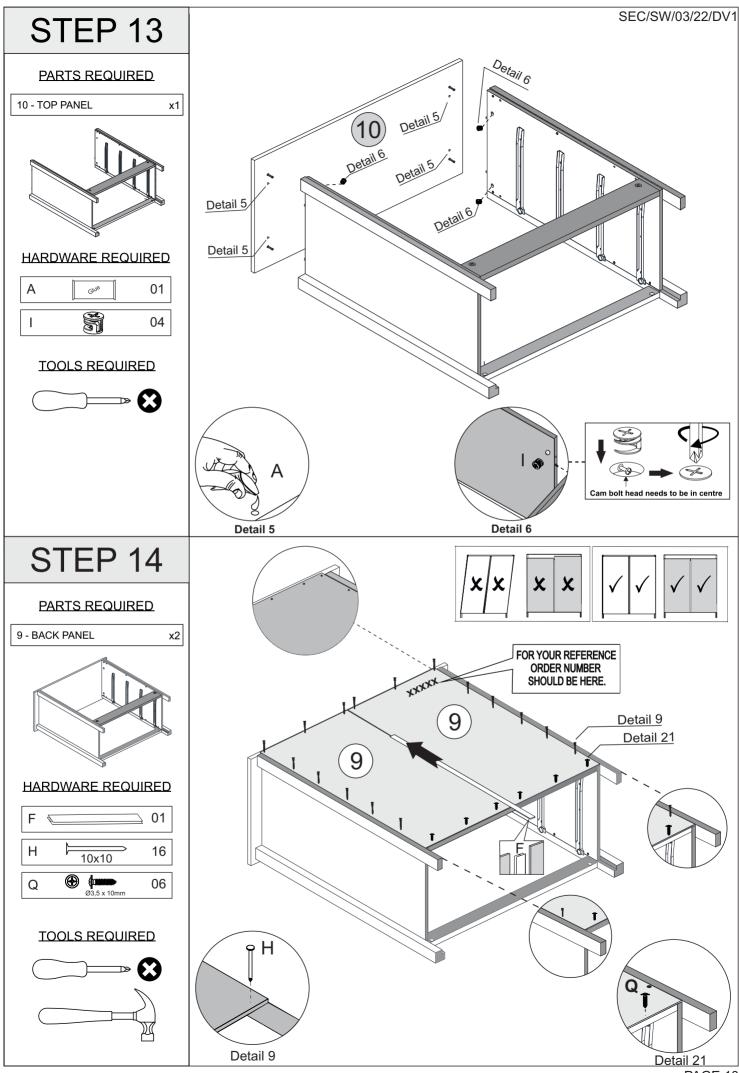

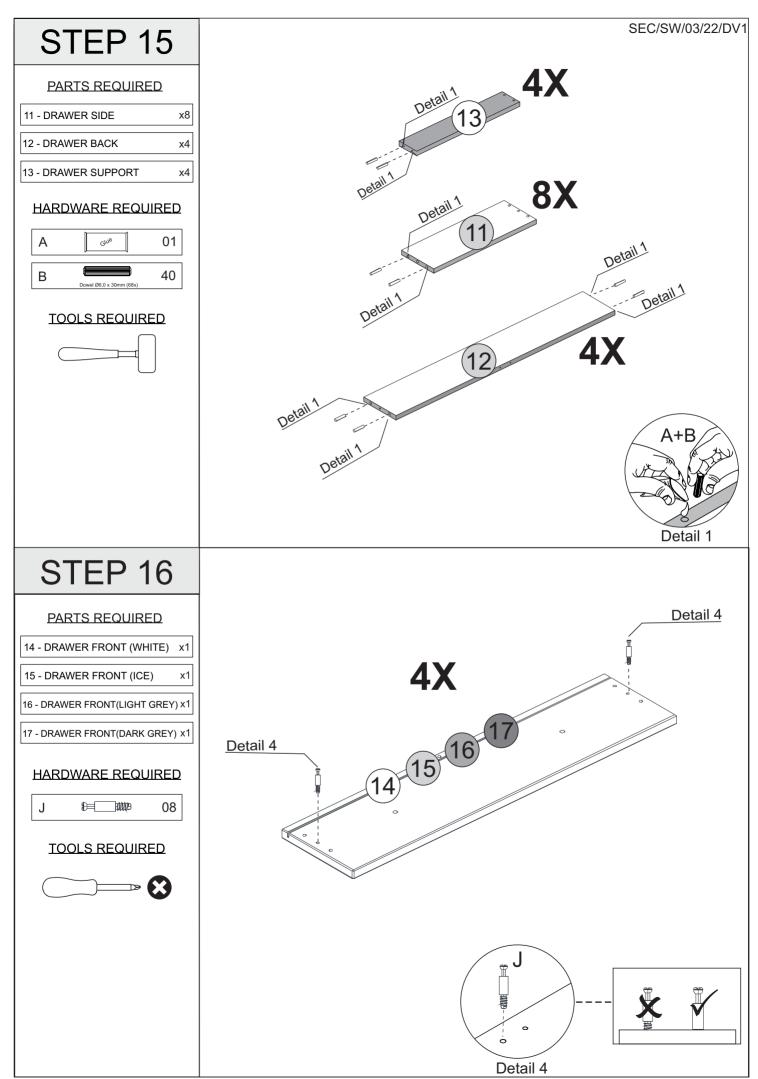


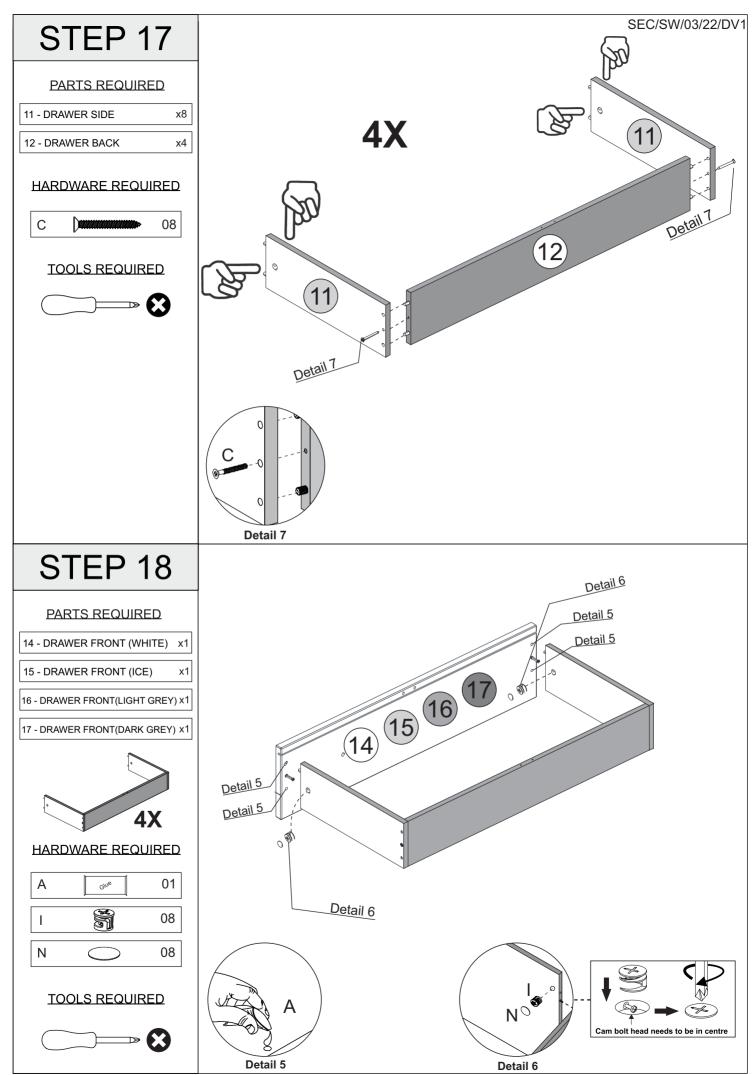

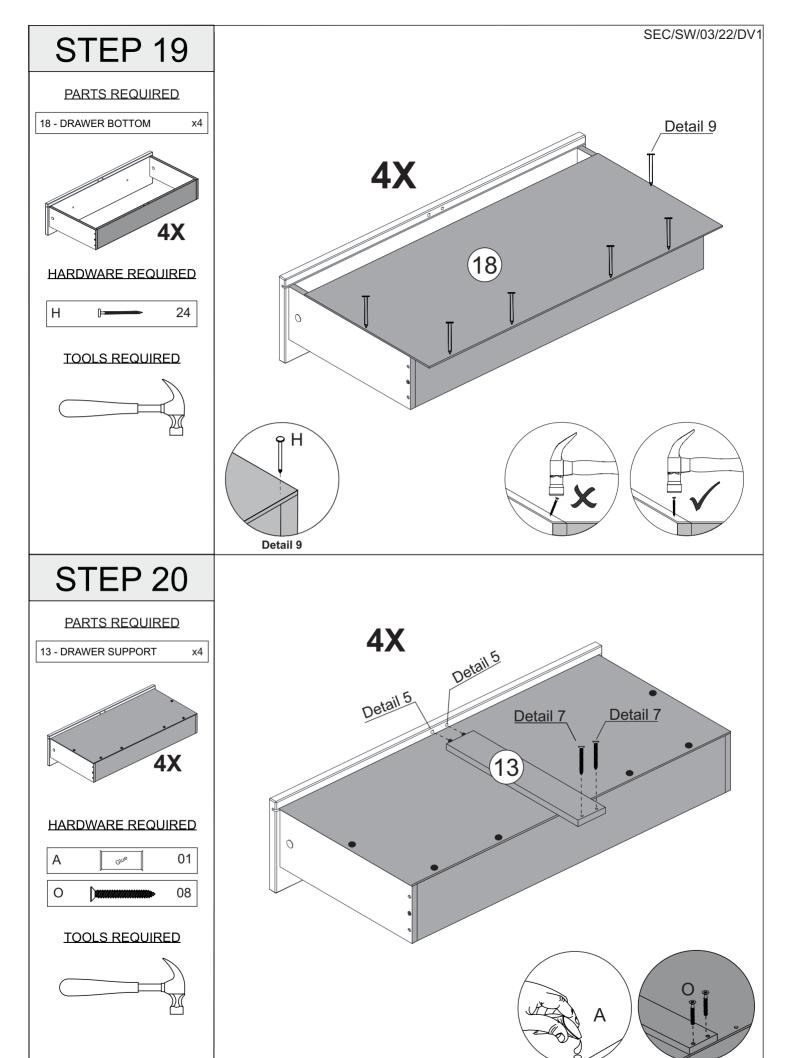


Detail 7

Detail 5

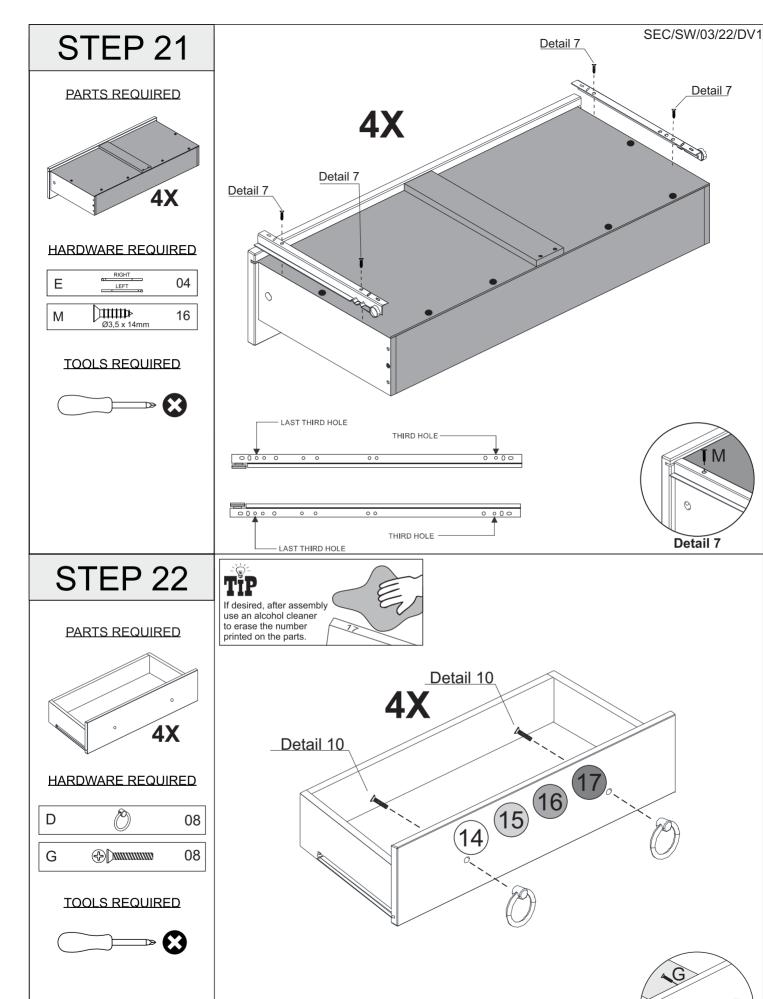


Detail 10



 




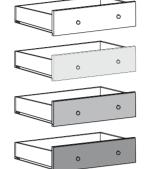

HARDWARE REQUIRED

TOOLS REQUIRED

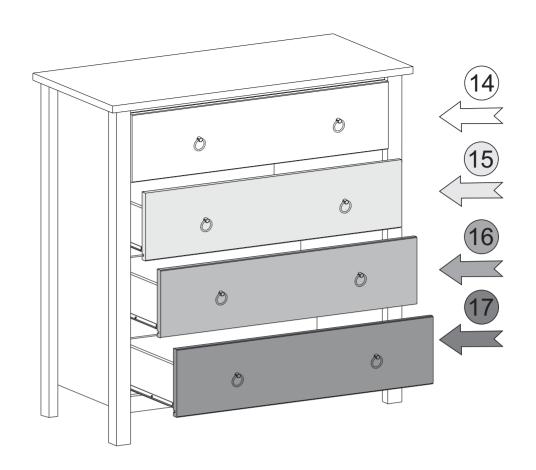

STEP 24

 
PARTS REQUIRED




HARDWARE REQUIRED



TOOLS REQUIRED



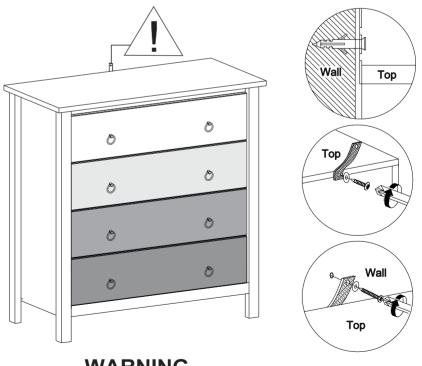

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.

Please make sure you use fixings suitable for the walls in your home.

SEC/SW/03/22/DV1