
ZURICH 2 DOOR TV UNIT ASSEMBLY INSTRUCTIONS

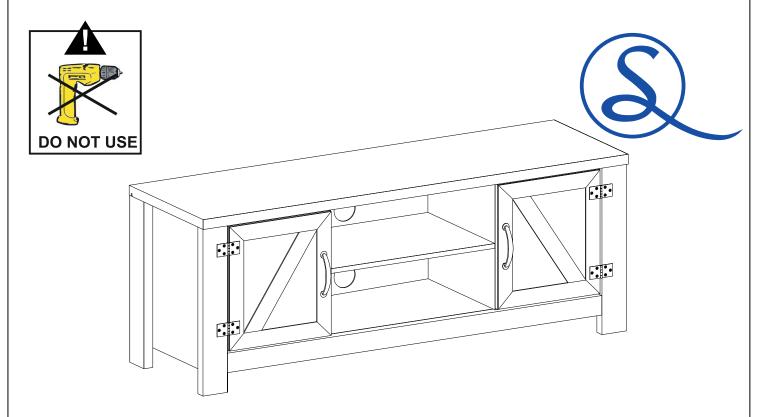


IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

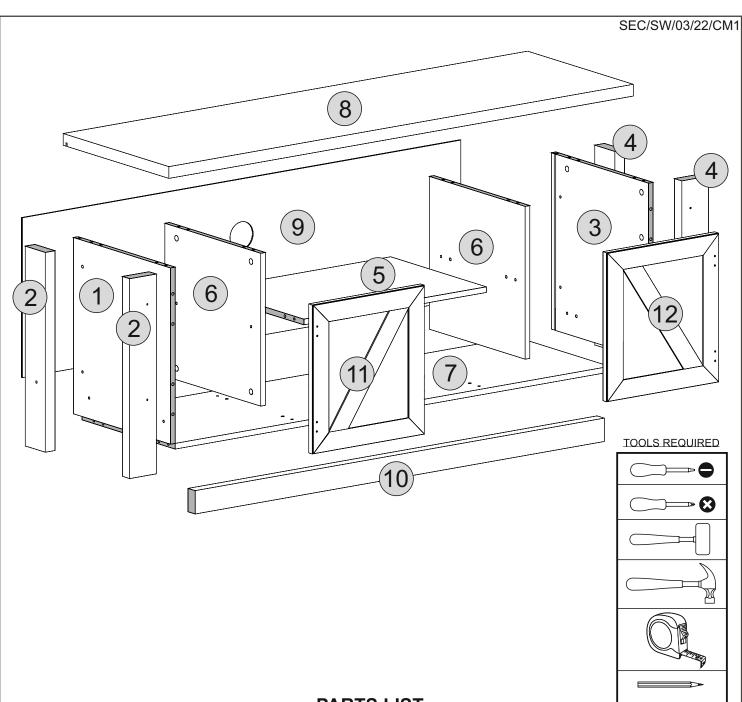


PARTS LIST


Please Note:


The below parts have all been stamped with the part number to help identify them during assembly

Part Number	Part Code	Part Description	Quantity	Carton
1	S300-305-046-CM1-01	Left Side Panel	1	1/1
2	S300-305-046-CM1-02	Left Leg	2	1/1
3	S300-305-046-CM1-03	Right Side Panel	1	1/1
4	S300-305-046-CM1-04	Right Leg	2	1/1
5	S300-305-046-CM1-05	Shelf	1	1/1
6	S300-305-046-CM1-06	Division Panel	2	1/1
7	S300-305-046-CM1-07	Base Panel	1	1/1
8	S300-305-046-CM1-08	Top Panel	1	1/1
9	S300-305-046-CM1-09	Back panel	1	1/1
10	S300-305-046-CM1-10	Front Crossbar	1	1/1
11	S300-305-046-CM1-11	Left Door	1	1/1
12	S300-305-046-CM1-12	Right Door	1	1/1

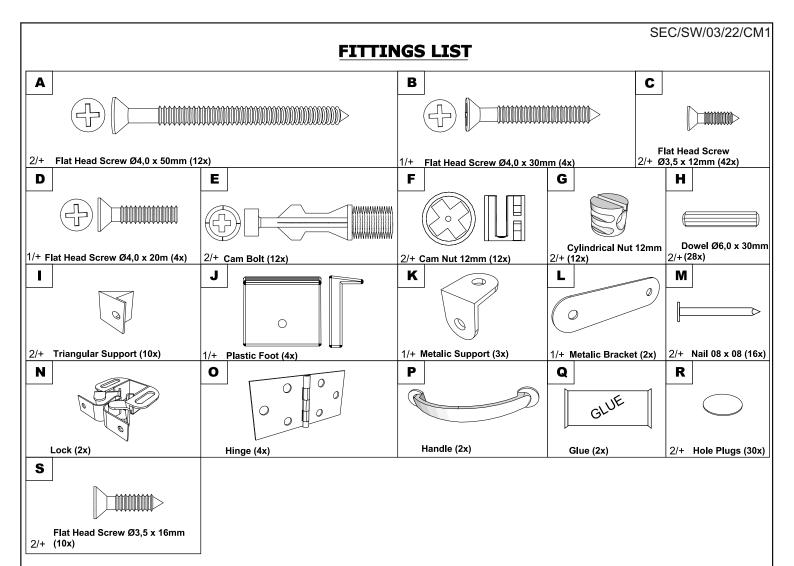


TIPS FOR FITINGS CAM-LOCKS

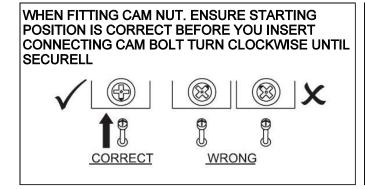

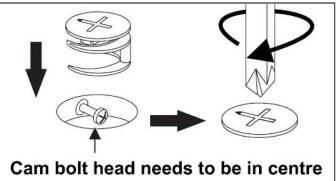

CAMBOLT


Tighten until shoulder in flush with panel. Do not overtighten or under tighten (see example beside)

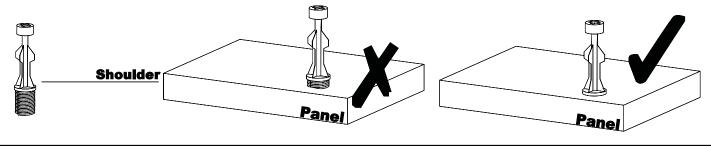





2 - LEFT LEG	x1
4 - RIGHT LEG	x1

 HARDWARE REQUIRED



TOOLS REQUIRED

 

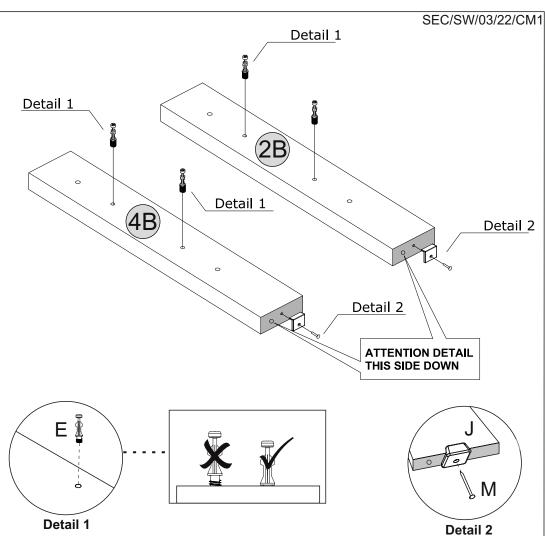


STEP 2


PARTS REQUIRED


2 - LEFT LEG	x1
4 - RIGHT LEG	x1

HARDWARE REQUIRED

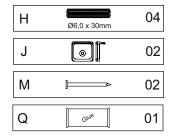





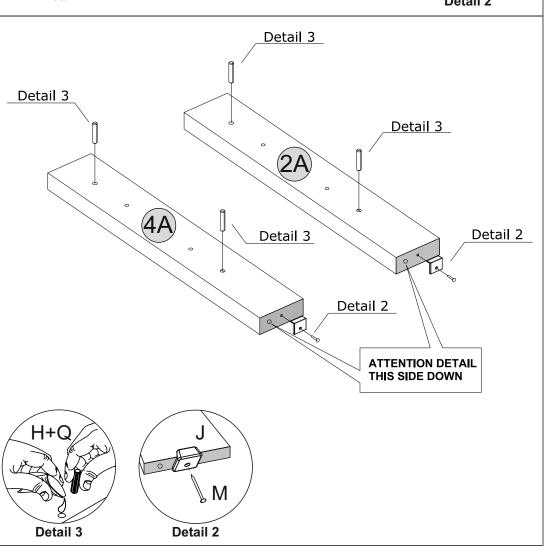


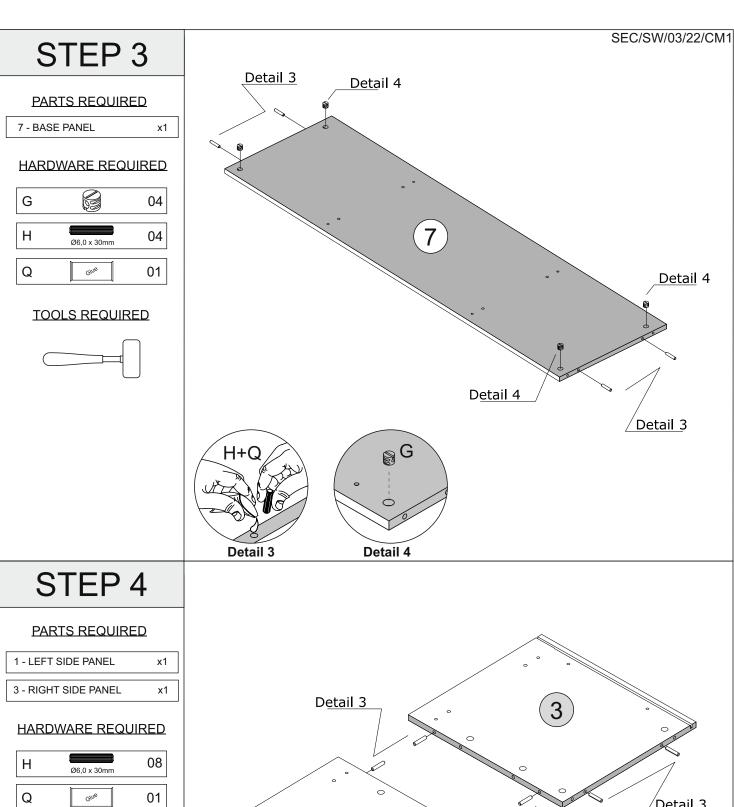


TOOLS REQUIRED

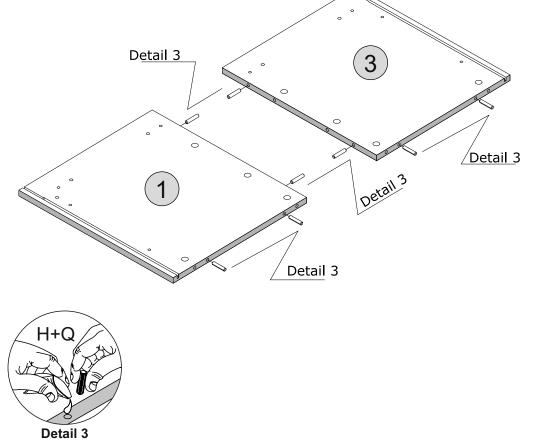

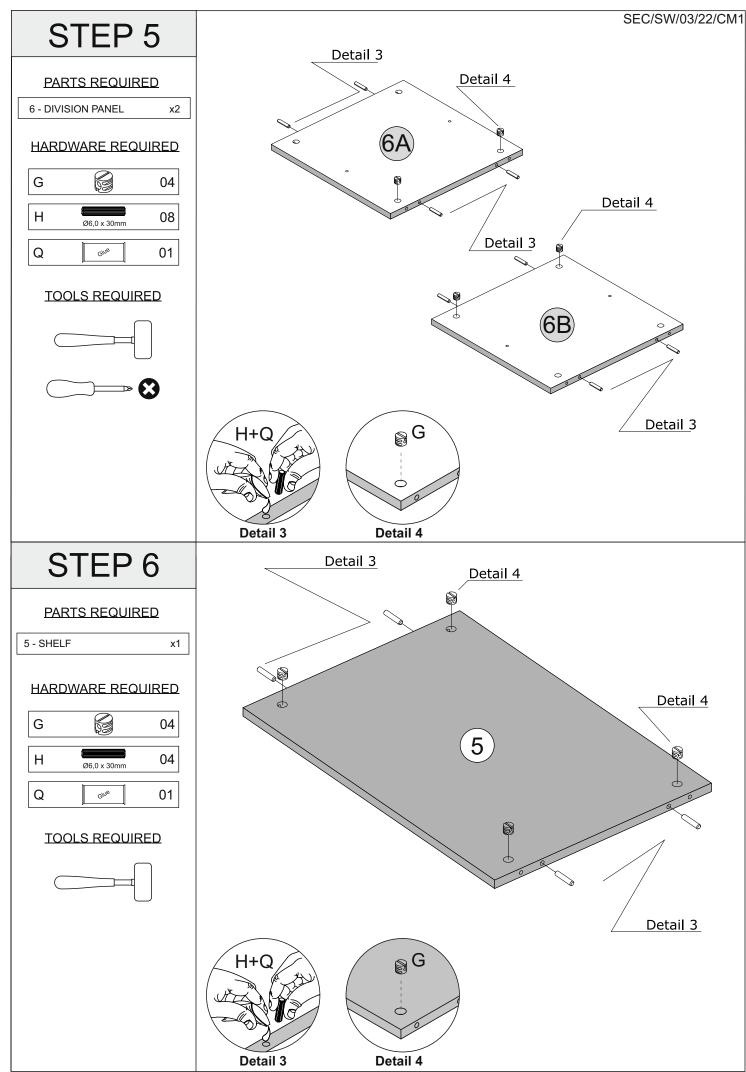

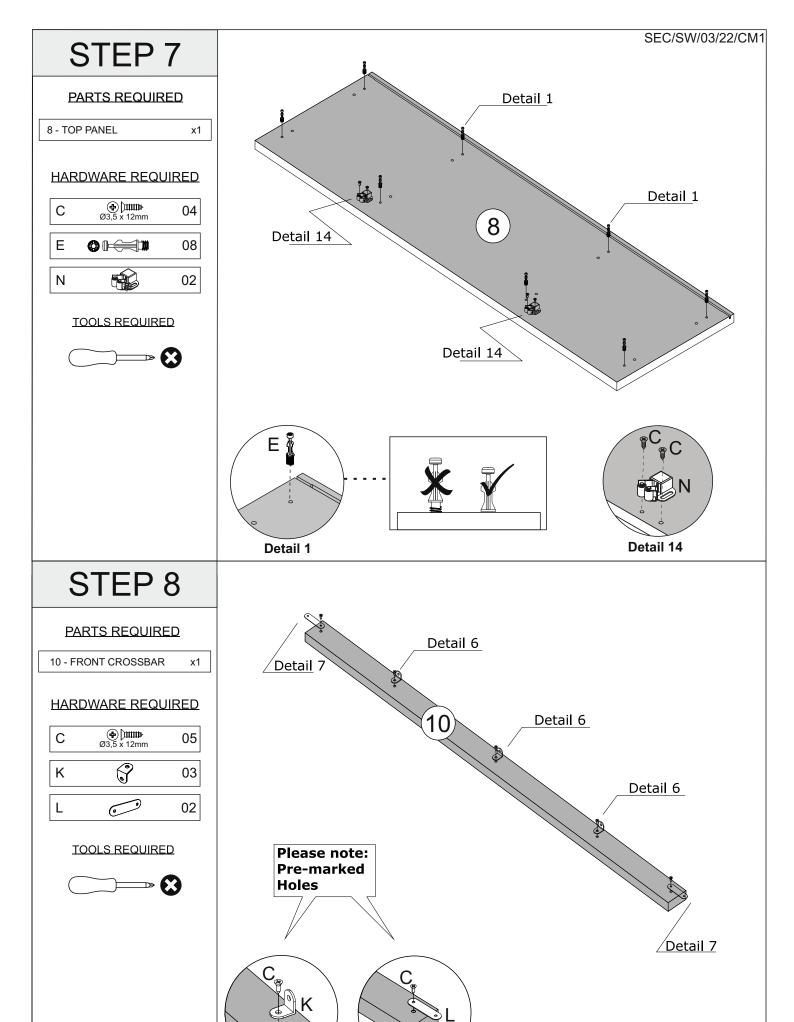

Detail 6

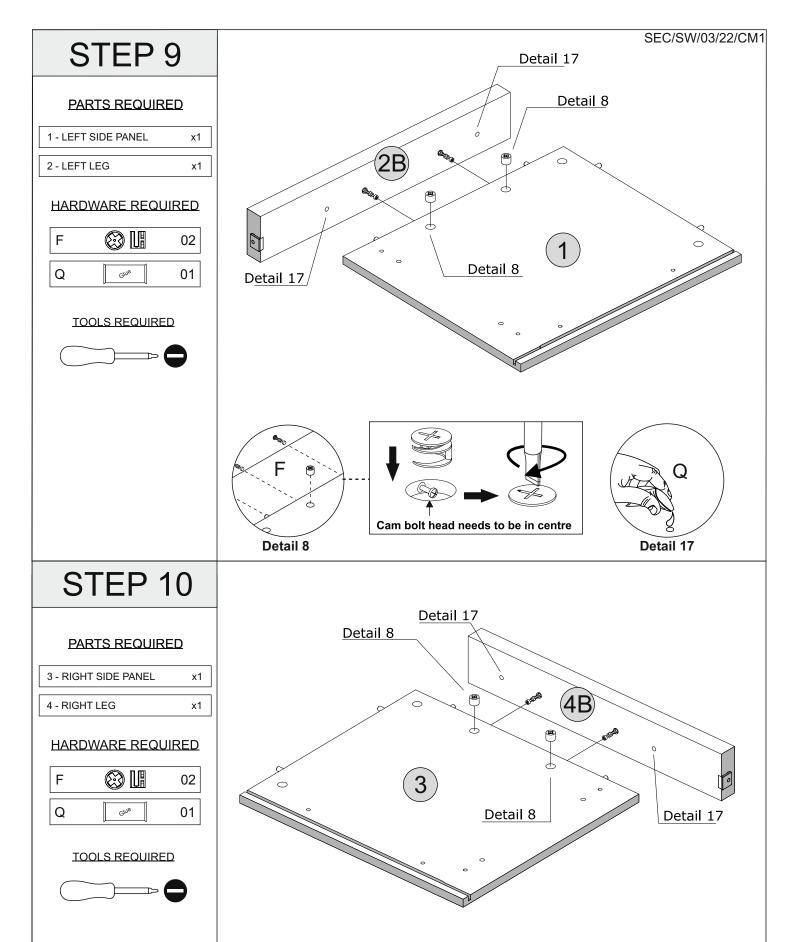

Cam bolt head needs to be in centre

Detail 8


PARTS REQUIRED

5 - SHELF x1 6 - DIVISION PANEL x2

HARDWARE REQUIRED

Α	⊕ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □	04
Q	Cline	01




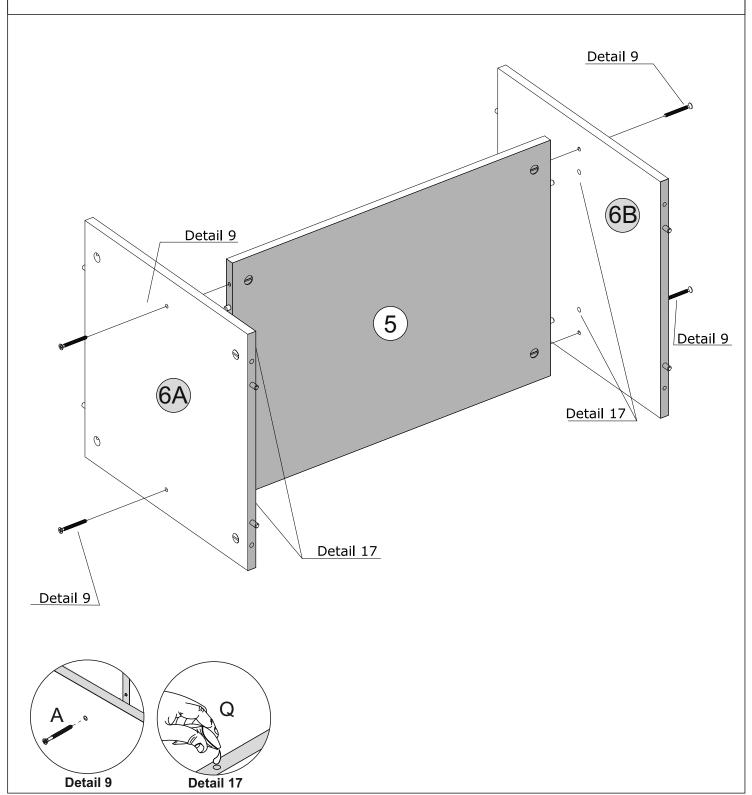

PARTS REQUIRED


HARDWARE REQUIRED




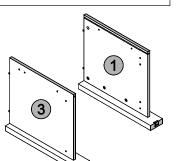

Α	⊕ ☐	04
Q	Gline	01



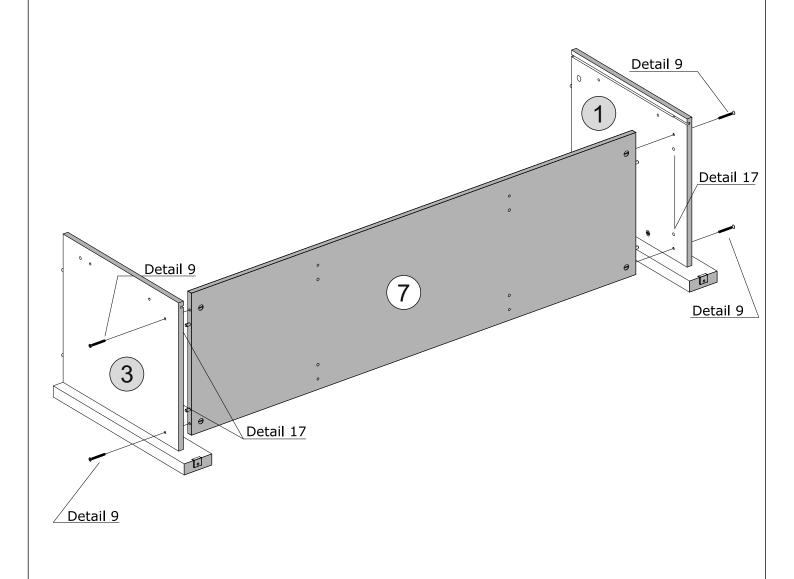

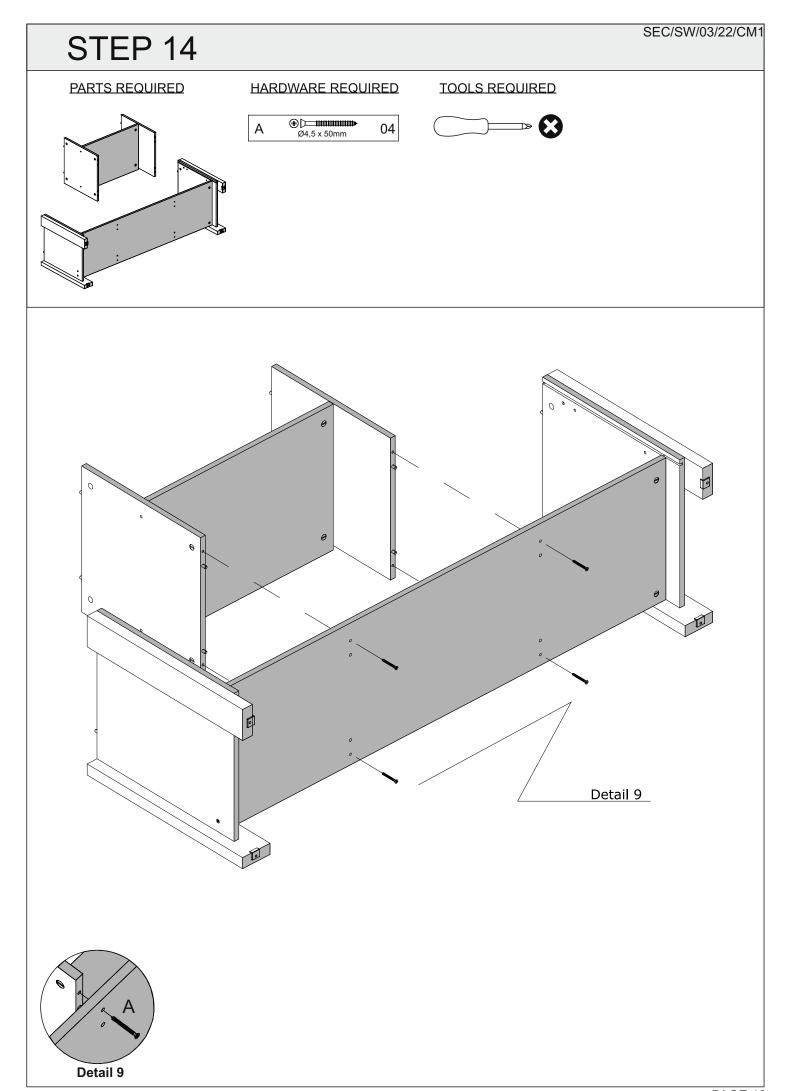



HARDWARE REQUIRED

 
TOOLS REQUIRED









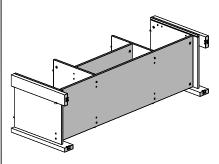

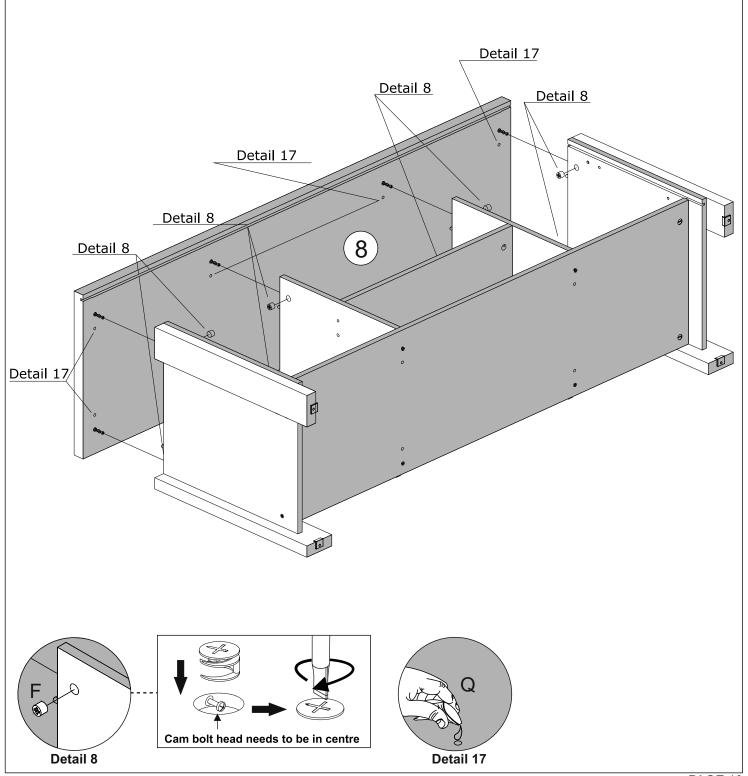


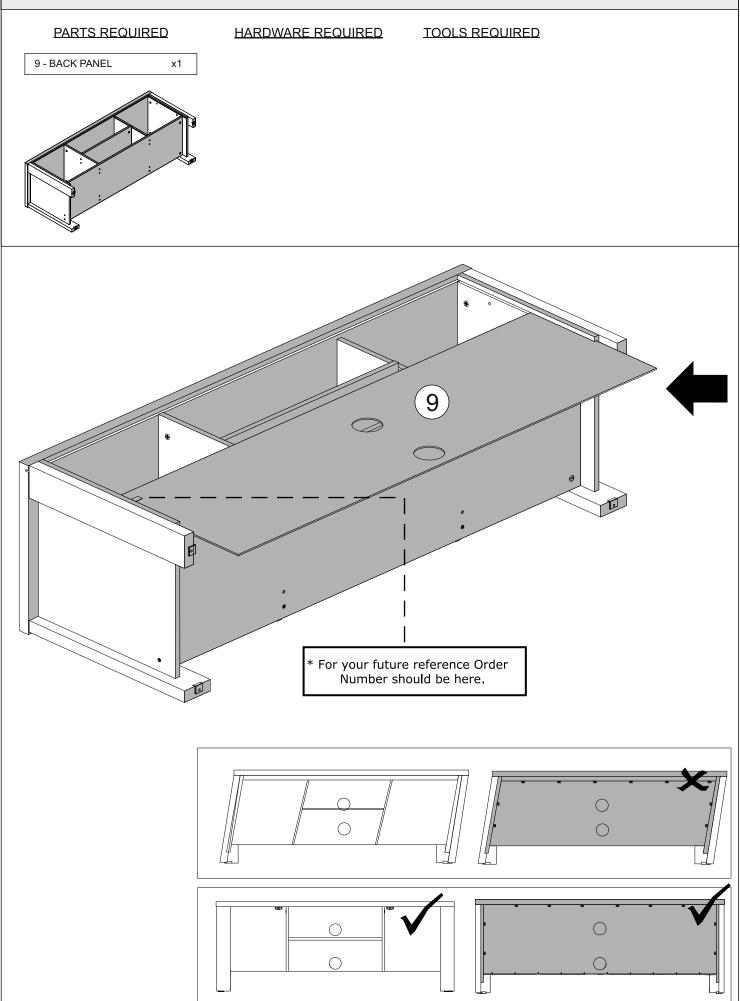


PARTS REQUIRED

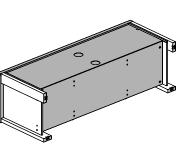


HARDWARE REQUIRED

 


TOOLS REQUIRED

 

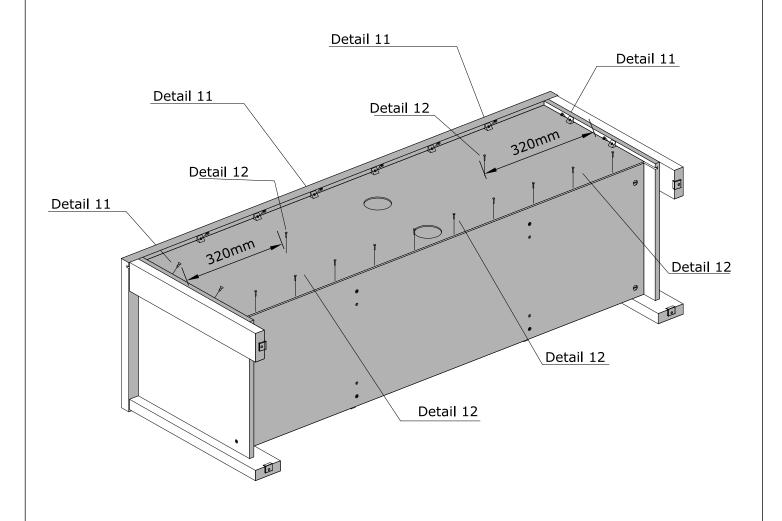



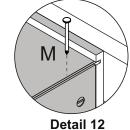


PARTS REQUIRED


HARDWARE REQUIRED

 TOOLS REQUIRED








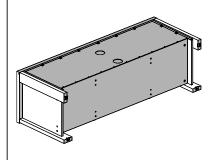

Detail 7

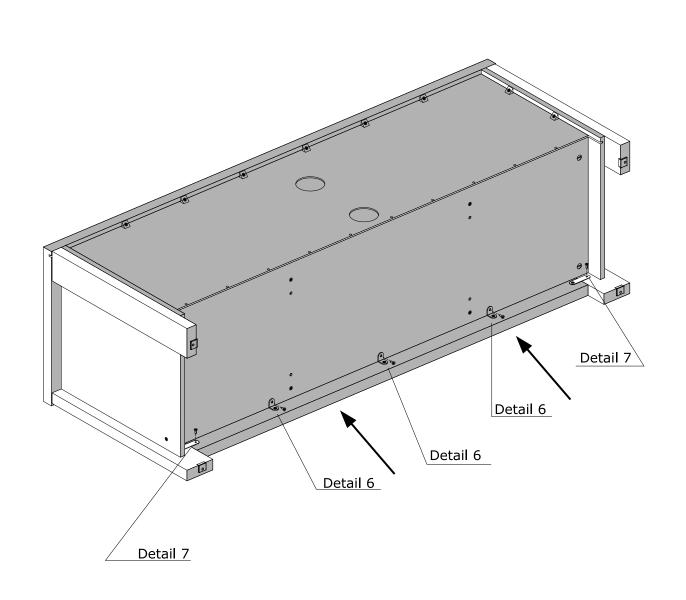



11 - LEFT DOOR	x1
12 - RIGHT DOOR	x1


HARDWARE REQUIRED





TOOLS REQUIRED



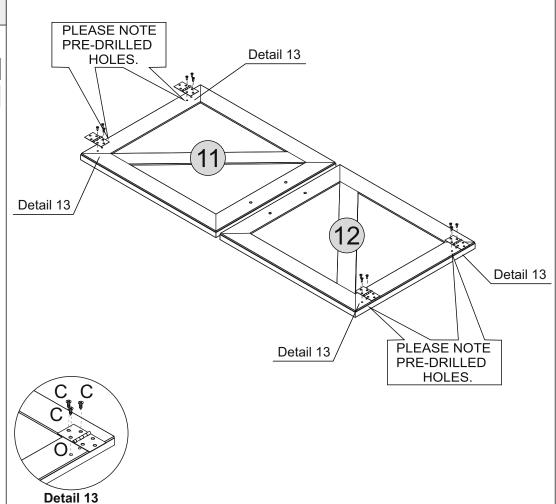

STEP 20

PARTS REQUIRED

11 - LEFT DOOR	x1
12 - RIGHT DOOR	x1


HARDWARE REQUIRED

C Ø3,5 x 12mm	04
---------------	----



TOOLS REQUIRED




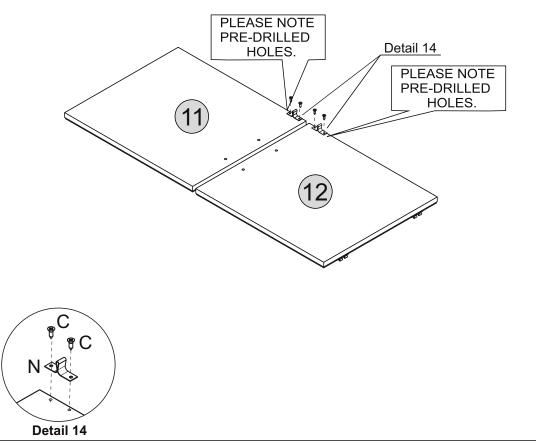

SEC/SW/03/22/CM1



 11 - LEFT DOOR x1 12 - RIGHT DOOR x1




HARDWARE REQUIRED




TOOLS REQUIRED



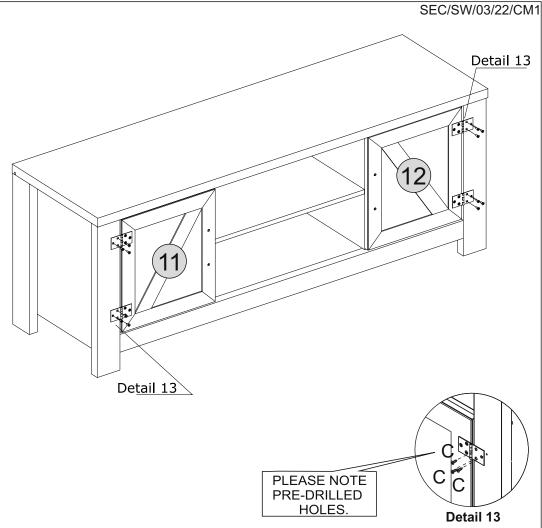

STEP 22

PARTS REQUIRED

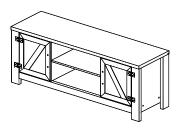

HARDWARE REQUIRED

D	Ø4,0 x 16 mm	04
Р		02
R		30



