

IMPORTANT PLEASE FOLLOW !

After unpacking the product, keep the original packaging in case you need to return it. Before starting assembly, check that all parts and hardware are included and in good condition. If anything is missing or damaged, contact the supplier or retailer. **Do not use** non-original parts, modify the item or use power tools as this will void the warranty. Study the instructions thoroughly and follow each step carefully before proceeding to the next.

WHITE

NEPTUNE TRIPLE SLEEPER

ASSEMBLY INSTRUCTIONS

58198




TOP BUNK
MAX WEIGHT



BOTTOM BUNK
MAX WEIGHT



MAX LADDER
WEIGHT

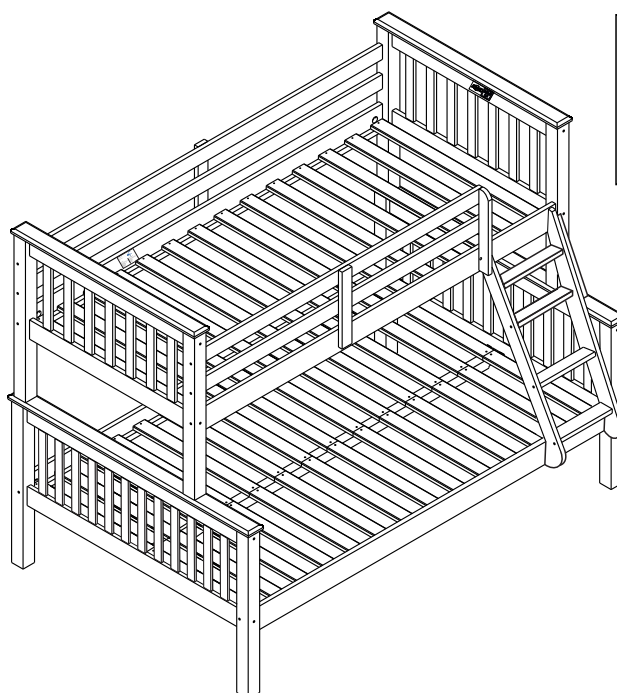

**IMPORTANT
READ CAREFULLY
RETAIN FOR FUTURE REFERENCE**

Safety

- Keep children away from the area during assembly for safety.
- Use a blanket or sheet on the floor during assembly to protect both the product and your flooring.
- Follow all recommended weight limits as shown on the assembly instructions.

Care

- Avoid dragging or pushing the product, as this may damage the joints and weaken the structure.
- Avoid prolonged exposure to direct sunlight, which can cause fading, discolouration, or drying of natural wood.
- Please avoid attaching anything sticky to the item, such as Sellotape, stickers, or similar materials, as this can damage the finish.
- Clean spills immediately, blotting rather than rubbing to prevent spreading and surface damage.

Maintenance

- Use only a damp cloth followed by a dry cloth for routine cleaning - avoid detergents, solvents and chemical cleaner.

IMPORTANT - READ CAREFULLY - RETAIN FOR FUTURE REFERENCE

WARNING “The upper bed is not suitable for children under six years due to the risk of injury from falls”;

WARNING “Bunk beds/High beds can present a serious risk of injury from strangulation if not used correctly. Never attach or hang items to any part of the bunk bed / high bed that are not designed to be used with the bed, for example, but not limited to ropes, strings, cords, hooks, belts and bags”;

WARNING “Children can become trapped between the bed and the wall, a roof pitch, the ceiling, adjoining pieces of furniture (e.g. cupboards) and the like. To avoid risk of serious injury the distance between the top safety barrier and the adjoining structure must not exceed 75mm or must be more than 230mm”;

WARNING “Do not use this bunk bed / high bed if any structural part is broken or missing”;

WARNING “Always ensure the platform and the ladder / stairs are permanently attached to this bunk bed before use”

Always follow the manufacturers instructions;

The recommended mattress size for this High Bed is 1900mm x 915mm x 150mm.

The maximum thickness of the mattress 160mm. This will be marked clearly on the bed and shall not be exceeded.

The room in which the bed is positioned in must be well ventilated to keep humidity low and prevent mould in and around the bed.

Periodically tighten all fittings to ensure the furniture remains stable and secure.

Positioning and Means of access;

- The means of access must be positioned on the long side or the short end of the bunk bed, exactly as designed by the manufacturer.
- The ladder or steps must provide safe, unobstructed access to the upper bunk—no furniture, doors, or windows directly in front of it.
- Access must allow the user to grip securely with both hands while climbing.
- Once installed, the means of access must not move, twist, or detach when climbed.
- The ladder or steps must be able to support the maximum load of 100kg without deformation.
- Do not use the bunk bed if the ladder or steps are loose or damaged.
- Never modify the means of access or replace it with a non-approved alternative.

This High Bed is manufactured to conform to EN 747-1:2024



Manufacturer:

Seconique Furniture LTD
<https://seconique.co.uk/contact-us>
 Boulton House,
 Owens Trading Estate
 Wobaston Road
 Wolverhampton
 West Midlands
 WV9 5EY

EU Responsible Person:

Seconique Furniture (NI) Limited
<https://wholesalebeds.net/contact-us>
 Lisdoart Mill
 36 Lisdoart Road
 Ballygawley
 Co. Tyrone
 BT70 2NG

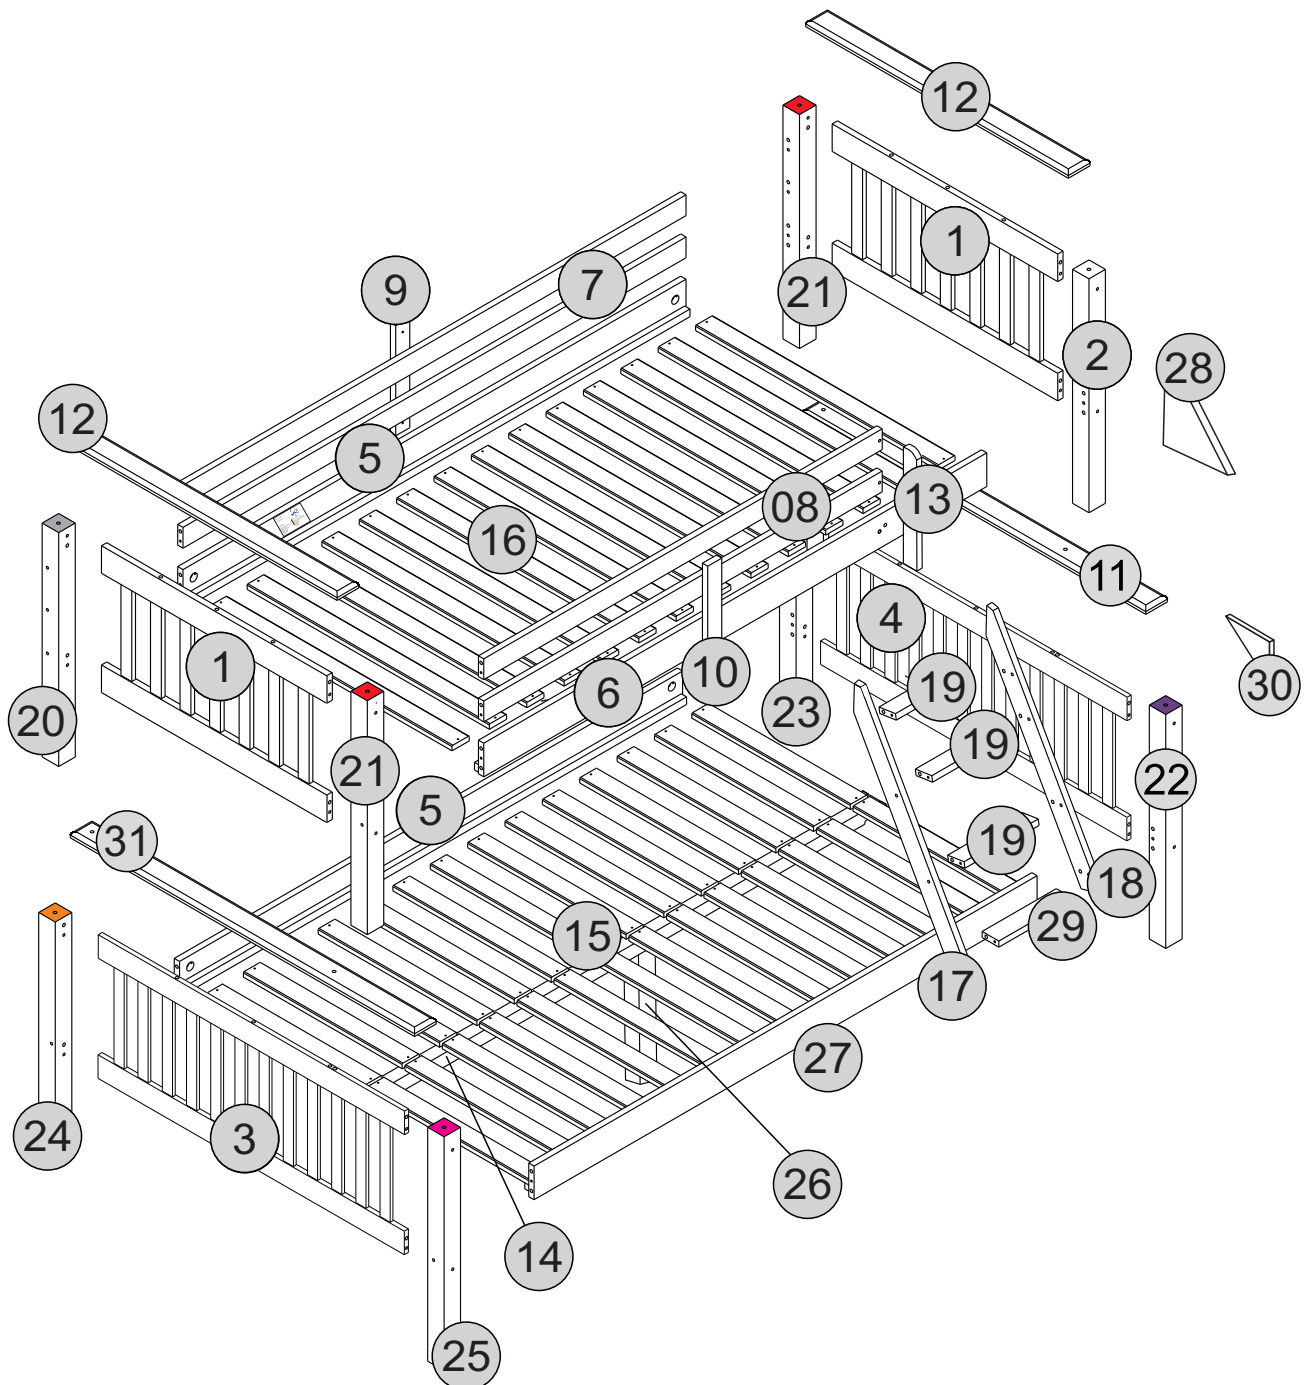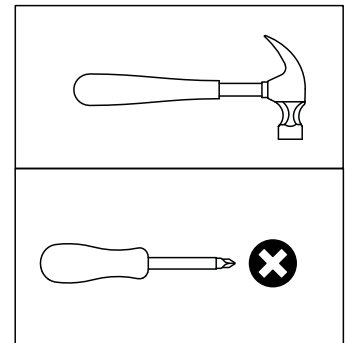

TOOLS REQUIRED

All Shaded areas in the diagrams show surfaces that are unfinished.



*Use of power tools to assemble this product will invalidate any claim and damage this product making it unsafe!!!
*Please assemble on a clean soft surface to avoid damage.



*Please check contents and read the instructions before commencing assembly.
*Assemble this product following the enclosed instructions carefully.
*Please take care to avoid damaging panels during assembly.

Carton 1 of 3

Part Number	Part Code	Part Description	Quantity	Carton
5	S200-205-029-DC1-05	Side Rail	2	1/3
6	S200-205-029-DC1-06	Top Front Side Rail	1	1/3
7	S200-205-029-DC1-07	Long Safety Rail	2	1/3
8	S200-205-029-DC1-08	Short Safety Rail	2	1/3
11	S200-205-029-DC1-11	Bottom Headboard Plinth	1	1/3
13	S200-205-029-DC1-13	Ladder Support Brace	1	1/3
14	S200-205-029-DC1-14	Centre Support Rail	1	1/3
26	S200-205-029-DC1-26	Centre Support Leg	1	1/3
27	S200-205-029-DC1-27	Lower Front Side Rail	1	1/3
31	S200-205-029-DC1-31	Bottom Headboard Plinth	1	1/3













Carton 2 of 3

Part Number	Part Code	Part Description	Quantity	Carton
3	S200-205-029-DC1-03	Lower Left Headboard Panel	1	2/3
4	S200-205-029-DC1-04	Lower Right Headboard Panel	1	2/3
9	S200-205-029-DC1-09	Back Support Brace	1	2/3
10	S200-205-029-DC1-10	Front Support Brace	1	2/3
12	S200-205-029-DC1-12	Top Headboard Plinth	2	2/3
15	S200-205-029-DC1-15	4'6 Slats	28	2/3
17	S200-205-029-DC1-17	Left Ladder Section	1	2/3
18	S200-205-029-DC1-18	Right Ladder Section	1	2/3
19	S200-205-029-DC1-19	Ladder Step	3	2/3
28	S200-205-029-DC1-28	Stairs Closure	1	2/3
29	S200-205-029-DC1-29	Ladder Step Bottom	1	2/3
30	S200-205-029-DC1-30	Support Panel	1	2/3

Carton 3 of 3

Part Number	Part Code	Part Description	Quantity	Carton
1	S200-205-029-DC1-01	Upper Headboard Panel	2	3/3
2	S200-205-029-DC1-02	Upper Right Headboard Post (Natural)	1	3/3
16	S200-205-029-DC1-16	3' Slats	14	3/3
20	S200-205-029-DC1-20	Upper Left Back Headboard Post (Grey)	1	3/3
21	S200-205-029-DC1-21	Upper Right/Left Headboard Post (Red)	2	3/3
22	S200-205-029-DC1-22	Lower Right Headboard Post (Purple)	1	3/3
23	S200-205-029-DC1-23	Lower Left Headboard Post (Brown)	1	3/3
24	S200-205-029-DC1-24	Lower Left Headboard Post (Orange)	1	3/3
25	S200-205-029-DC1-25	Lower Right Headboard Post (Pink)	1	3/3

FITTINGS

No.	Part Name		Qty	Carton
A	1/4 x 90mm Screw		08	3/3
B	1/4 nut	1/+  1/4	08	3/3
C	7.0 x 50mm Screw		07	3/3
D	3,5 x 35mm Screw	2/+ 	84	3/3
E	Allen Key		01	3/3
F	1/4 x 60mm Screw	 Ø1/4 x 60mm	02	3/3
G	1/4 nut	 1/4"	02	3/3
H	8.0 x 50mm Dowel		56	3/3
I	3,5 x 14mm Screw	2/+ 	10	3/3
J	7.0 x 100mm Screw		22	3/3
K	Glue	 GLUE	03	3/3
L	10.0 x 100mm Dowel	1/+ 	04	3/3
M	Spacer (WOODEN)		02	3/3
N	7.0 x 90mm Screw		01	3/3
O	4.0 x 30mm Screw	2/+ 	30	3/3
P	Pole Support		02	3/3
Q	10.0 x 50mm Dowel	1/+  Ø10 x 50mm	08	3/3

STEP 1

PARTS REQUIRED



3 - LOWER LEFT HEADBOARD PANEL x1

4 - LOWER RIGHT HEADBOARD PANEL x1

HARDWARE REQUIRED


H  14
Ø8 x 50mmK  01
GLUE

TOOLS REQUIRED

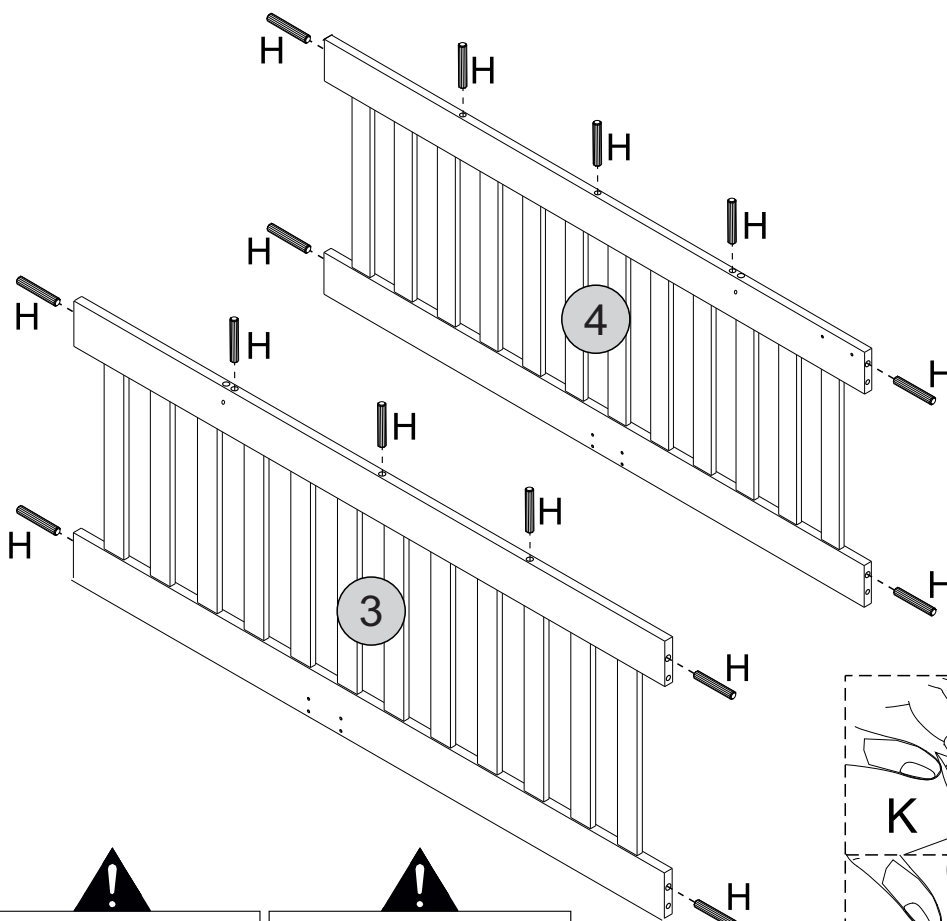

! Please assemble on a clean soft surface to avoid damage.

! Glue must be added to the dowel holes on part 3 and 4.

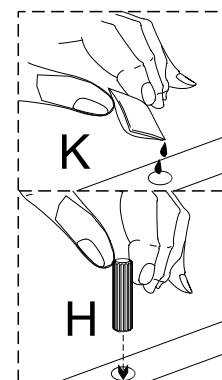

STEP 2



PARTS REQUIRED

3 - LOWER LEFT HEADBOARD PANEL x1




24 - LOWER LEFT HEADBOARD POST (ORANGE) x1

25 - LOWER RIGHT HEADBOARD POST (PINK) x1

HARDWARE REQUIRED

H  01
Ø8 x 50mmJ  04
Ø7 x 100mmK  01
GLUE

TOOLS REQUIRED

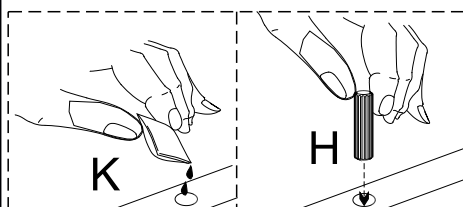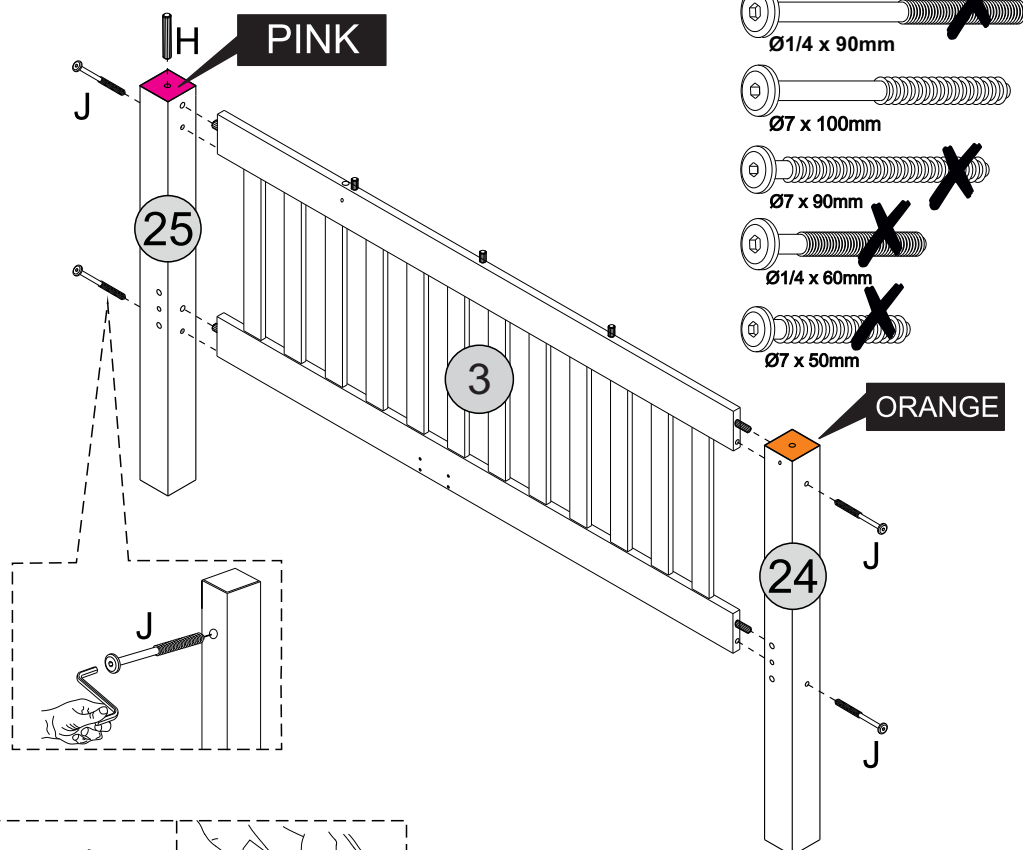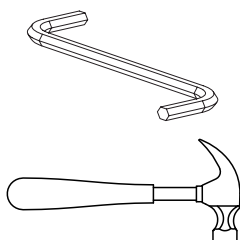

! Please assemble on a clean soft surface to avoid damage.

! Glue must be added to the dowel holes on part 24 and 25.

STEP 3



PARTS REQUIRED

4- LOWER RIGHT HEADBOARD PANEL x1



22- LOWER RIGHT HEADBOARD POST(PURPLE)x1

23- LOWER LEFT HEADBOARD POST (BROWN) x1

HARDWARE REQUIRED

H  01
Ø6 x 50mmJ  04
Ø7 x 100mmK  01
GLUE

TOOLS REQUIRED

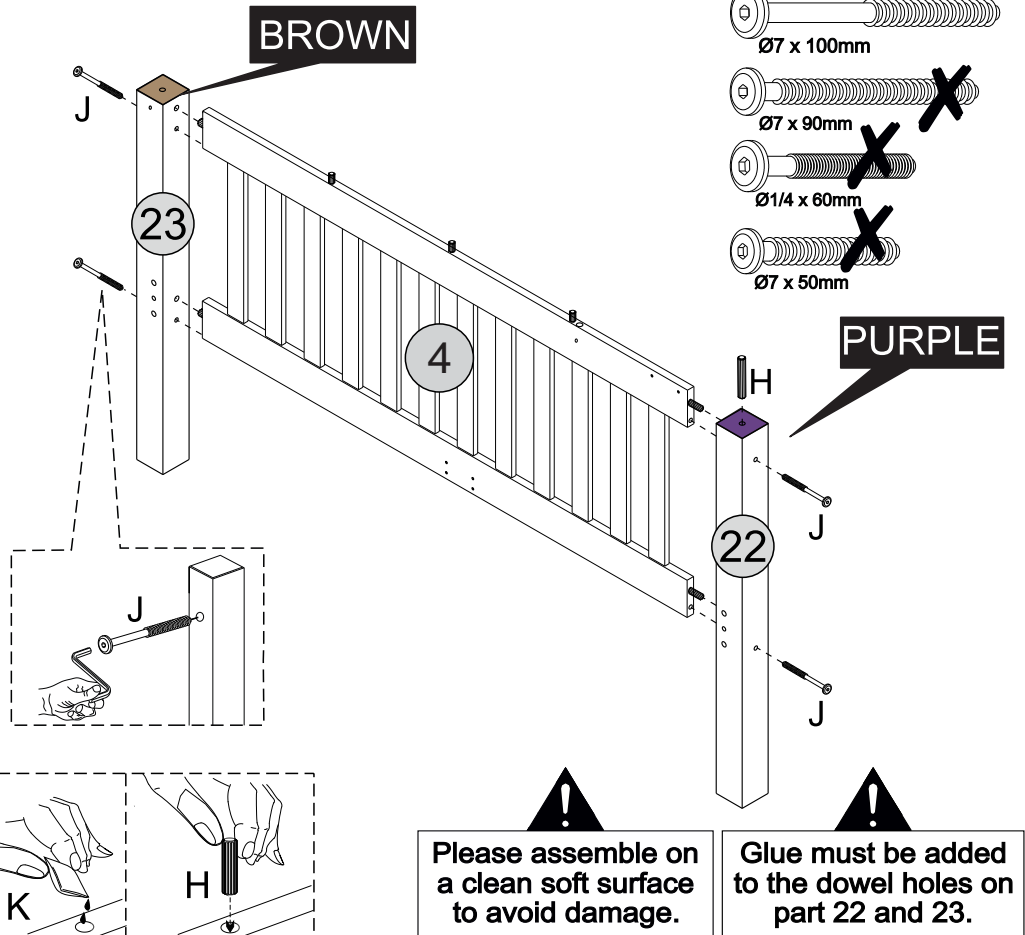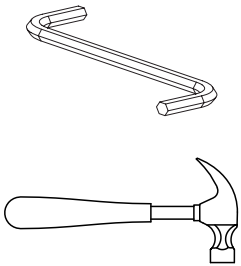


STEP 4



PARTS REQUIRED

1- UPPER HEADBOARD PANEL x2

HARDWARE REQUIRED

H  14
Ø6 x 50mmK  01
GLUE

TOOLS REQUIRED

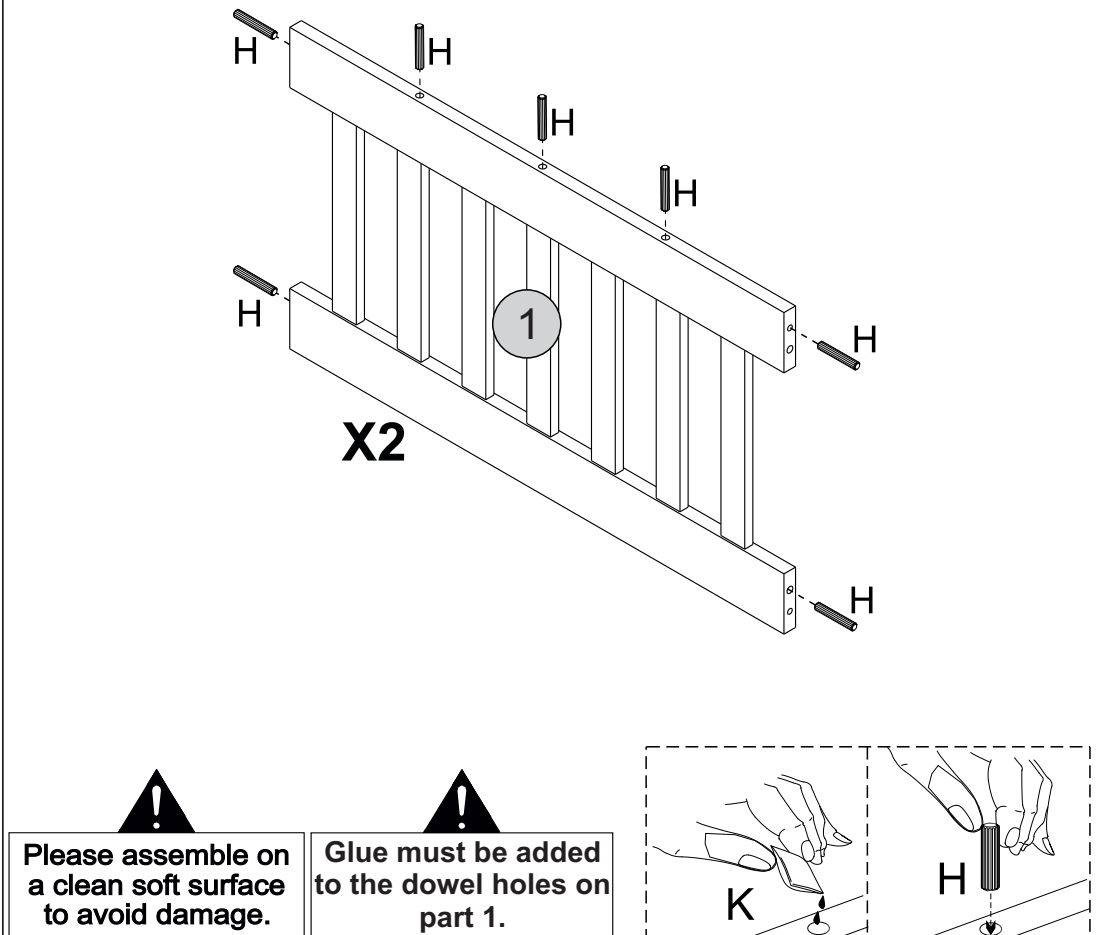


STEP 5




PARTS REQUIRED

1- HEADBOARD PANEL	x1
2- UPPER RIGHT HEADBOARD POST (NATURAL)	x1
21- UPPER RIGHT/LEFT POST (RED)	x1

HARDWARE REQUIRED


H		02
J		04
K		01

TOOLS REQUIRED

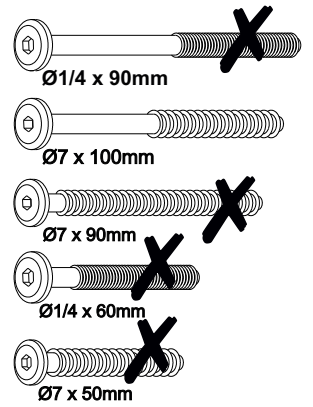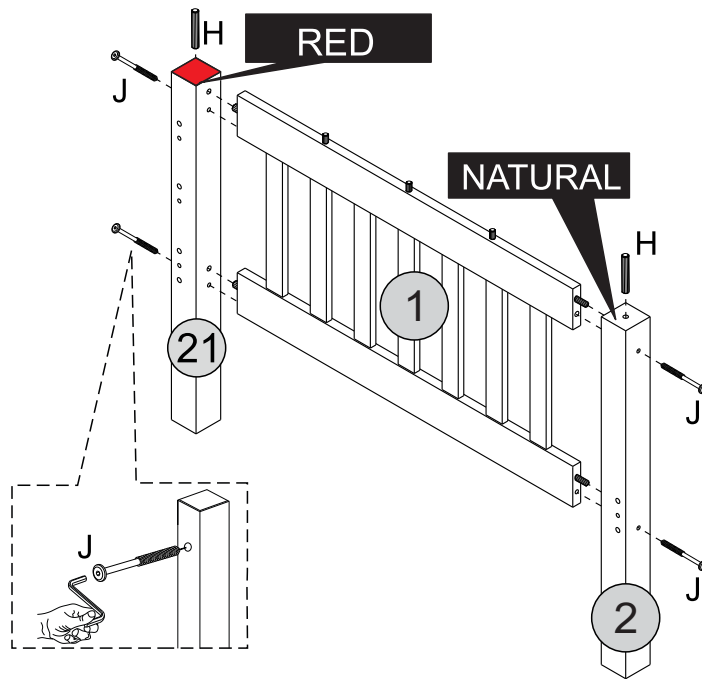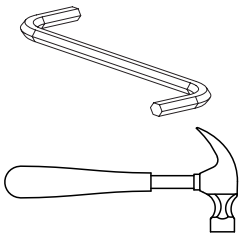

!
Please assemble on
a clean soft surface
to avoid damage.

!
Glue must be added
to the dowel holes on
part 2 and 21.


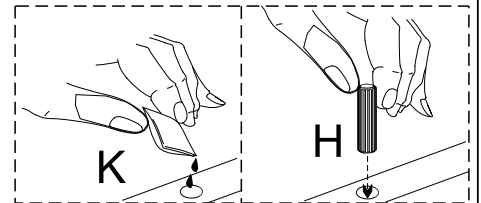


STEP 6




PARTS REQUIRED

1- HEADBOARD PANEL	x1
20- UPPER LEFT BACK POST (GREY)	x1
21- UPPER RIGHT/LEFT POST (RED)	x1

HARDWARE REQUIRED


H		04
J		04
K		01

TOOLS REQUIRED

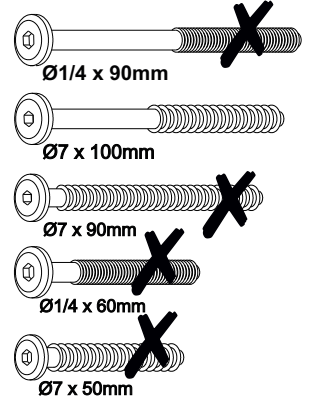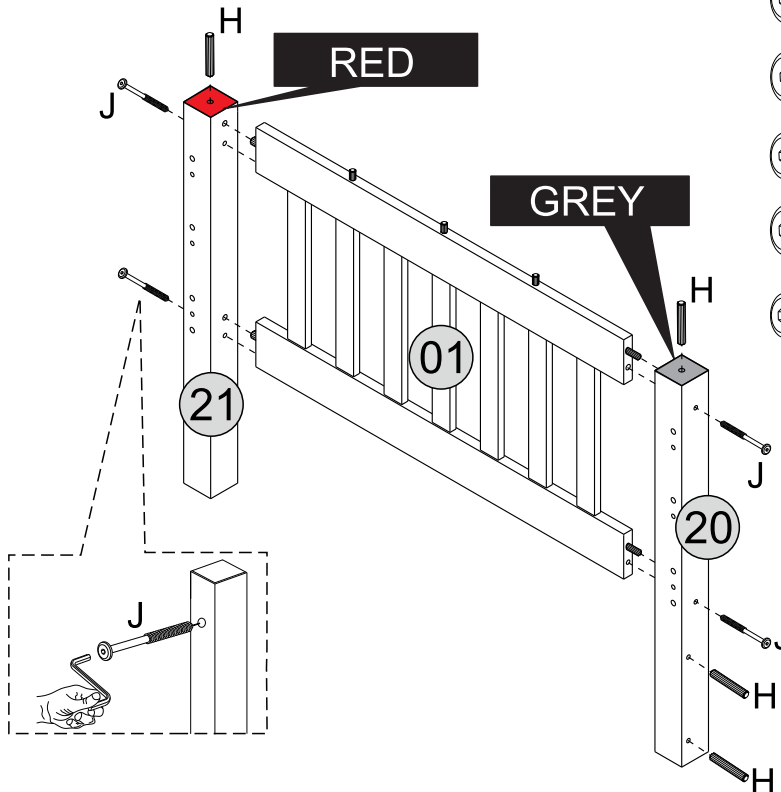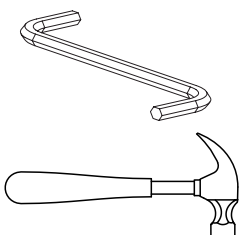

!
Please assemble on
a clean soft surface
to avoid damage.

!
Glue must be added
to the dowel holes on
part 20 and 21.

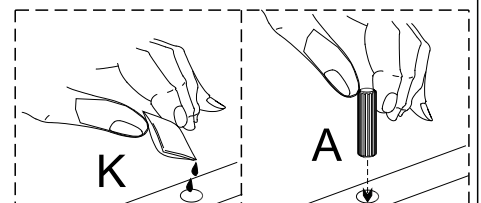

STEP 7



PARTS REQUIRED

5- SIDE RAIL	x2
6- TOP FRONT SIDE RAIL	x1
7- LONG SAFETY RAIL	x2
8- SHORT SAFETY RAIL	x2
27- LOWER SIDE RAIL	x1
28- STAIR CLOSURE	x1

HARDWARE REQUIRED

H		22
K		01


TOOLS REQUIRED

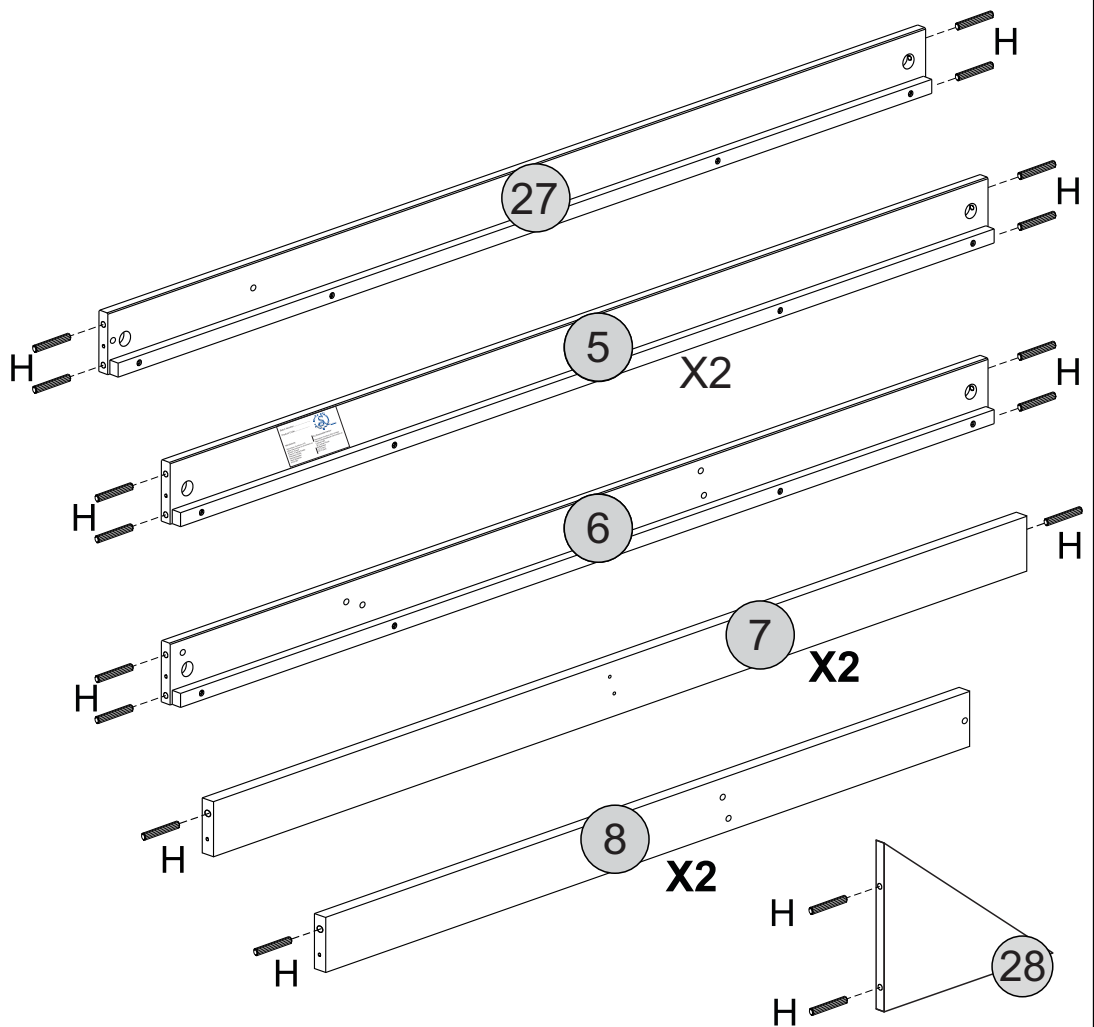



STEP 8

PARTS REQUIRED



5- SIDE RAIL	x1
6- TOP FRONT SIDE RAIL	x1
7- LONG SAFETY RAIL	x2

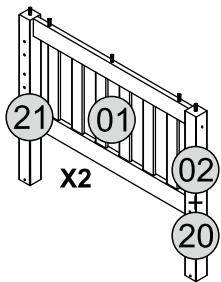

HARDWARE REQUIRED

A		04
B		04
J		04

TOOLS REQUIRED

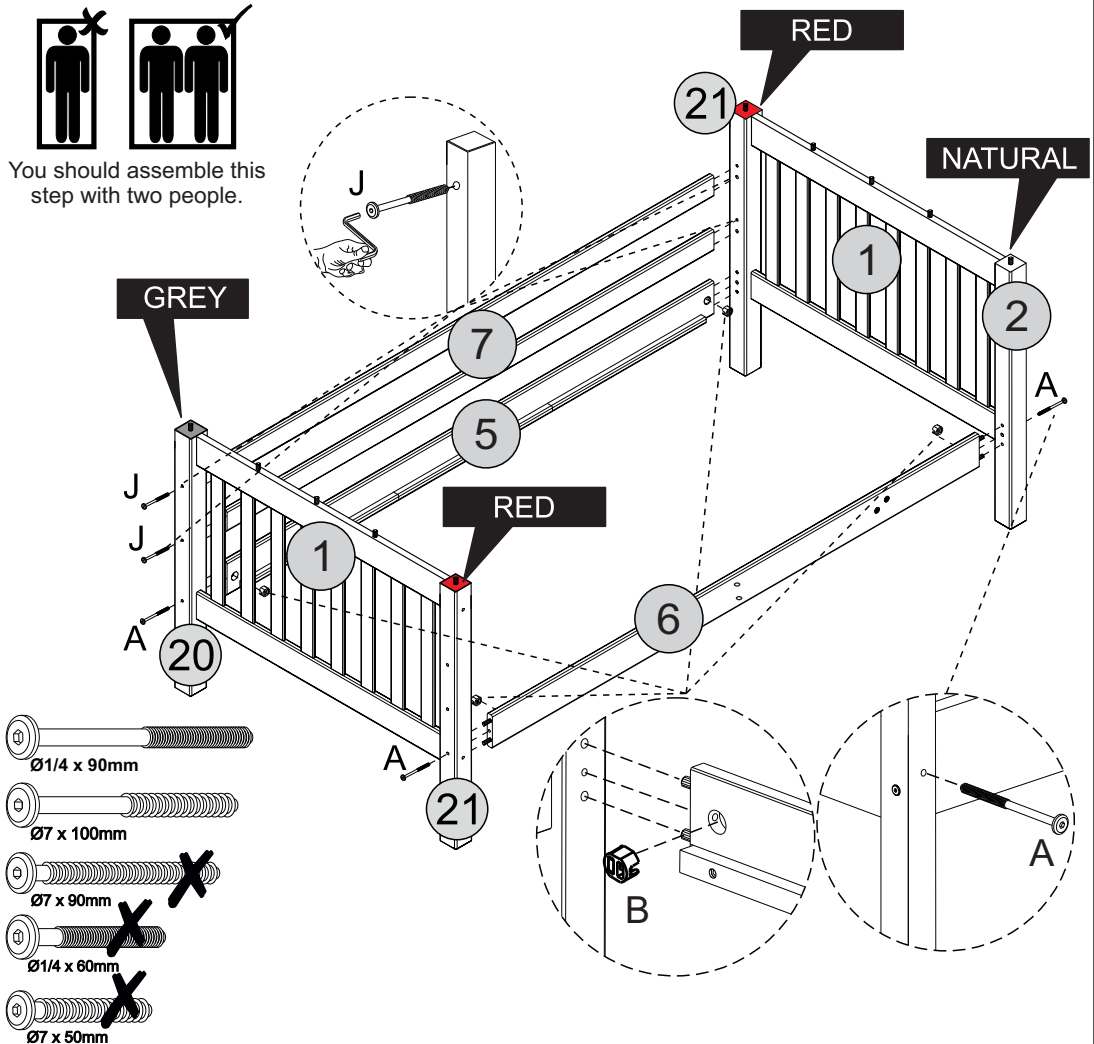


STEP 9

PARTS REQUIRED

12- TOP HEADBOARD PLINTH x2




13- LADDER SUPPORT BRACE x1

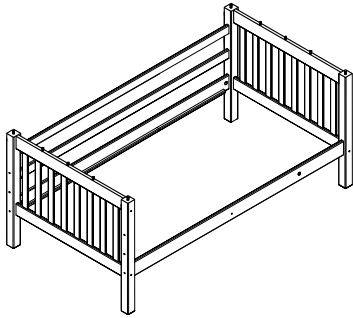


HARDWARE REQUIRED

C  01
Ø7 x 50mmK  01
GLUE

TOOLS REQUIRED

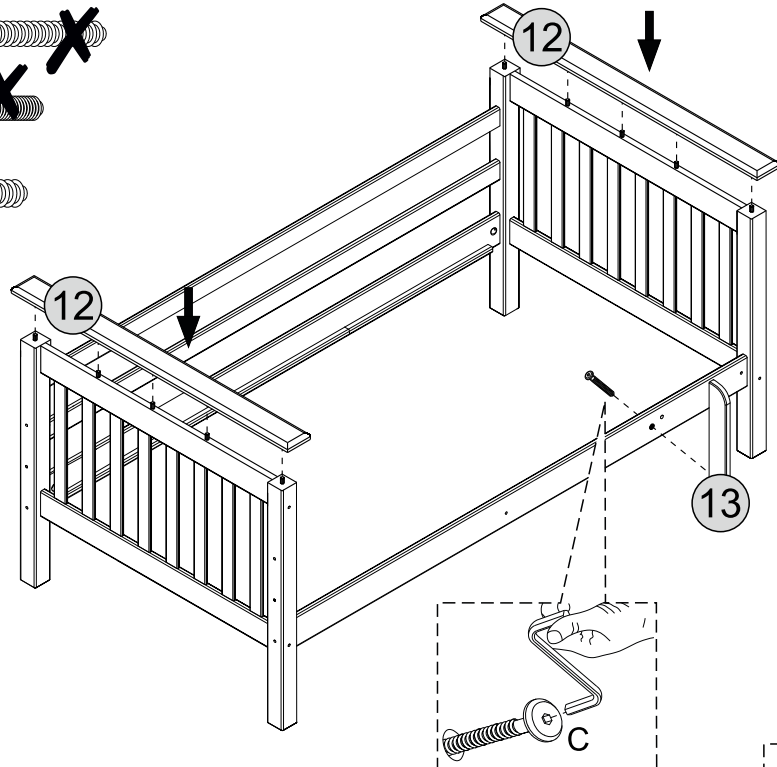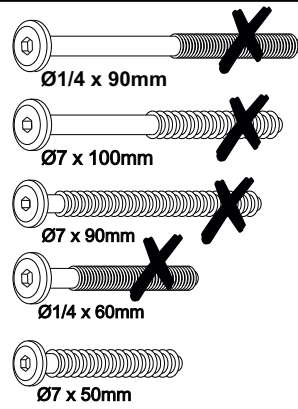


!
Glue must be added
to the dowel holes on
part 12.

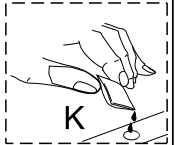



STEP 10

PARTS REQUIRED




8- SHORT SAFETY RAIL x2

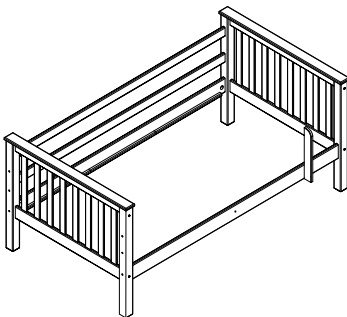


HARDWARE REQUIRED

C  02
Ø7 x 50mmJ  02
Ø7 x 100mm

TOOLS REQUIRED

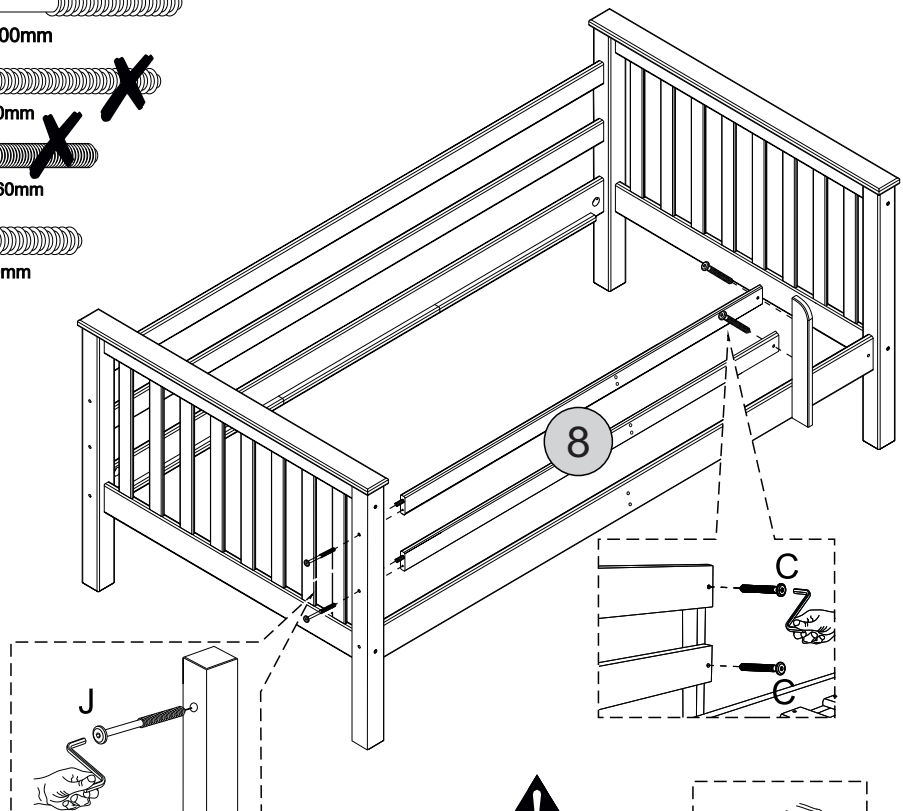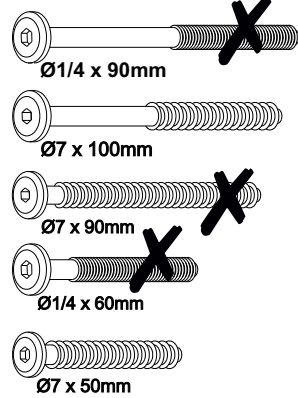

!
Glue must be added
to the dowel holes on
part 21.

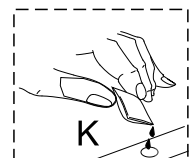


STEP 11


PARTS REQUIRED

09- BACK SUPPORT BRACE x1



10- FRONT SUPPORT BRACE x1

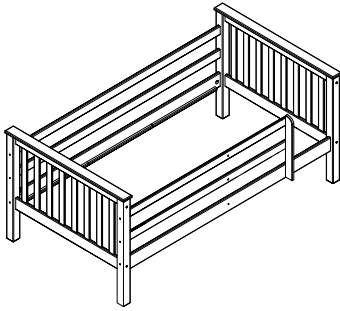

HARDWARE REQUIRED

O  Ø4,0 x 30mm 12


TOOLS REQUIRED

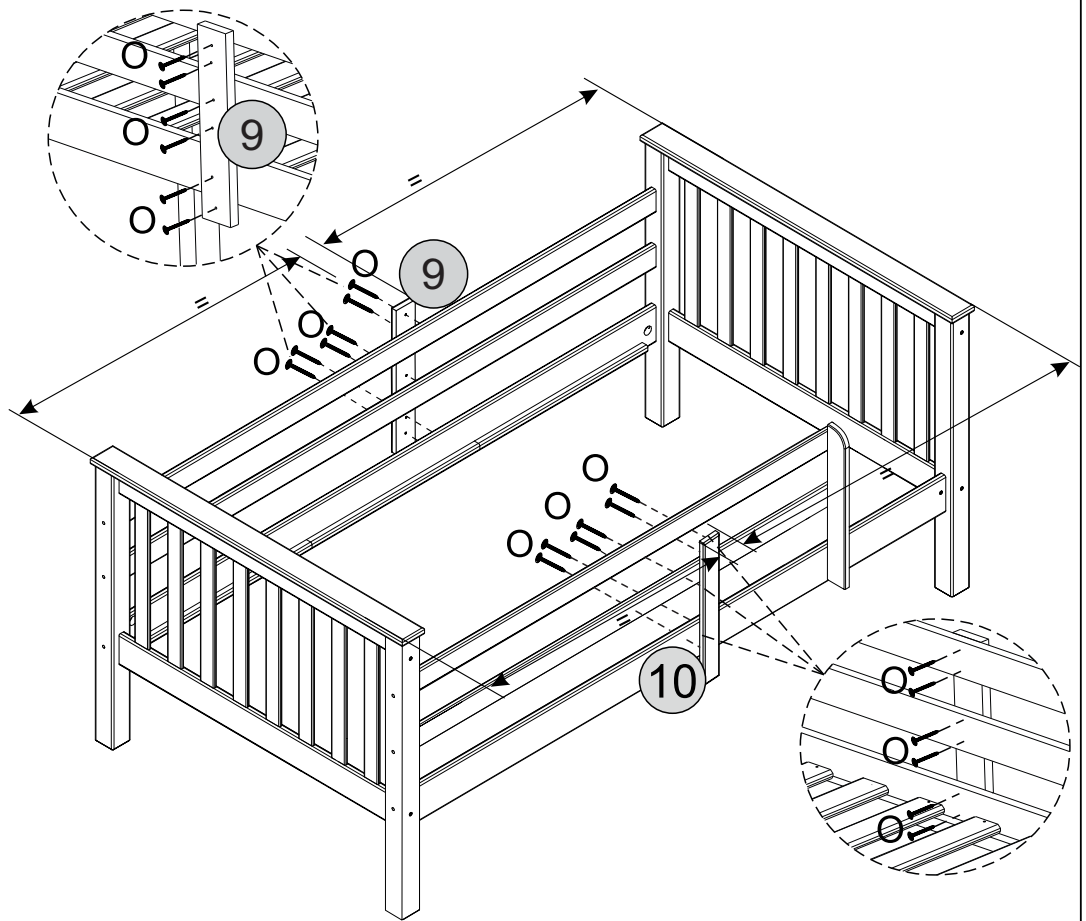

STEP 12

PARTS REQUIRED

16 - 3' SLATS x14




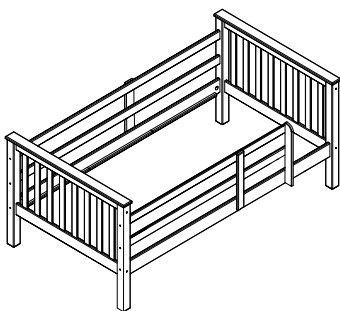


HARDWARE REQUIRED

D  3,5 x 35mm 28

M  SPACER (WOODEN) 02

TOOLS REQUIRED

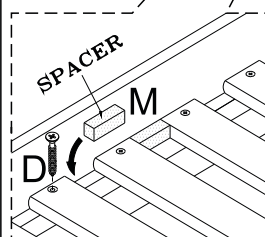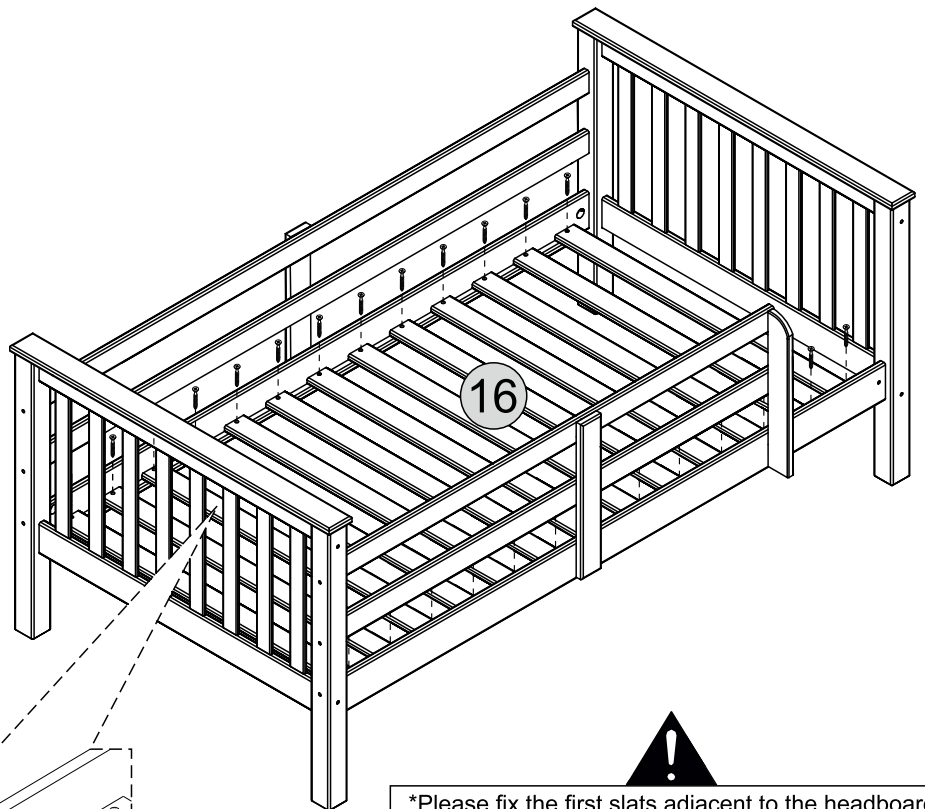


!
*Please fix the first slats adjacent to the headboard and footboard and work towards the middle of the bed using the spacer (M) as shown to ensure correct spacing. Fix all the slats to one siderail first then push the opposite siderail tight against the slats and fix. Please retain the Allen Key (E) and use periodically to check that all bolts are tight.

STEP 13

PARTS REQUIRED




5- SIDE RAIL	x1
27- SIDE RAIL	x1
30- SUPPORT PANEL	x1

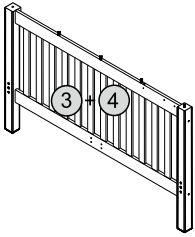

HARDWARE REQUIRED

A		04
B		04
O		02


TOOLS REQUIRED

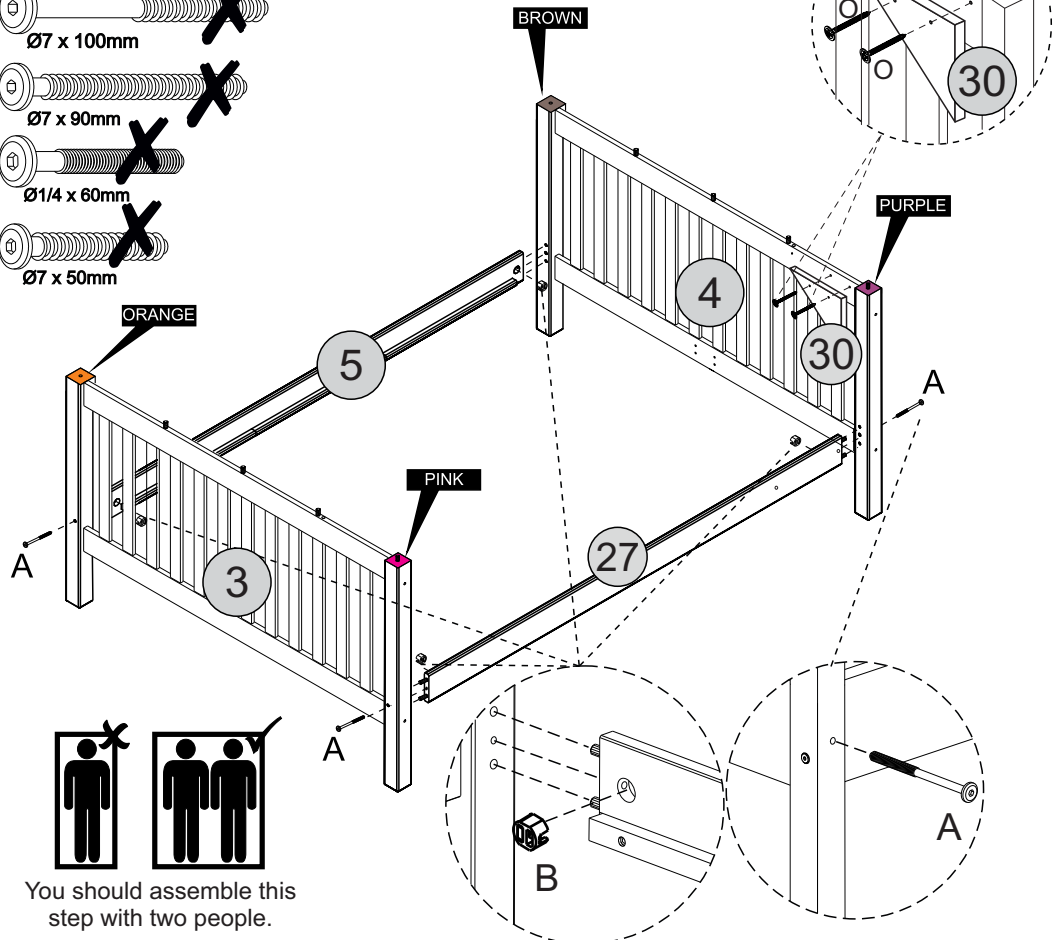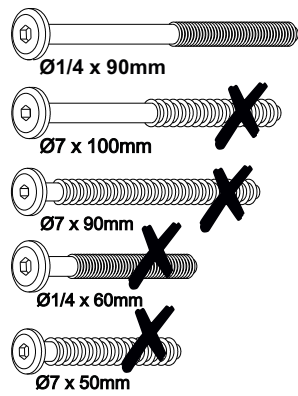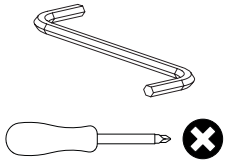

STEP 14

PARTS REQUIRED



11- BOTTOM HEADBOARD PLINTH	x1
31- BOTTOM HEADBOARD PLINTH	x1

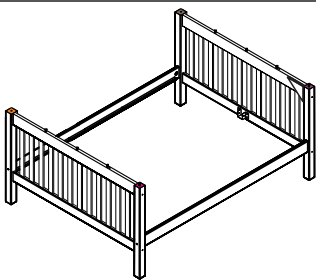


HARDWARE REQUIRED

I		08
K		01
L		04
P		02

TOOLS REQUIRED

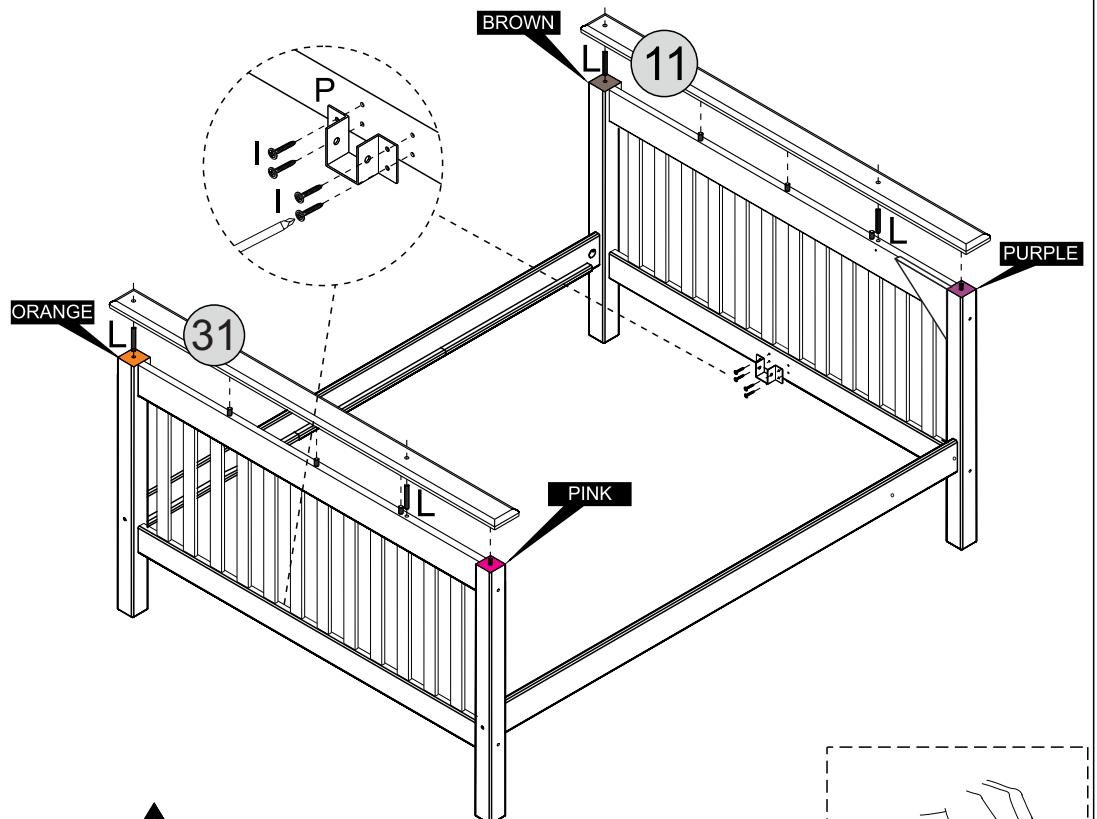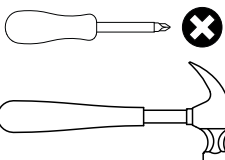

!
Glue must be added to the dowel holes on part 11.

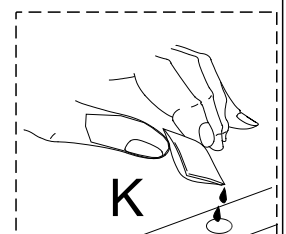


STEP 15


PARTS REQUIRED

14- CENTRE SUPPORT RAIL x1

26- CENTRE SUPPORT LEG x1

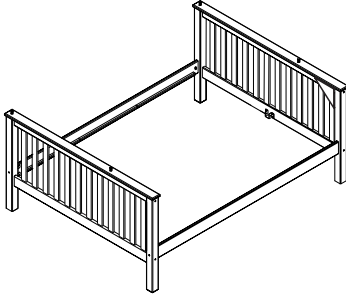




HARDWARE REQUIRED

F  02
Ø1/4 x 60mm

G  02
1/4"

N  01
Ø7 x 90mm


TOOLS REQUIRED

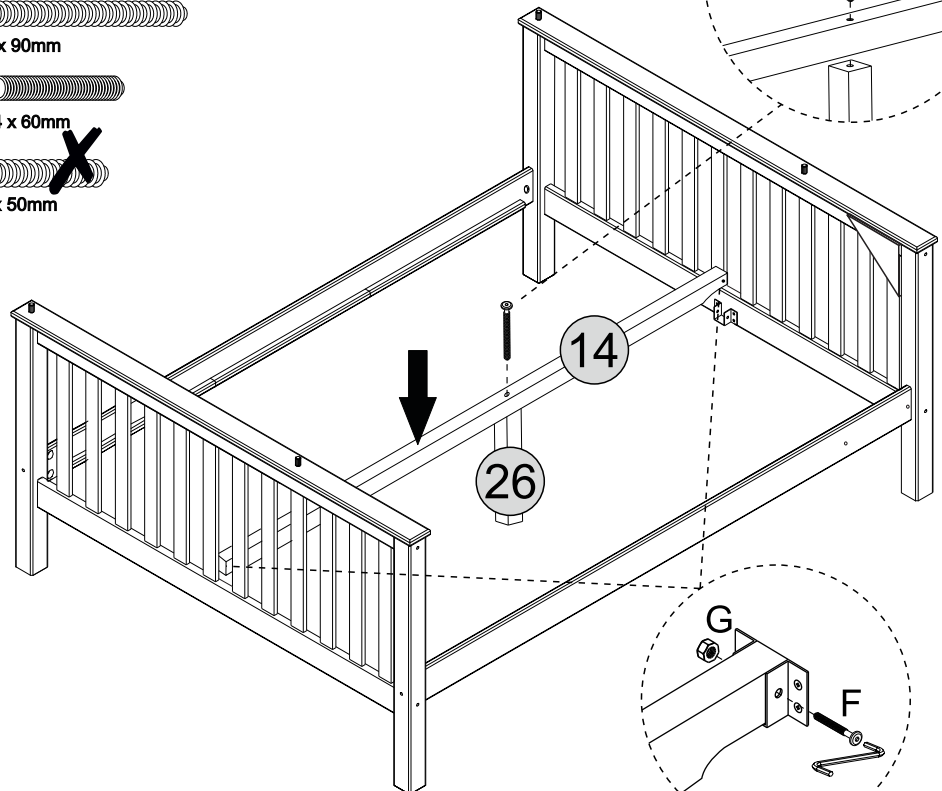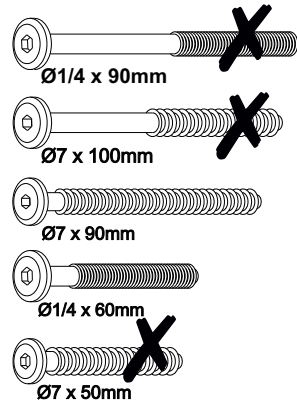


STEP 16

PARTS REQUIRED

15- 4'6 Slats x28




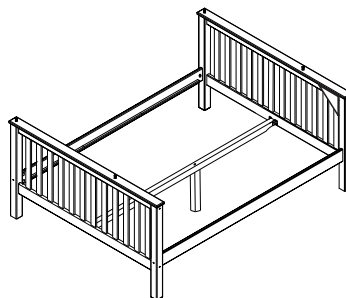


HARDWARE REQUIRED

D  56
3,5 x 35mm

M  02
SPACER (WOODEN)

TOOLS REQUIRED

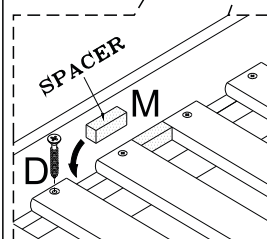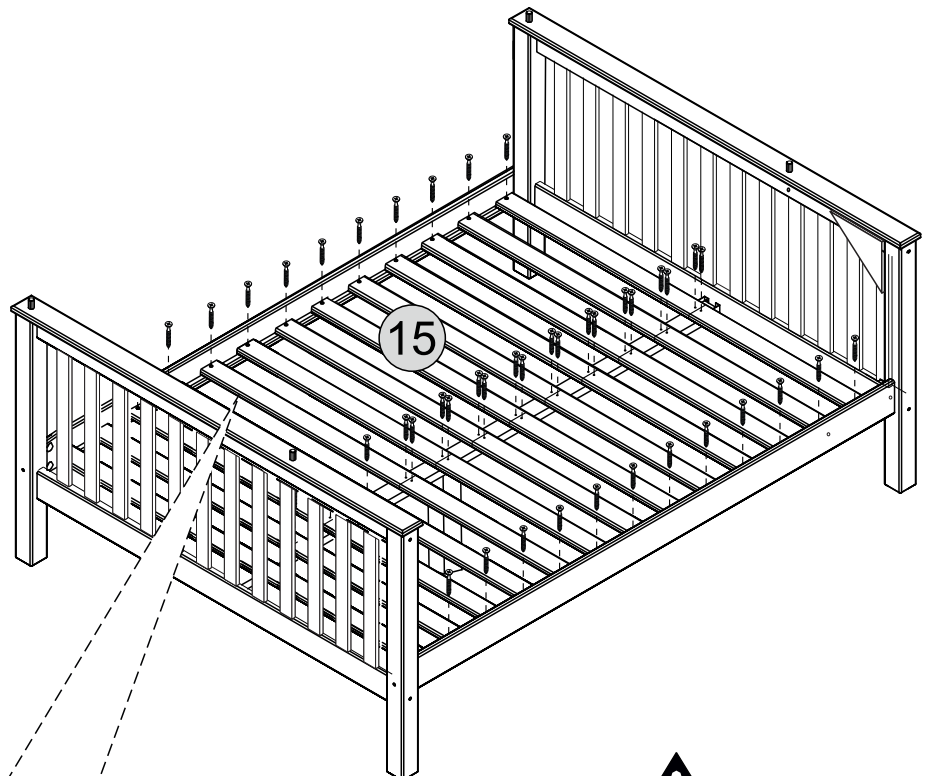



!

*Please fix the first slats adjacent to the headboard and footboard and work towards the middle of the bed using the spacer (M) as shown to ensure correct spacing. Fix all the slats to one siderail first then push the opposite siderail tight against the slats and fix. Please retain the Allen Key (E) and use periodically to check that all bolts are tight.

STEP 17

PARTS REQUIRED


28- STAIR CLOSURE x1

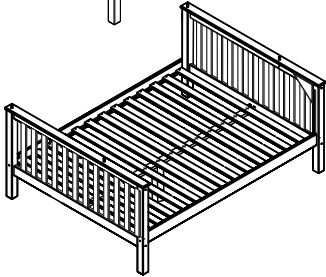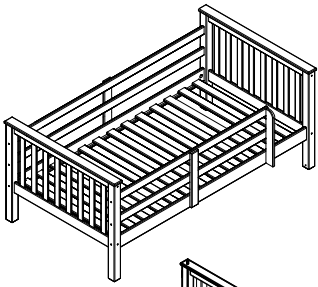



HARDWARE REQUIRED

I  02
Ø3,5 x 14mm


K  01
GLUE

O  06
Ø4,0 x 30mm

TOOLS REQUIRED

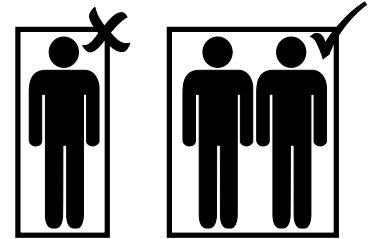

You should assemble this step with two people.

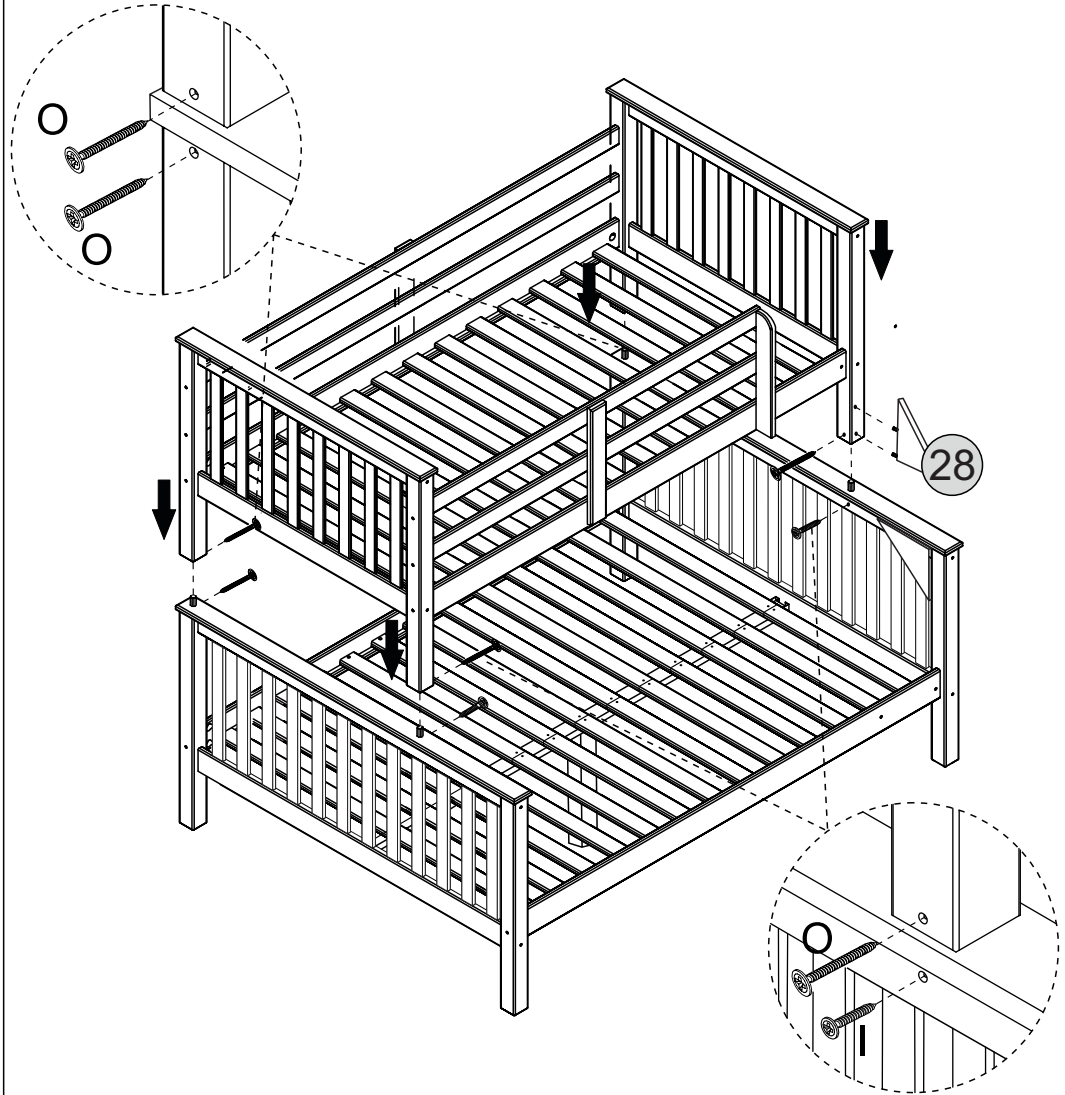

STEP 18

assembly instructions to ladder

PARTS REQUIRED



17- LEFT LADDER SECTION x1

18- RIGHT LADDER SECTION x1


19- LADDER STEP x3

29- LADDER STEP BOTTOM x1


HARDWARE REQUIRED

O  08
Ø4,0 x 30mmK  01
GLUEQ  08
Ø10 x 50mm


TOOLS REQUIRED



ADD GLUE TO THE DOWEL HOLES!

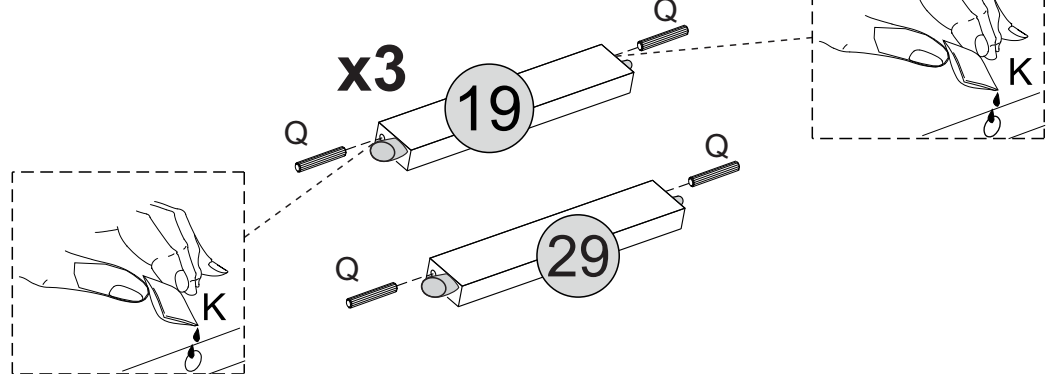



ADD GLUE TO BOTH DOWEL HOLES!

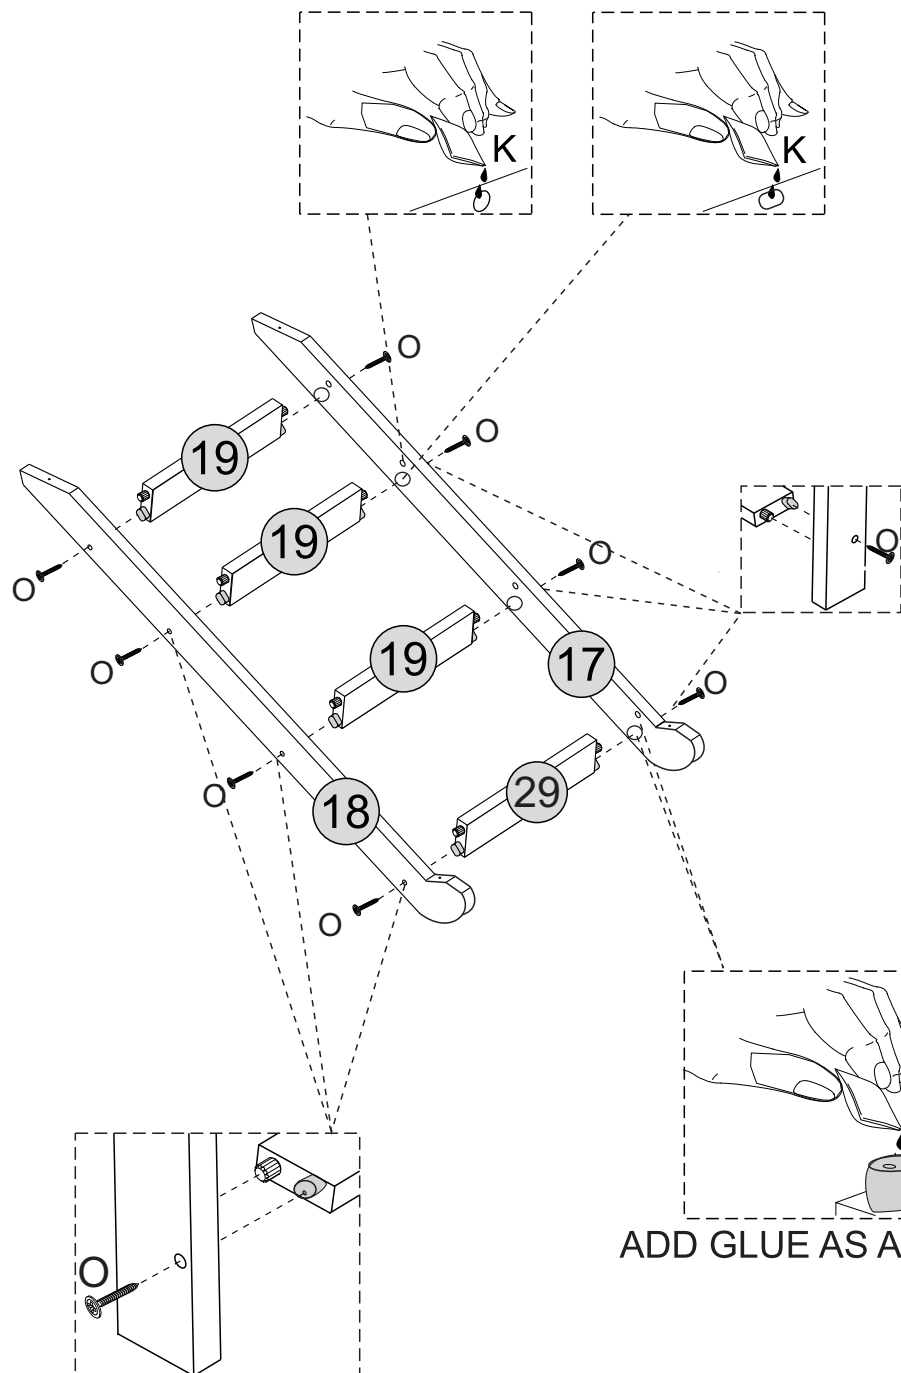

ADD GLUE AS ABOVE!

STEP 19



PARTS REQUIRED

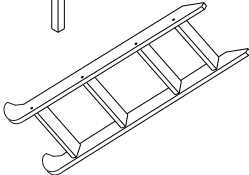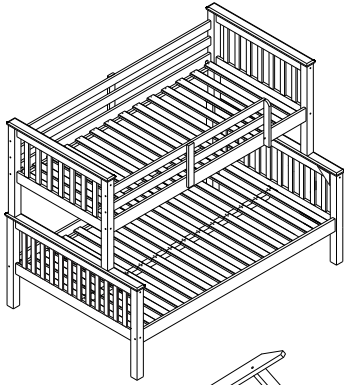

HARDWARE REQUIRED

C  02
Ø7 x 50mm


TOOLS REQUIRED

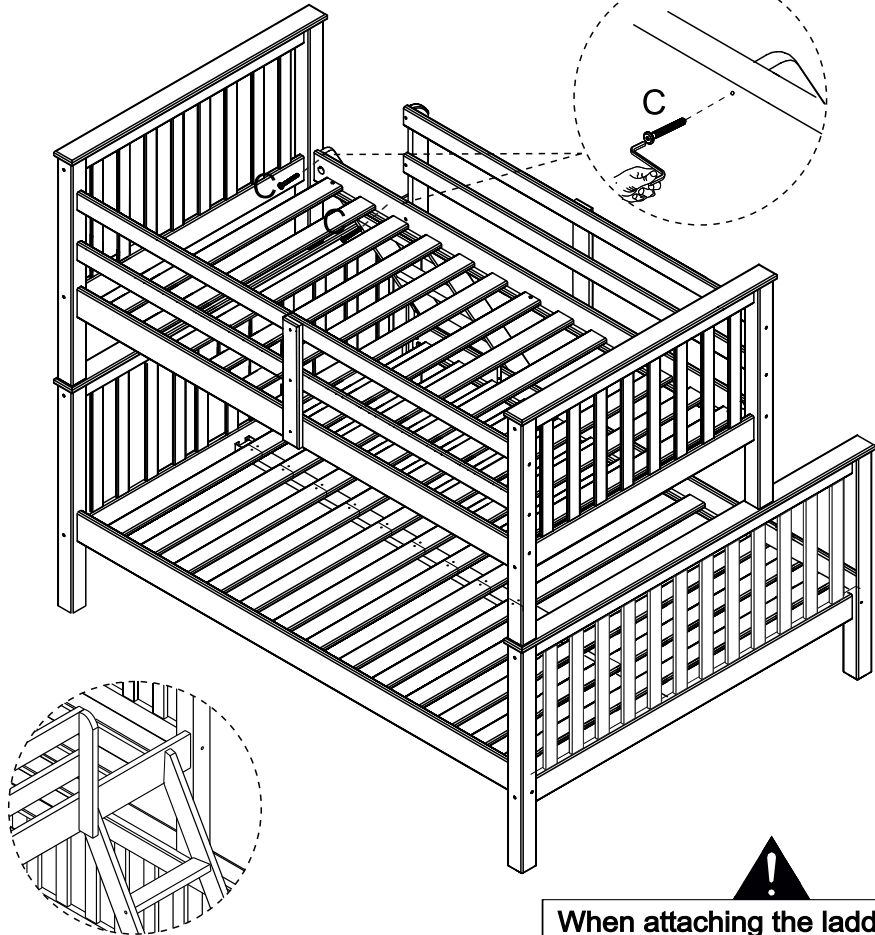

When attaching the ladder to the siderail, please be sure to push the ladder up against part 13.


STEP 20

PARTS REQUIRED


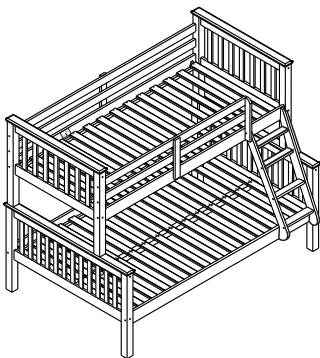


HARDWARE REQUIRED

C  02
Ø7 x 50mm

O  02
Ø4,0 x 30mm

TOOLS REQUIRED

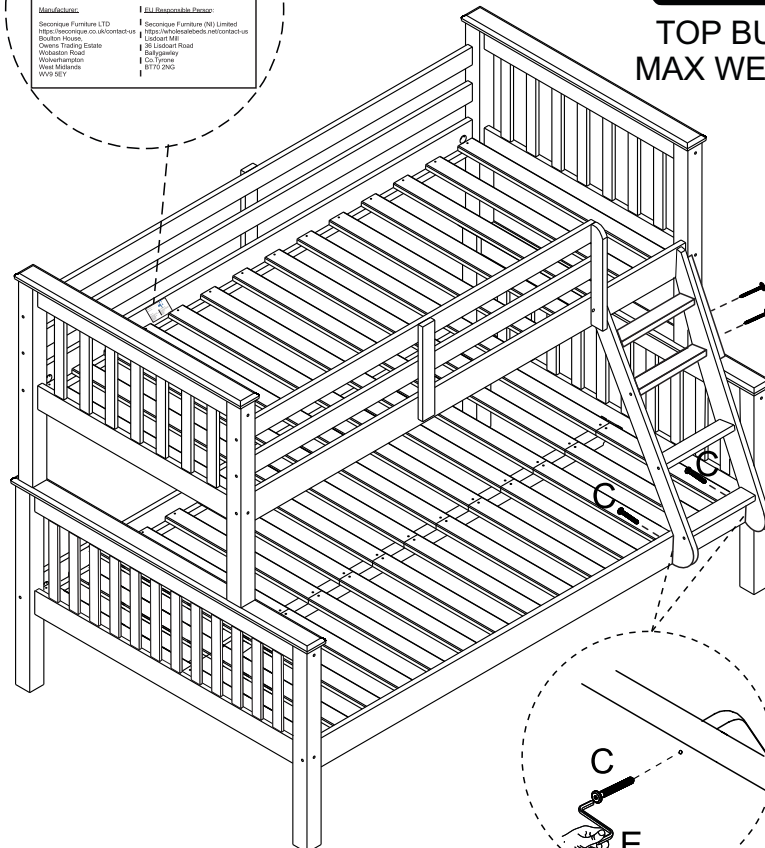

100KG

**TOP BUNK
MAX WEIGHT**

200KG

**BOTTOM BUNK
MAX WEIGHT**

100KG

**MAX LADDER
WEIGHT**

INFORMATIONS IMPORTANTES (FRENCH)	INFORMACIÓN IMPORTANTE (SPANISH)
IMPORTANTE POUR USAGE DOMESTIQUE UNIQUEMENT VEUILLEZ LIRE AVANT DE CONTINUER AVERTISSEMENT Les lits hauts et le lit supérieur des lits superposés ne conviennent pas aux enfants de moins de six ans en raison du risque de blessure en cas de chute. AVERTISSEMENT Les lits superposés et les lits hauts peuvent présenter un risque sérieux de blessure par strangulation s'ils ne sont pas utilisés correctement. Ne jamais attacher ou suspendre des objets à une partie du lit superposé qui ne sont pas conçus pour être utilisés avec le lit, par exemple, mais sans s'y limiter ; des cordes, des ficelles, des crochets, des ceintures et des sacs. AVERTISSEMENT Les enfants peuvent se retrouver coincés entre le lit et le mur, une pente de toit, le plafond, des meubles adjacents (par exemple des placards) et autres. Pour éviter tout risque de blessure grave, la distance entre la barrière de sécurité supérieure et la structure adjacente ne doit pas dépasser 75 mm ou être supérieure à 230 mm. AVERTISSEMENT N'utilisez pas le lit superposé/lit haut si une pièce structurelle est cassée ou manquante. La taille de matelas recommandée pour ce lit superposé est de 1900 mm x 915 mm x 150 mm. La hauteur maximale du matelas est de 160 mm. La hauteur maximale du matelas est clairement indiquée sur le lit superposé et NE DOIT PAS ÊTRE DÉPASSÉE. En fonction de l'utilisation que ce produit reçoit, il peut être nécessaire de resserrer les fixations de temps en temps, ce qui est tout à fait normal pour les meubles en kit. NE SERREZ PAS TROP LES FIXATIONS. N'utilisez en aucun cas un outil électrique pour assembler ce produit. Deux personnes sont nécessaires pour assembler ce lit superposé. Assemblez-le aussi près que possible de sa position finale. Assemblez-le sur une surface douce et propre. Pour le nettoyage, vous pouvez utiliser un chiffon humide (pas mouillé). La pièce dans laquelle le lit est placé doit être ventilée pour éviter la moisissure dans et autour du lit. Ce lit superposé est fabriqué conformément à la norme BS EN 747-1:2024	IMPORTANTE SOLO PARA USO DOMÉSTICO LEER ANTES DE CONTINUAR ADVERTENCIA Las camas altas y la cama superior de las literas no son adecuadas para niños menores de seis años debido al riesgo de lesiones por caídas. ADVERTENCIA Las literas y las camas altas pueden presentar un riesgo grave de lesiones por estrangulamiento si no se utilizan correctamente. Nunca fije ni cuelgue elementos en ninguna parte de la litera que no estén diseñados para usarse con la cama, por ejemplo, pero no limitado a; cuerdas, cordones, ganchos, cinturones y bolsos. ADVERTENCIA Los niños pueden quedar atrapados entre la cama y la pared, un techo inclinado, el techo, muebles adyacentes (por ejemplo, armarios) y similares. Para evitar el riesgo de lesiones graves, la distancia entre la barrera de seguridad superior y la estructura adyacente no debe superar los 75 mm ni los 230 mm. ADVERTENCIA No utilice la litera/cama alta si alguna pieza estructural está rota o falta. El tamaño de colchón recomendado para esta litera es de 1900 mm x 915 mm x 150 mm. La altura máxima del colchón es de 160 mm. La altura máxima del colchón está claramente marcada en la litera y NO SE DEBE SOBREPASAR. Dependiendo de la cantidad de uso que reciba este producto, puede ser necesario apretar las fijaciones de vez en cuando, esto es completamente normal en muebles modulares. NO APRIETE DEMASIADO LAS FIJACIONES. No utilice bajo ningún concepto una herramienta eléctrica para ensamblar este producto. Se necesitan dos personas para ensamblar esta litera. Ensamble lo más cerca posible de su posición final. Ensamble sobre una superficie suave y limpia. Para la limpieza, puede usar un paño húmedo (no mojado). La habitación en la que se coloca la cama debe estar ventilada para evitar la formación de moho dentro y alrededor de la cama. Esta litera está fabricada de acuerdo con la norma BS EN 747-1:2024.
WICHTIGE INFORMATIONEN (GERMAN)	INFORMAZIONI IMPORTANTI (ITALIAN)
WICHTIGNUR FÜR DEN HAUSHALTSGEBRAUCH BITTE LESEN SIE, BEVOR SIE FORTFAHREN WARNUNG Hochbetten und das obere Bett von Etagenbetten sind aufgrund der Verletzungsgefahr durch Stürze nicht für Kinder unter sechs Jahren geeignet. WARNUNG Etagenbetten und Hochbetten können bei unsachgemäßer Verwendung eine ernsthafte Verletzungsgefahr durch Strangulation darstellen. Befestigen oder hängen Sie niemals Gegenstände an Teilen des Etagenbetts auf, die nicht für die Verwendung mit dem Bett vorgesehen sind, beispielsweise, aber nicht beschränkt auf, Seile, Schnüre, Haken, Gürtel und Taschen. WARNUNG Kinder können zwischen dem Bett und der Wand, einer Dachschräge, der Decke, angrenzenden Möbelstücken (z. B. Schränken) und dergleichen eingeklemmt werden. Um das Risiko schwerer Verletzungen zu vermeiden, darf der Abstand zwischen der oberen Sicherheitsbarriere und der angrenzenden Struktur 75 mm nicht überschreiten oder muss mehr als 230 mm betragen. WARNUNG Verwenden Sie das Etagenbett/Hochbett nicht, wenn ein Strukturteil gebrochen ist oder fehlt. Die empfohlene Matratzengröße für dieses Etagenbett beträgt 1900 mm x 915 mm x 150 mm. Die maximale Matratzenhöhe beträgt 160 mm. Die maximale Matratzenhöhe ist auf dem Etagenbett deutlich gekennzeichnet und DARF NICHT ÜBERSCHRITTEN WERDEN. Je nachdem, wie häufig dieses Produkt verwendet wird, kann es von Zeit zu Zeit erforderlich sein, die Befestigungen festzuziehen. Dies ist bei Möbeln aus dem Bausatz völlig normal. ZIEHEN SIE DIE BEFESTIGUNGEN NICHT ZU FEST. Verwenden Sie zum Zusammenbau dieses Produkts unter keinen Umständen ein Elektrowerkzeug. Zum Zusammenbau dieses Etagenbetts sind zwei Personen erforderlich. So nah wie möglich an der endgültigen Position zusammenbauen. Auf einer weichen, sauberen Oberfläche zusammenbauen. Zum Reinigen können Sie ein feuchtes Tuch (nicht nass) verwenden. Der Raum, in dem das Bett steht, sollte belüftet sein, um Schimmel im und um das Bett herum zu verhindern. Dieses Etagenbett wird gemäß BS EN 747-1:2024 hergestellt.	IMPORTANTE, SOLO PER USO DOMESTICO SI PREGA DI LEGGERE PRIMA DI CONTINUARE OLTRE ATTENZIONE I letti alti e il letto superiore dei letti a castello non sono adatti ai bambini di età inferiore ai sei anni a causa del rischio di lesioni da caduta. ATTENZIONE I letti a castello e i letti alti possono presentare un grave rischio di lesioni da strangolamento se non utilizzati correttamente. Non attaccare o appendere mai oggetti a nessuna parte del letto a castello che non siano progettati per essere utilizzati con il letto, ad esempio, ma non limitati a; corde, spaghetti, ganci, cinture e borse. ATTENZIONE I bambini possono rimanere intrappolati tra il letto e il muro, una pendenza del tetto, il soffitto, mobili adiacenti (ad esempio armadi) e simili. Per evitare il rischio di lesioni gravi, la distanza tra la barriera di sicurezza superiore e la struttura adiacente non deve superare i 75 mm o deve essere superiore a 230 mm. ATTENZIONE Non utilizzare il letto a castello/letto alto se una parte strutturale è rotta o mancante. Le dimensioni del materasso consigliate per questo letto a castello sono 1900 mm x 915 mm x 150 mm. L'altezza massima del materasso è 160 mm. L'altezza massima del materasso è chiaramente indicata sul letto a castello e NON DEVE ESSERE SUPERATA. A seconda della quantità di utilizzo di questo prodotto, potrebbe essere necessario stringere i fissaggi di tanto in tanto, il che è del tutto normale per i mobili in kit. NON STRINGERE ECCESSIVAMENTE I FISSAGGI. Non utilizzare per nessun motivo un elettro utensile per montare questo prodotto. Per montare questo letto a castello sono necessarie due persone. Montare il più vicino possibile alla sua posizione finale. Montare su una superficie morbida e pulita. Per la pulizia, è possibile utilizzare un panno umido (non bagnato). La stanza in cui è posizionato il letto deve essere ventilata per evitare la formazione di muffa dentro e intorno al letto. Questo letto a castello è prodotto in conformità alla norma BS EN 747-1:2024