PANAMA 3 DOOR WARDROBE 55652 ASSEMBLY INSTRUCTIONS



IMPORTANT PLEASE READ BEFORE YOU CONTINUE FURTHER FOR DOMESTIC USE ONLY CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

• Please ensure all fittings and parts are present before commencing with assembly.

• We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.

- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible.

• Never drag or push products as this could cause damage to the joints making it inferior.

• Do not place this product next to a radiator or in direct sunlight.

• Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.

• Make sure any spillage is wiped off immediately.

• Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.

• For general cleaning use a duster, and do not use detergents of any kind. However, the surface will need to be retreated from time to time. This can be done by using block wax (unperfumed) and rubbing it over the whole item.

• From time to time it may be necessary to tighten fittings, regular inspections should be carried out.


SEC/SH/05/21/PJ1

<complex-block></complex-block>											
Part Number	le on a clean soft surface to avoid damage Part Code	 Please take care to avoid damaging Part Description 	Quantity	Carton							
1	S100-101-040-PJ1-01	Right Side Panel	1	1/2							
2	S100-101-040-PJ1-02	Left Side Panel	1	1/2							
3	S100-101-040-PJ1-03	Right Front Upright	1	1/2							
4	S100-101-040-PJ1-04	Left Front Upright	1	1/2							
5	S100-101-040-PJ1-05	Top Panel	1	2/2							
6	S100-101-040-PJ1-06	Hanging Rail	1	2/2							
8	S100-101-040-PJ1-07	Front Crossbeam	1	2/2							
9	S100-101-040-PJ1-08 S100-101-040-PJ1-09	Base Back Panel	2	2/2 1/2							
10	S100-101-040-PJ1-09	Right Door	1	1/2							
10	S100-101-040-PJ1-10	Centre Door	1	1/2							
12	S100-101-040-PJ1-12	Left Door	1	1/2							
13	S100-101-040-PJ1-13	Fixed Shelf	1	2/2							
14											
	S100-101-040-PJ1-14	Door Strip	1	1/2							
15	S100-101-040-PJ1-14 S100-101-040-PJ1-15	Door Strip Front Crossbeam	1	2/2							
15 16											
16 17	S100-101-040-PJ1-15 S100-101-040-PJ1-16 S100-101-040-PJ1-17	Front Crossbeam Centre Panel Centre Front Upright	1 1 1	2/2 1/2 1/2							
16	S100-101-040-PJ1-15 S100-101-040-PJ1-16	Front Crossbeam Centre Panel	1 1	2/2 1/2							

ſ

				FITTINGS				
Α	Ø 8 x 30mm	48	F		03	K	P8 (Brown)	12
В	(*)) Ø 4,0 x 40mm	12	G	M4 x 25mm	03	L		01
С	Ø 3,5 x 30mm	32	Н	Right	06	м	(S)	02
D	(%)))))))) Ø 3,0 x 14mm (Black)	73	1	Left	03		• • 1x	01
E		06	J	@ 10x10mm	70	N	(0) 2x (☐→₩₩₩≫ (⊕ 1x Ø 3,5 x 25mm	01
						ο	1695 mm	01

TOOLS REQUIRED

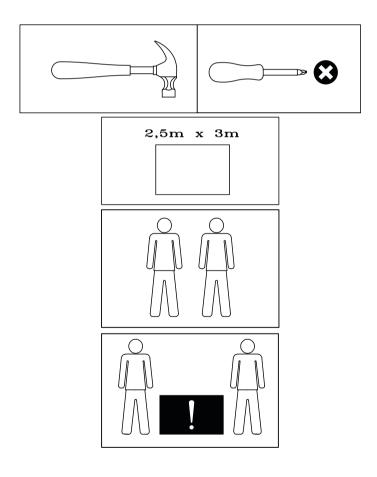

SEC/SH/05/21/PJ1

