
# NEVADA 6 DOOR 2 DRAWER WARDROBE ASSEMBLY INSTRUCTIONS





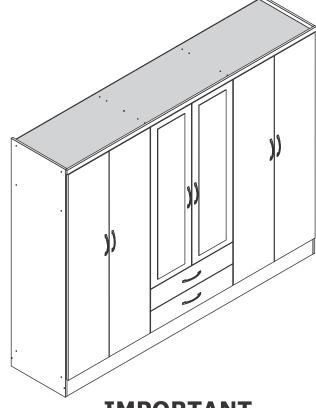

# IMPORTANT FOR DOMESTIC USE ONLY


PLEASE READ BEFORE YOU CONTINUE FURTHER


### CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.


SEC/SH/04/23/CA3

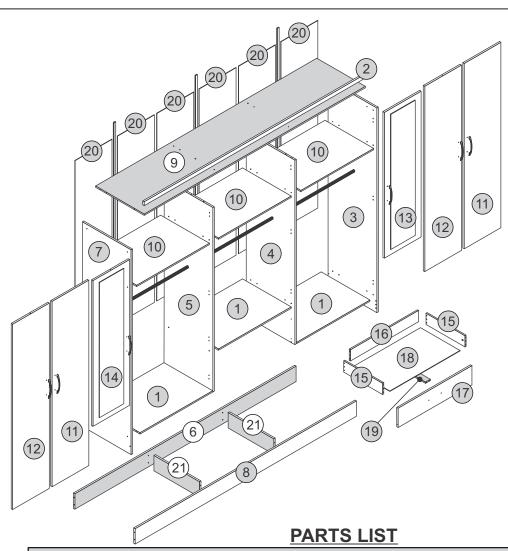


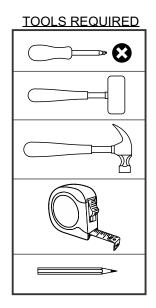


<u>Please Note:</u>
The below parts have all been stamped with the part number to help identify them during assembly.

Part Number	Part Description	Quantity	Carton
1	Base Panel	3	2/4
2	Frame	1	3/4
3	Right Side Panel	1	1/4
4	Right Division Panel	1	1/4
5	Left Division Panel	1	2/4
6	Back Baseboard	1	3/4
7	Left Side Panel	1	1/4
8	Front Baseboard	1	3/4
9	Top Panel	1	3/4
10	Upper Panel	3	2/4
11	Right Large Door	2	4/4
12	Left Large Door	2	3/4
13	Right Small Door	1	4/4
14	Left Small Door	1	4/4
15	Drawer Side	4	1/4
16	Drawer Back Panel	2	1/4
17	Drawer Front	2	1/4
18	Drawer Bottom	2	2/4
19	Drawer Bottom Support Bar	2	1/4
20	Back Panel	6	(2) 2/4 / (4) 4/
21	Central Baseboard	2	1/4

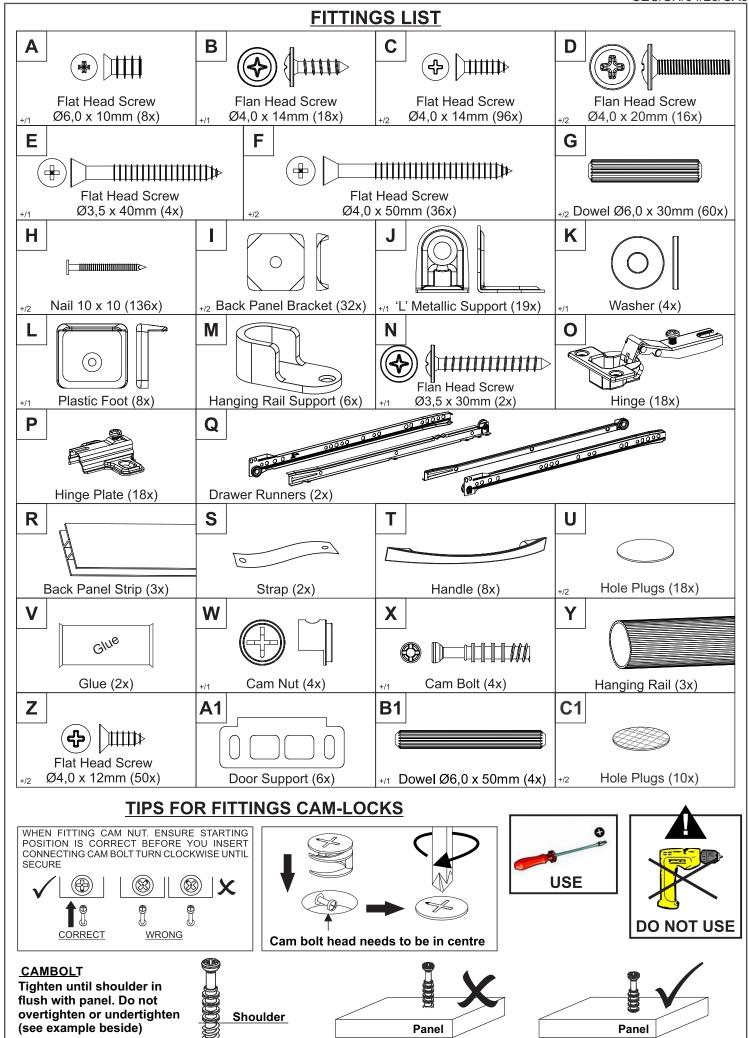

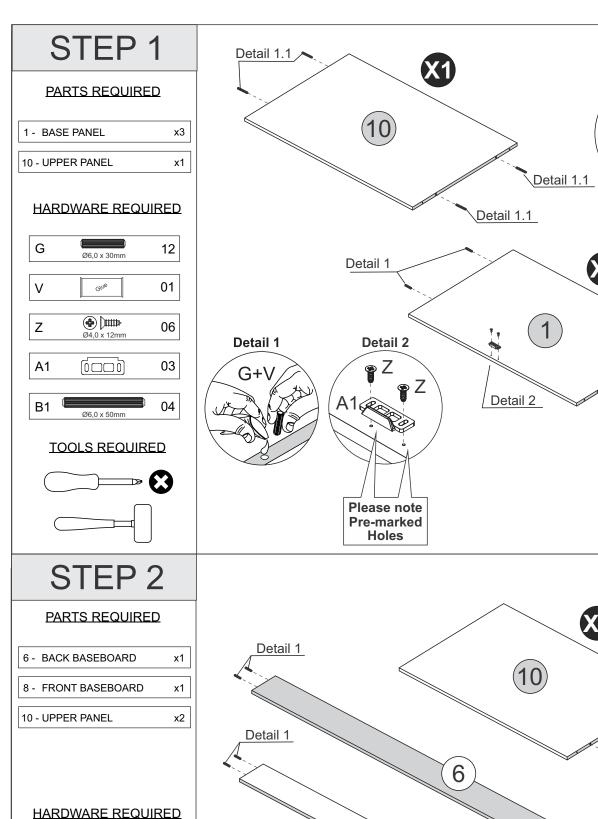

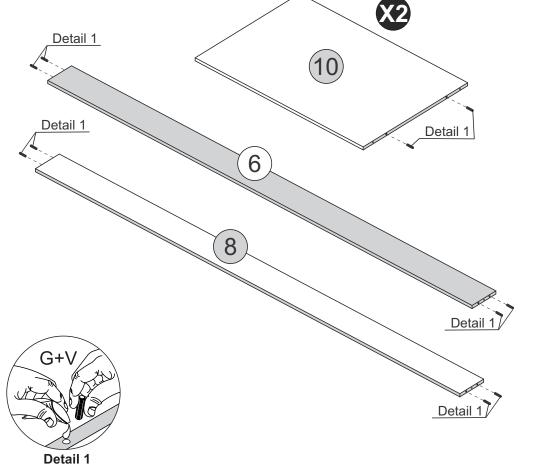

**TOOLS REQUIRED** 

Ø6,0 x 30mm

12

01

G

٧


SEC/SH/04/23/CA3


Detail 1


Detail 1


Detail 1.1


B1+V

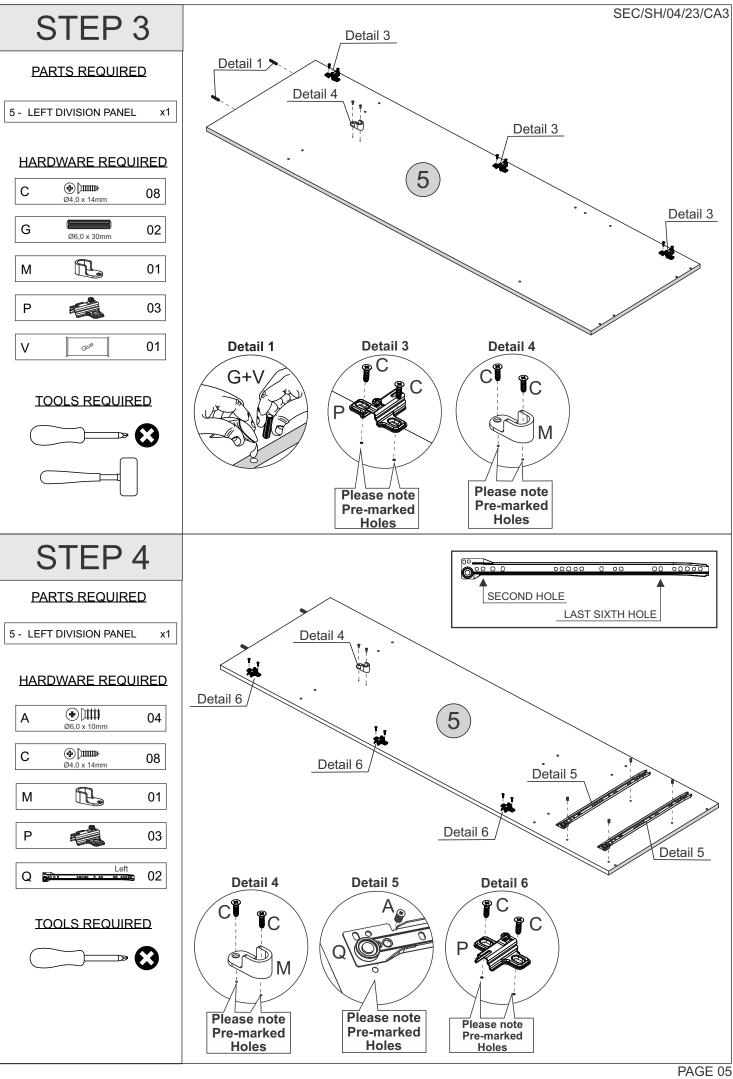


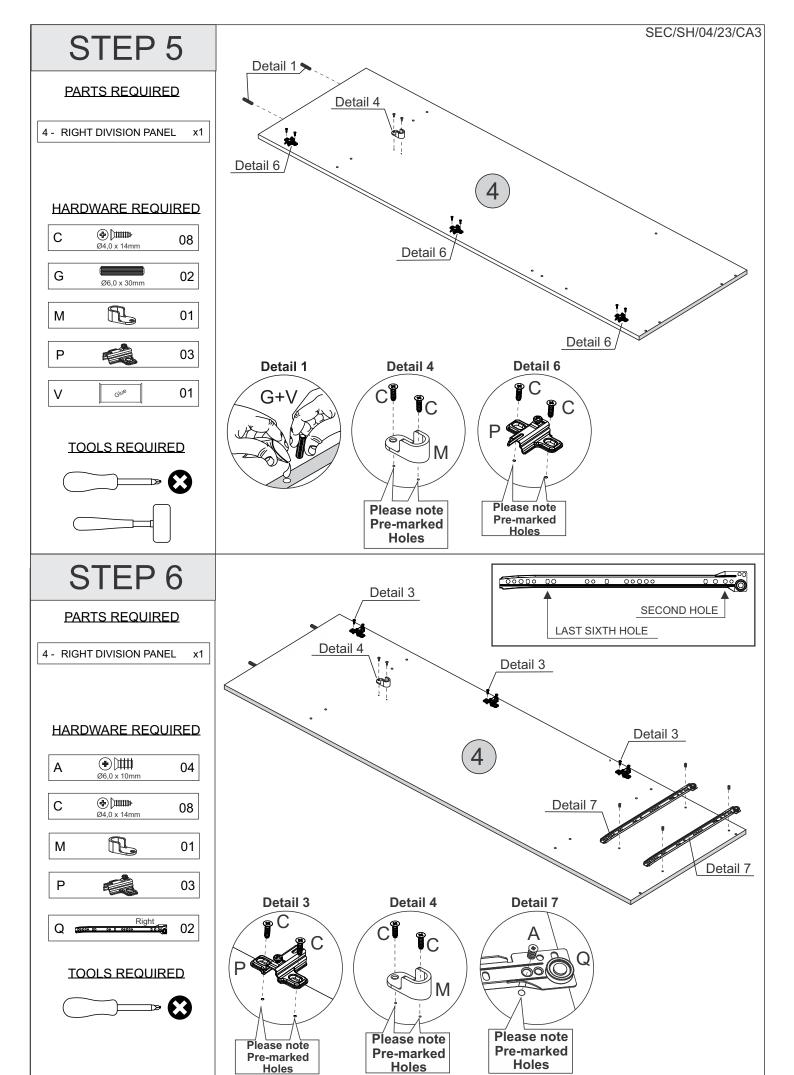

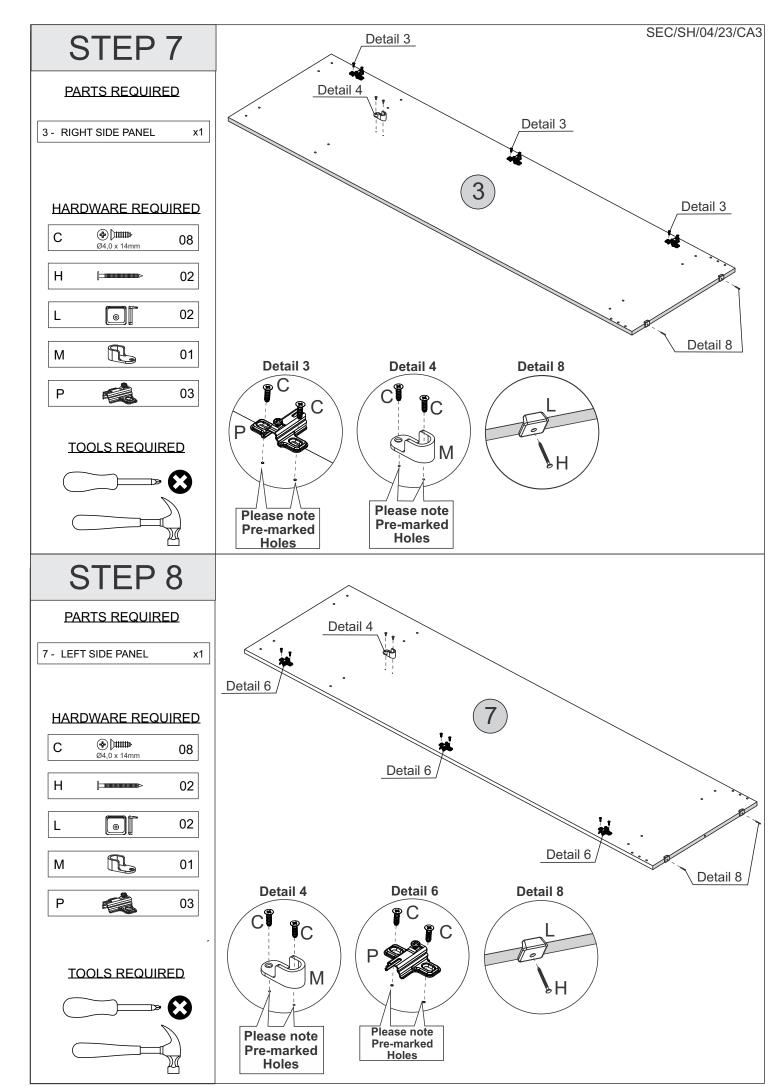

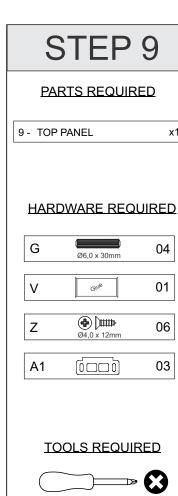



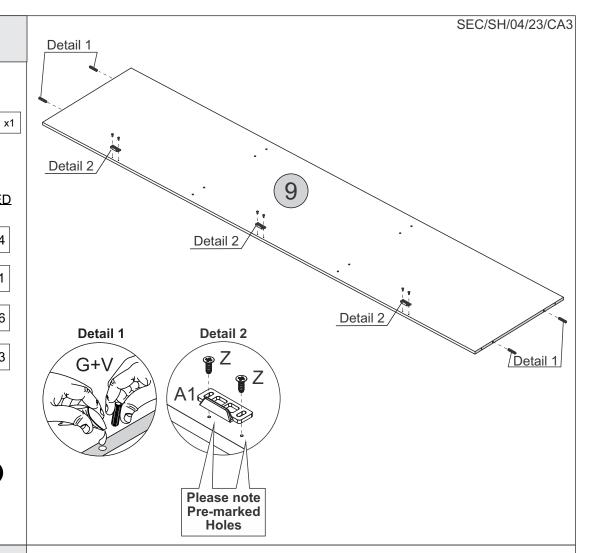

### **PARTS REQUIRED**


9 - TOP PANEL x1


### HARDWARE REQUIRED





Ø4,0 x 12mm



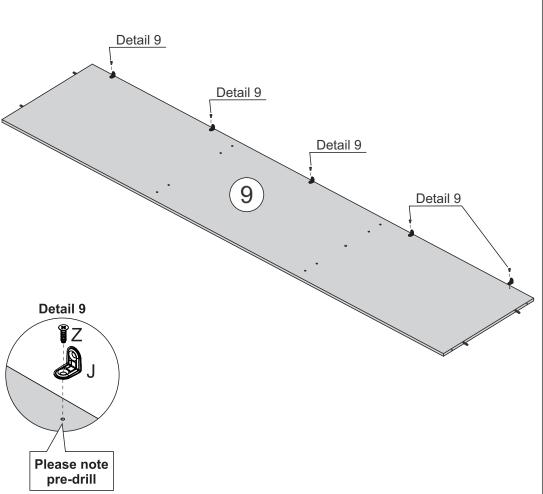

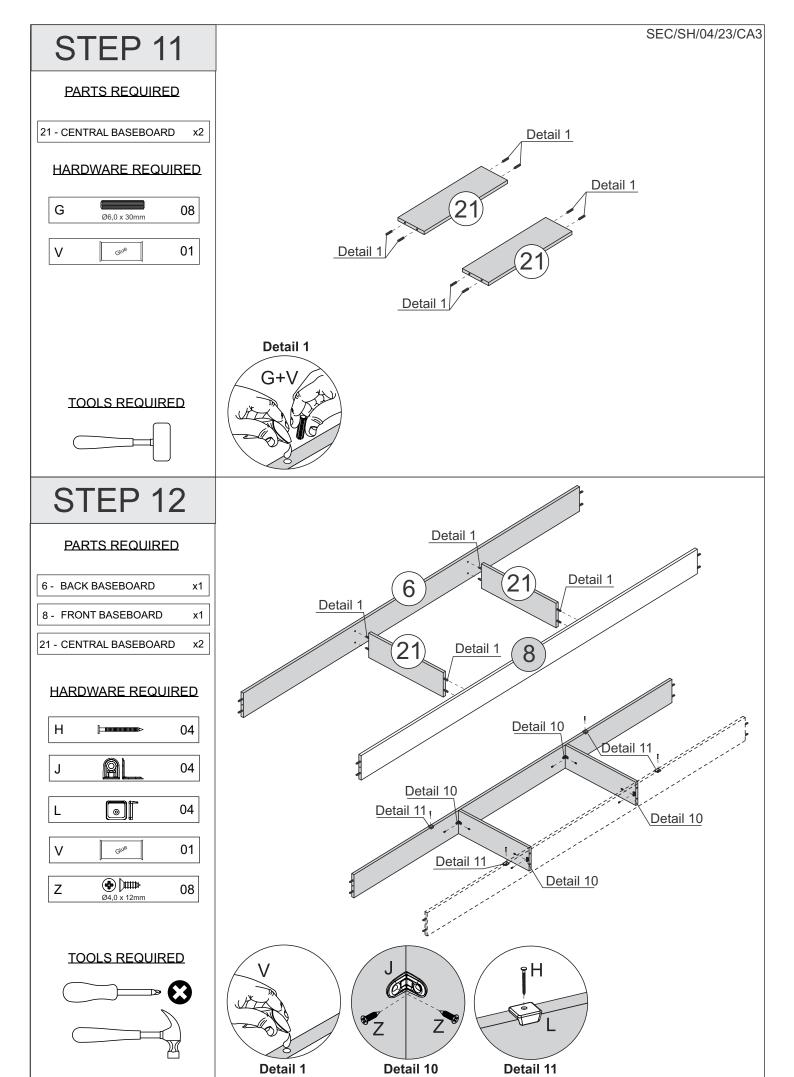


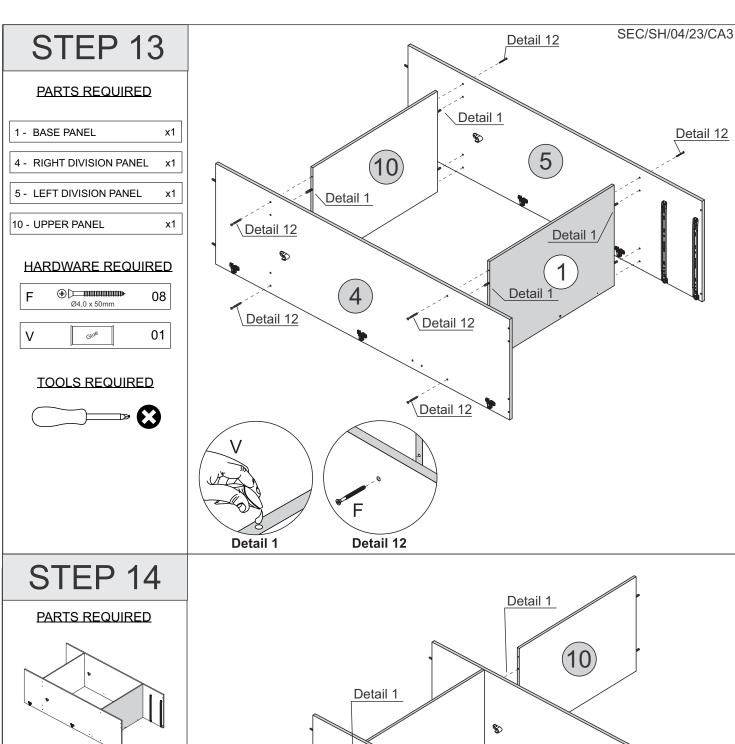

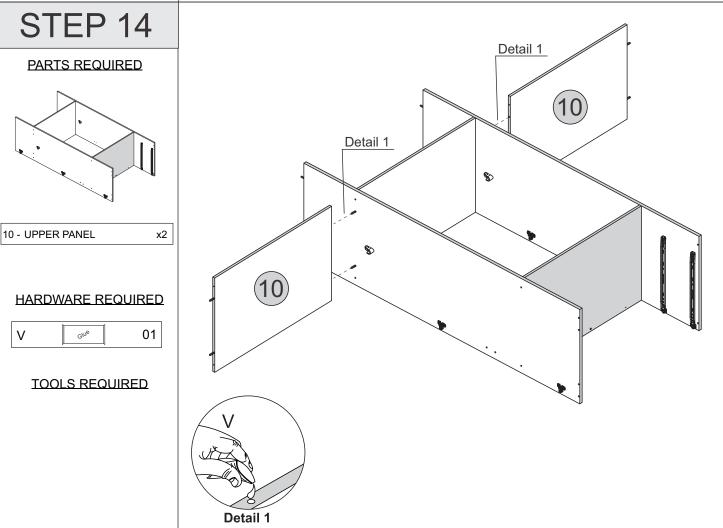


Detail 12


### PARTS REQUIRED

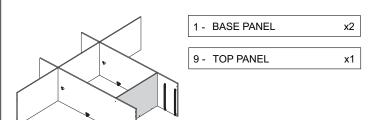


### HARDWARE REQUIRED

⊕ Ø4,0 x 50mm	80
	O F



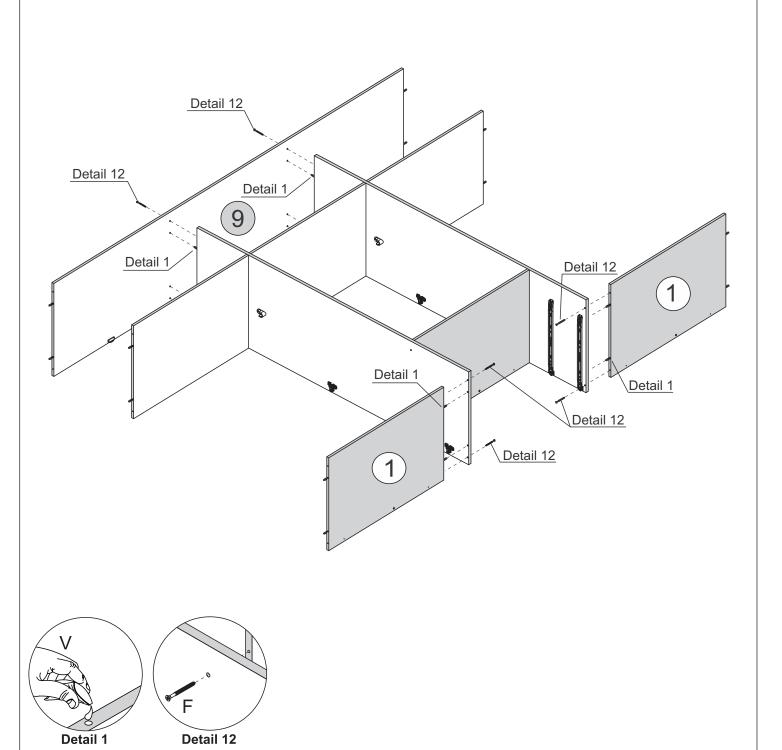

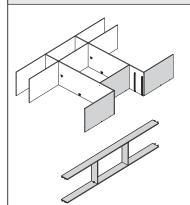

### PARTS REQUIRED


7 - LEFT SIDE PANEL


3 - RIGHT SIDE PANEL		x1


x1


### **HARDWARE REQUIRED**

F	⊕	16





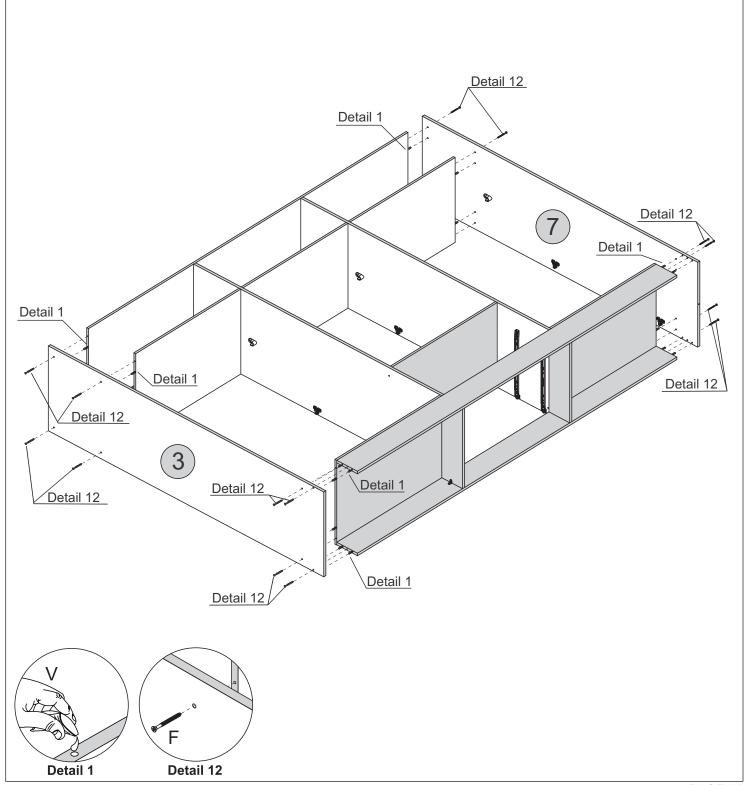

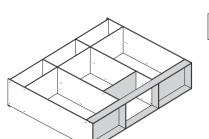


Detail 13

Detail 16


### PARTS REQUIRED

20 - BACK PANEL x

#### **HARDWARE REQUIRED**




### **TOOLS REQUIRED**




### IMPORTANT PLEASE FOLLOW!

Please make sure Part 20 is lined up correctly at the top before placing fitting H into the panel as this can affect the alignment of the doors once assembled.






\* For your future reference Order Number should be here

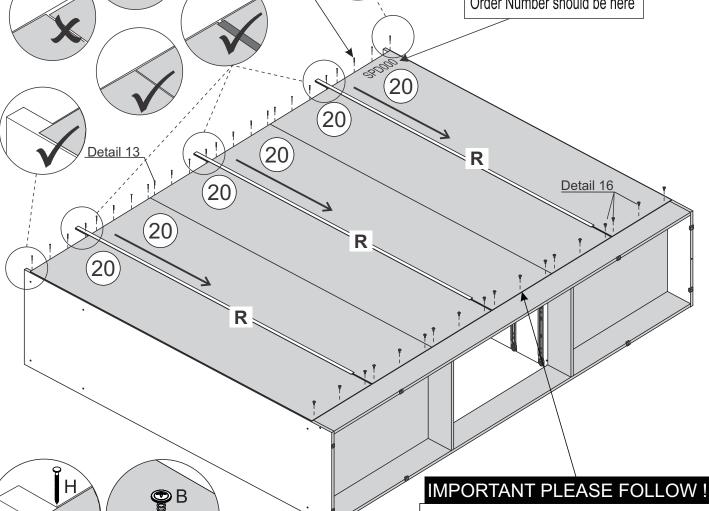

PARTS REQUIRED

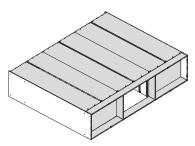



Detail 13

Detail 14

HARDWARE REQUIRED

Н	10 x 10	48
ı		24



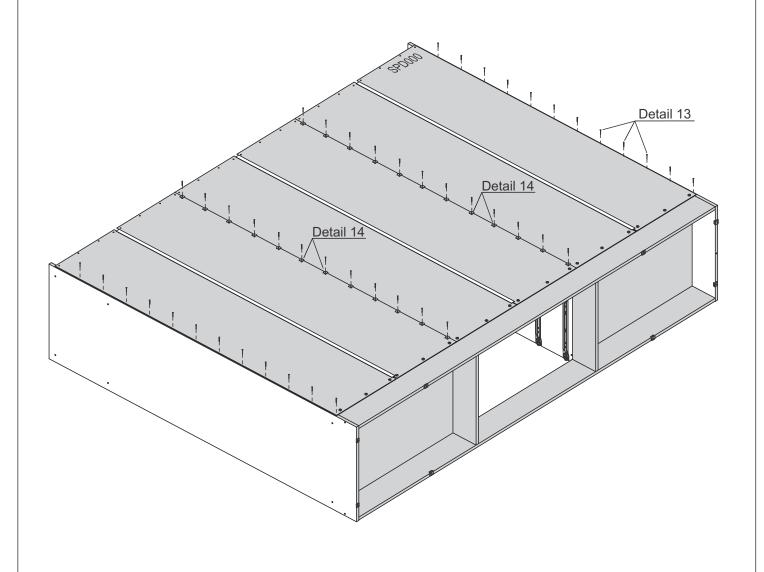


### PARTS REQUIRED





HARDWARE REQUIRED

Н	10 x 10	08
J		08




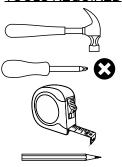

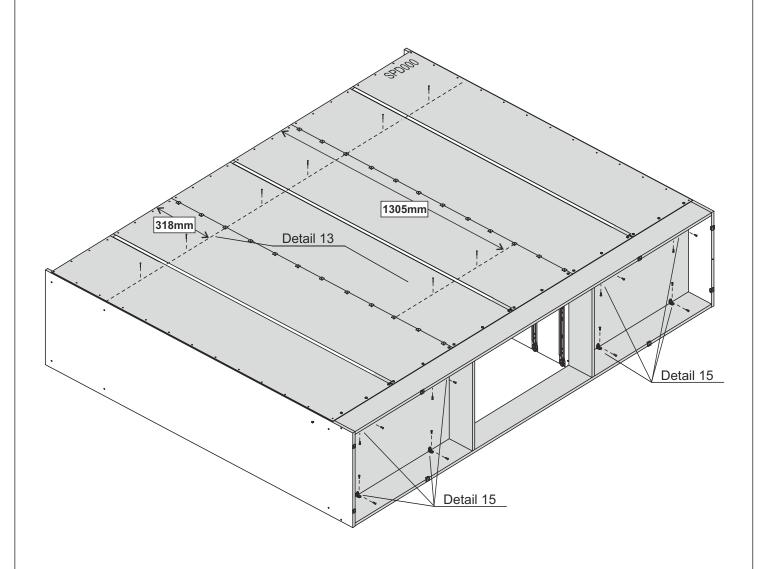

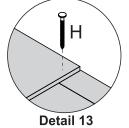




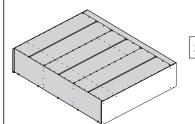



### PARTS REQUIRED

2 - FRAME x1


### **HARDWARE REQUIRED**






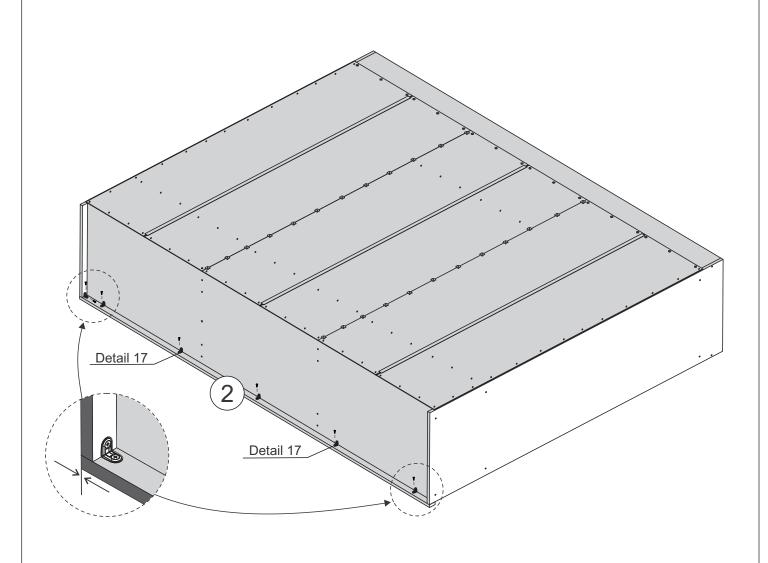

Detail 17

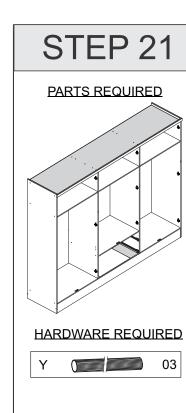

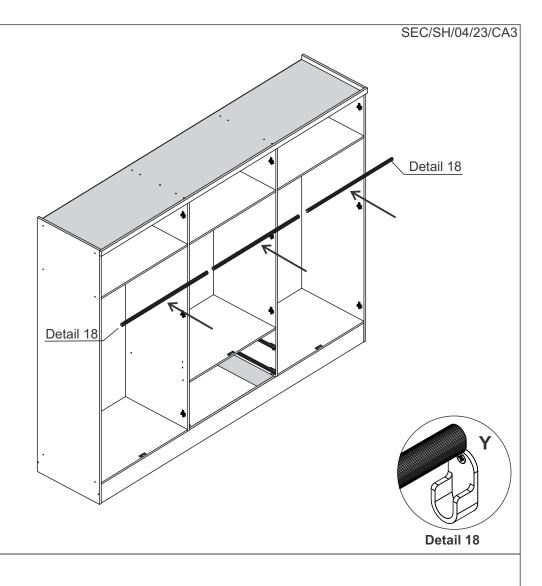





#### PARTS REQUIRED


15 - DRAWER SIDE x4 16 - DRAWER BACK PANEL


19 - DRAWER BOTTOM SUPPORT BAR x2


### **HARDWARE REQUIRED**



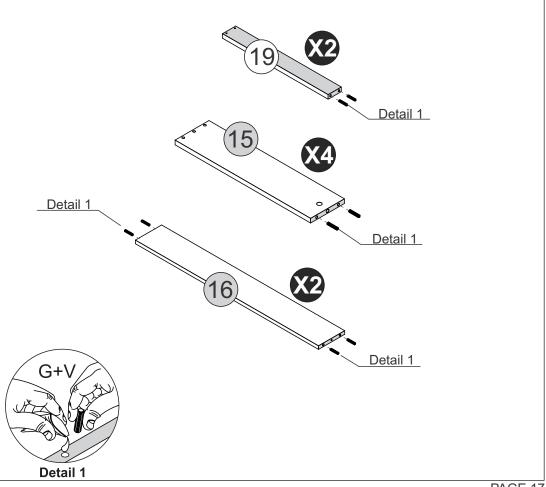


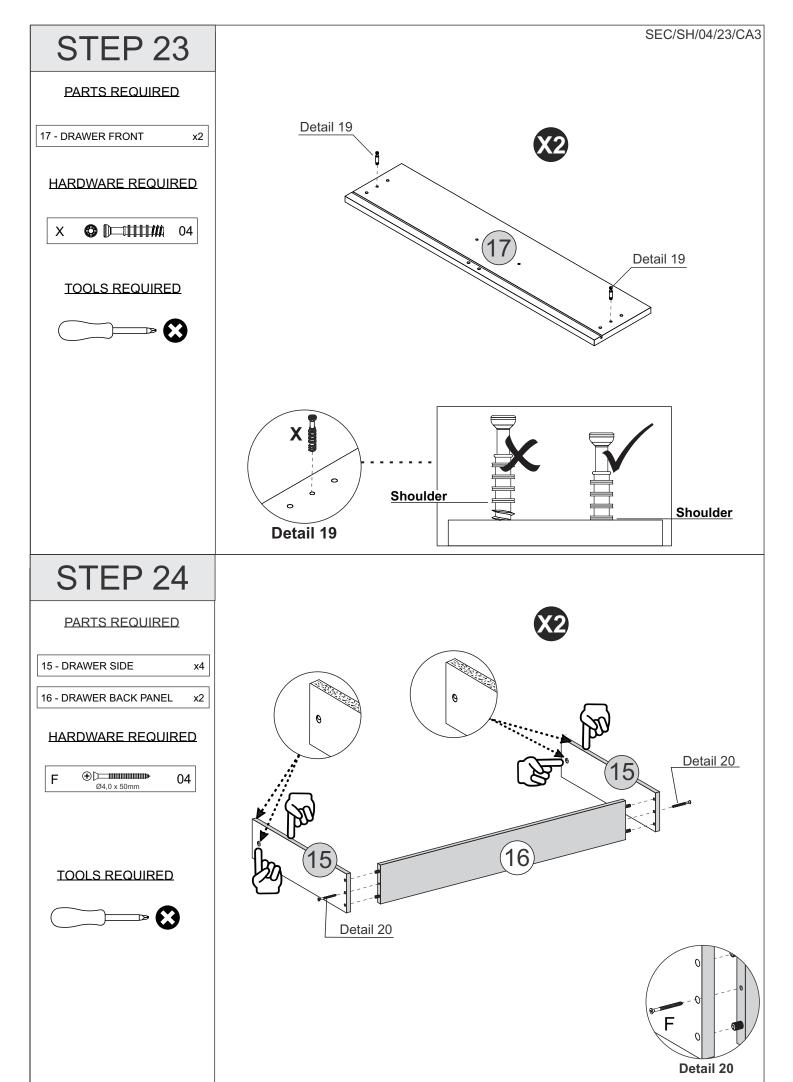

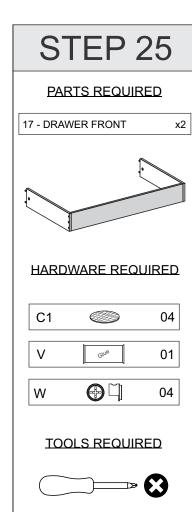


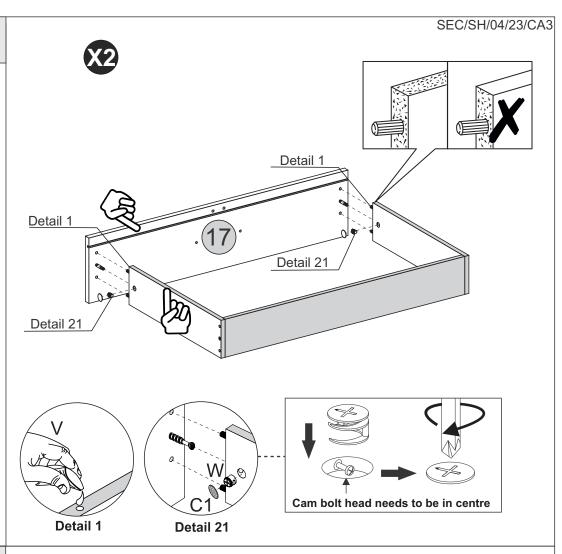




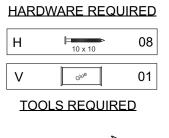



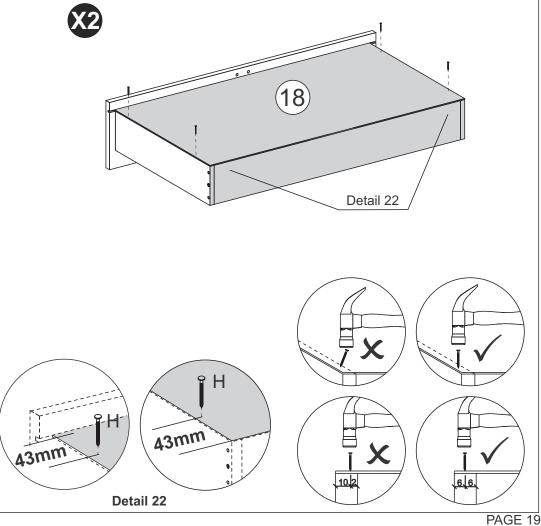

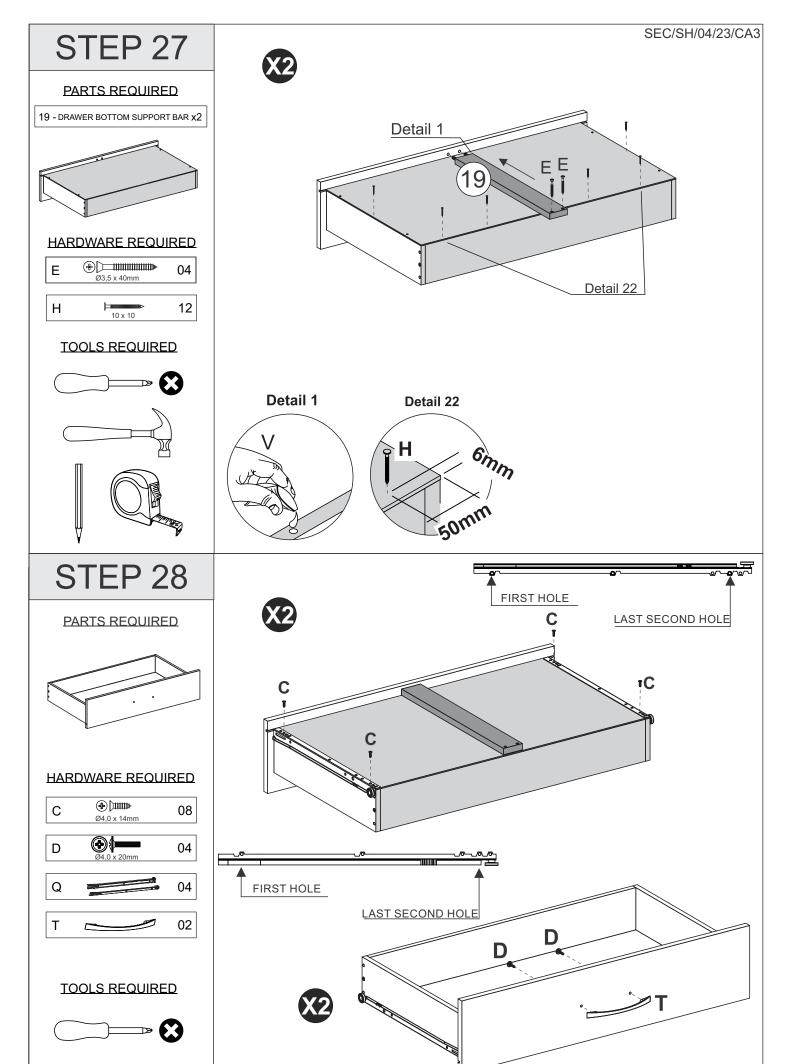



13 - RIGHT SMALL DOOR

14 - LEFT SMALL DOOR


x2

x2


x1


x1

### HARDWARE REQUIRED





#### **TOOLS REQUIRED**



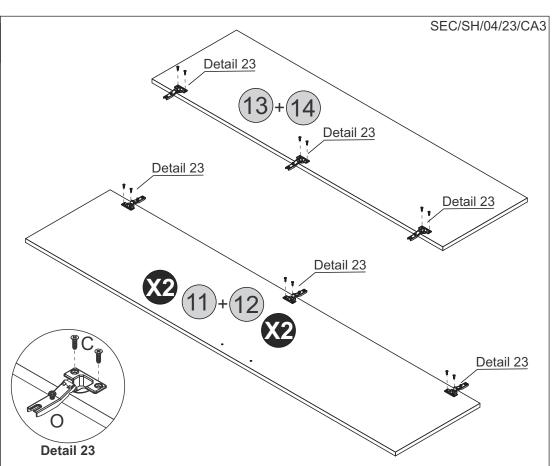



### STEP 30

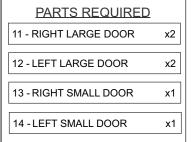


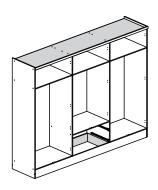

#### **HARDWARE REQUIRED**





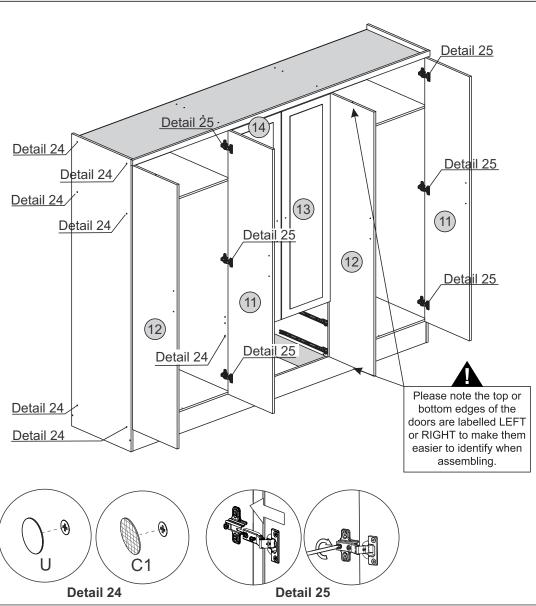









### **HARDWARE REQUIRED**



**TOOLS REQUIRED** 



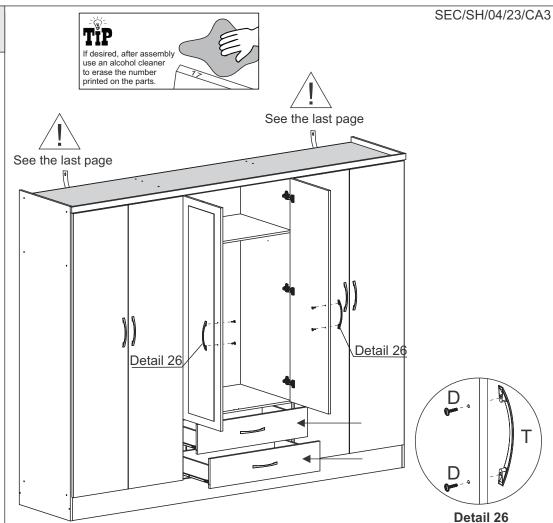


### STEP 32


PARTS REQUIRED





### HARDWARE REQUIRED







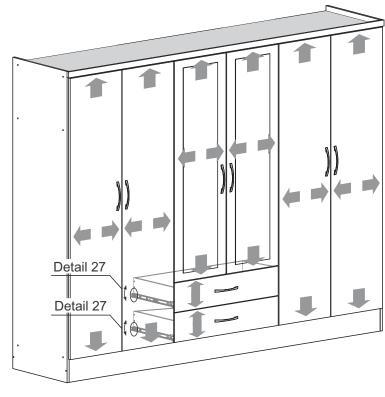





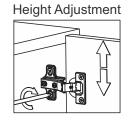









### **WARNING**

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.

Please make sure you use fixings suitable for the walls in your home.

