


# WHITE GLOSS SEVILLE 5 DRAWER NARROW CHEST ASSEMBLY INSTRUCTIONS

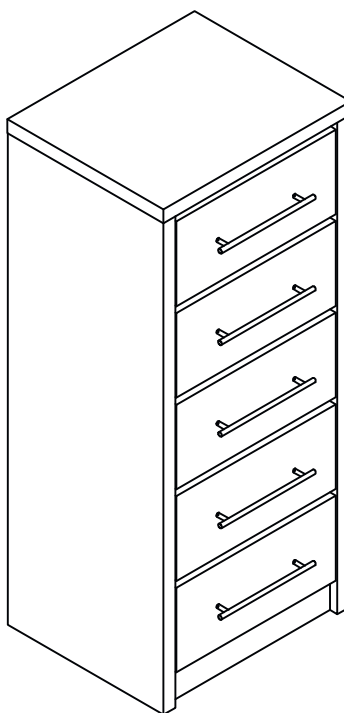

FOR DOMESTIC USE ONLY  
IMPORTANT

PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.

ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTING KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.



DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES, IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXINGS.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET). DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.

THIS SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.









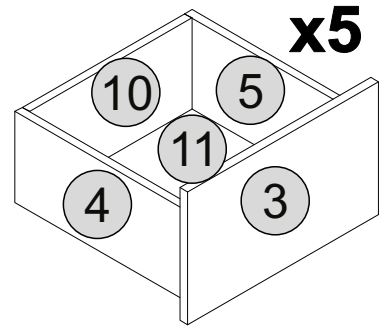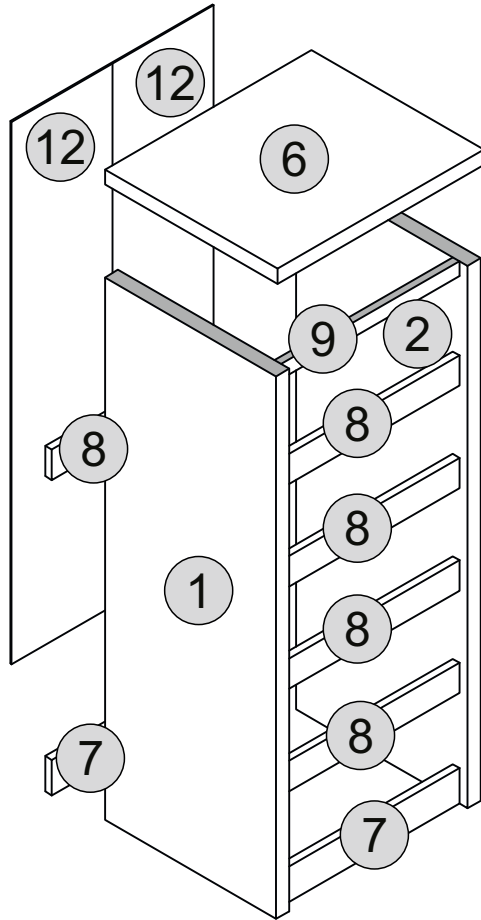







PLEASE NOTE THE CLEAR PROTECTIVE FILM WHICH NEEDS REMOVING FROM THE GLOSS FINISH.





## PART LIST

Part Number	Part Code	Part Description	Quantity	Carton
1	S100-102-083-ZF1-01	Left Side Panel	1	1/1
2	S100-102-083-ZF1-02	Right Side Panel	1	1/1
3	S100-102-083-ZF1-03	Drawer Front	5	1/1
4	S100-102-083-ZF1-04	Left Drawer Side	5	1/1
5	S100-102-083-ZF1-05	Right Drawer Side	5	1/1
6	S100-102-083-ZF1-06	Top Panel	1	1/1
7	S100-102-083-ZF1-07	Crossbar	2	1/1
8	S100-102-083-ZF1-08	Support	5	1/1
9	S100-102-083-ZF1-09	Support Panel	1	1/1
10	S100-102-083-ZF1-10	Drawer Back	5	1/1
11	S100-102-083-ZF1-11	Drawer Base	5	1/1
12	S100-102-083-ZF1-12	Back Panel	2	1/1

# HARDWARE LIST

No.	Part Name		Qty
A	Wooden Dowel (6x25mm)		x36
B	65mm Screw (4x65mm)		x14
C	14mm Screw (3.5x14mm)		x46
D	38mm Screw (4x38mm)		x20
E	Cam Bolt (8032T)		x14
F	Cam Nut (1512)		x14
G	10" Handle (192mm)		x5
H	20mm Handle Screw		x10
I	14" Drawer Slide		x5
J	PVC L - Bracket		x1
K	Plastic Foot		x4
L	6/8" Nail		x38
M	Wall Fixation (4x20mm=1pc)		x1
N	Screw Cover (Sticker 12mm)		x14




## TIPS FOR FITTINGS CAM-LOCKS

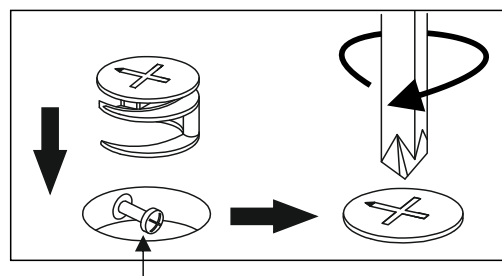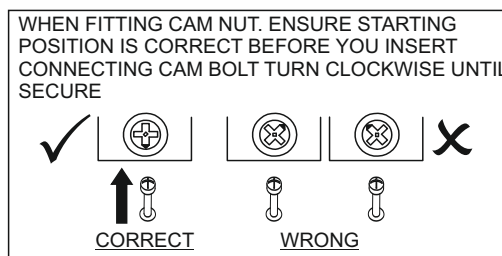

Cam bolt head needs to be in centre

### CAMBOLT

Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example below)

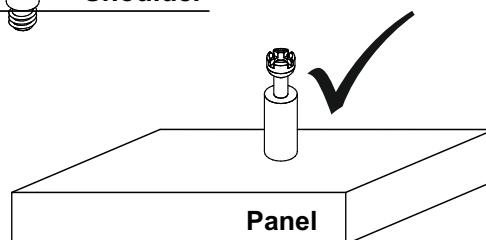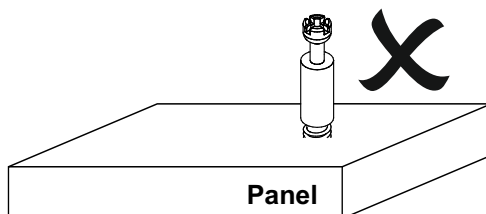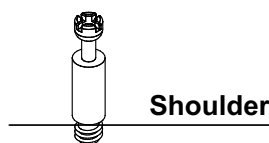

# STEP 1


## PARTS REQUIRED

1 - LEFT SIDE PANEL x1

2 - RIGHT SIDE PANEL x1







## HARDWARE REQUIRED

C  20  
3.5x14mm

I  05

K  04

## TOOLS REQUIRED

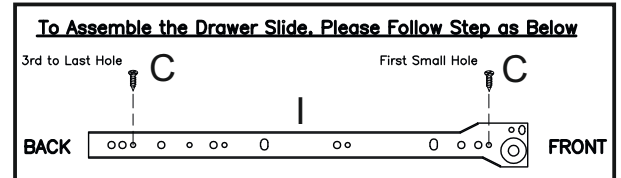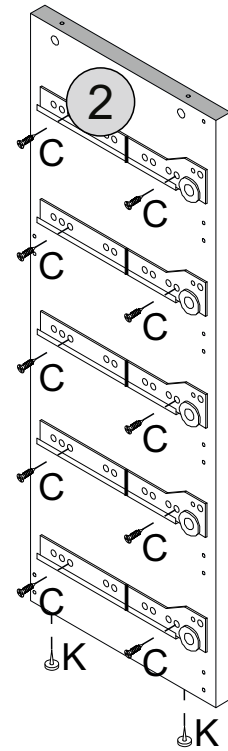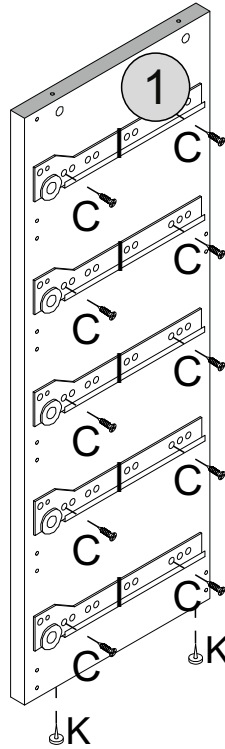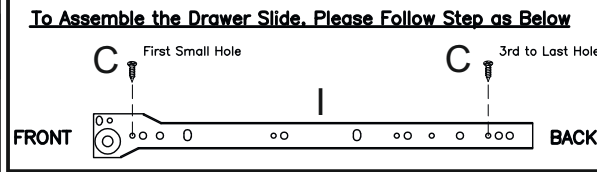



# STEP 2


## PARTS REQUIRED

6 - TOP PANEL x1



## HARDWARE REQUIRED

C  02  
3.5x14mm

E  04

J  01

## TOOLS REQUIRED

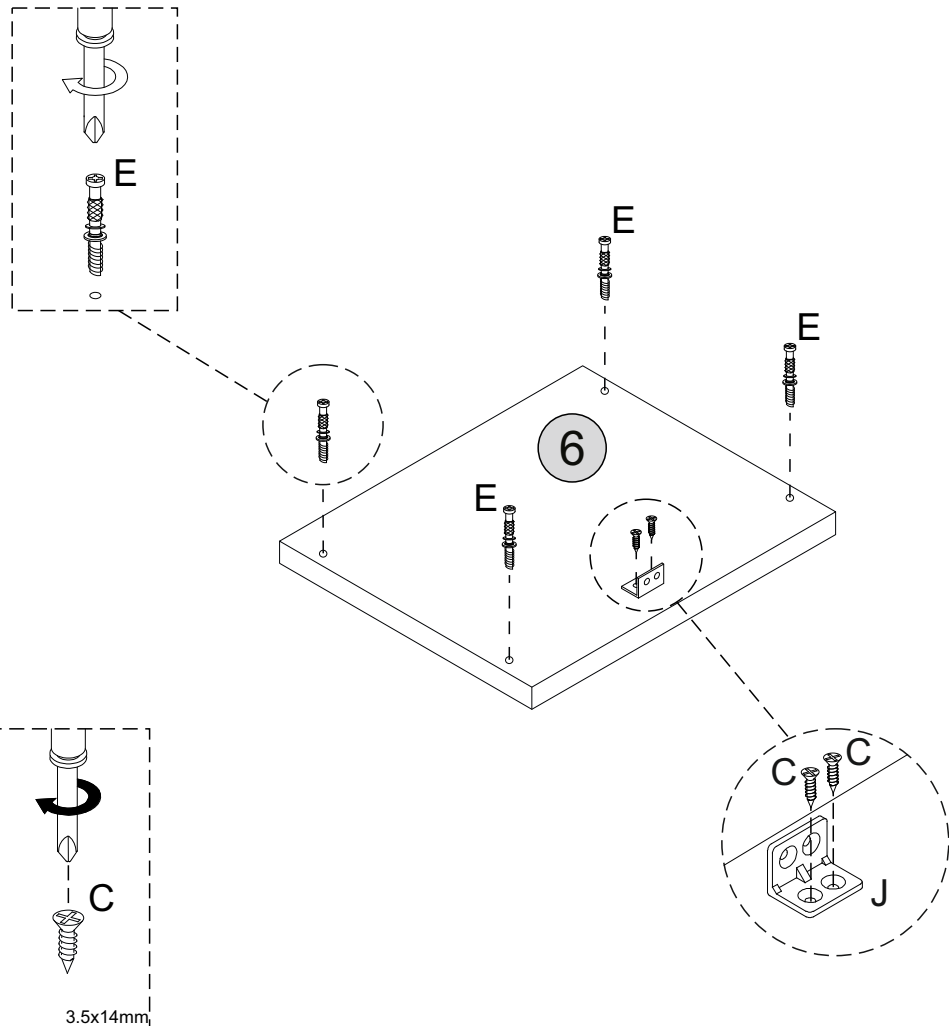


# STEP 3



## PARTS REQUIRED

7 - CROSSBAR	x2
8 - SUPPORT	x5
9 - SUPPORT PANEL	x1

## HARDWARE REQUIRED

A		16
---	---	----

## TOOLS REQUIRED

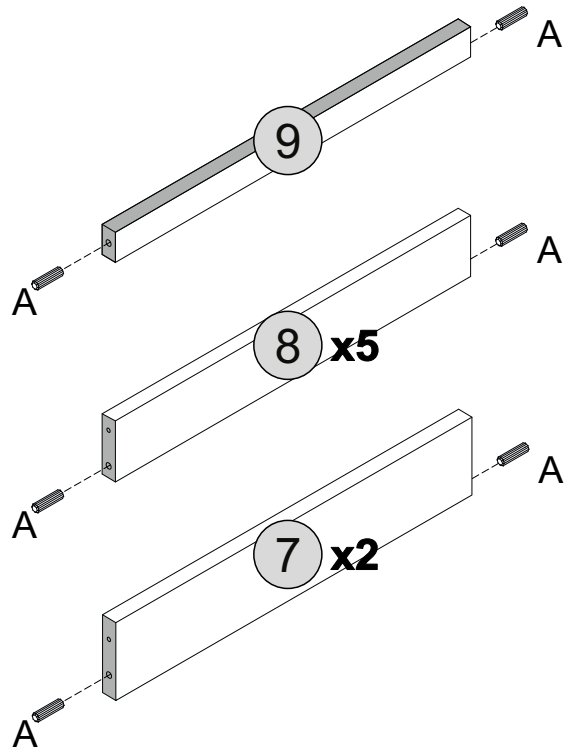


# STEP 4




## PARTS REQUIRED

2 - RIGHT SIDE PANEL	x1
7 - CROSSBAR	x2
8 - SUPPORT	x5

## HARDWARE REQUIRED

B		07
---	---	----

## TOOLS REQUIRED

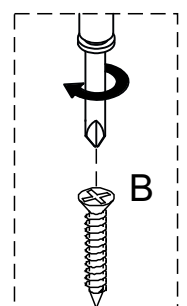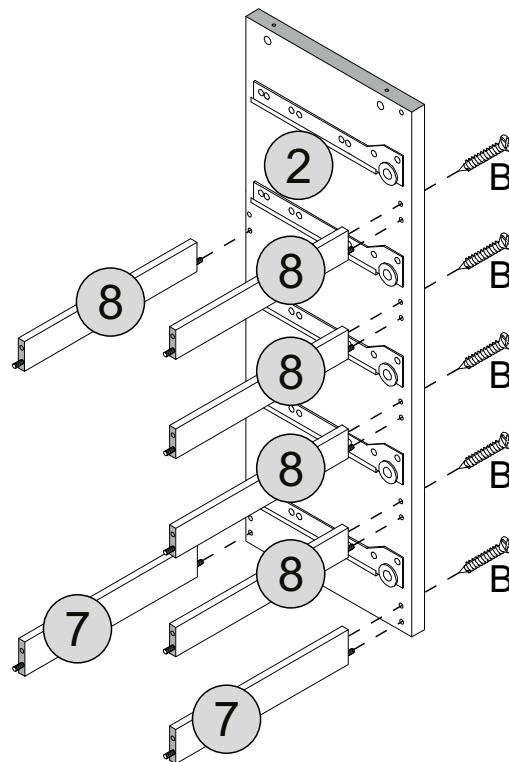


# STEP 5


## PARTS REQUIRED

1 - LEFT SIDE PANEL x1




9 - SUPPORT PANEL x1

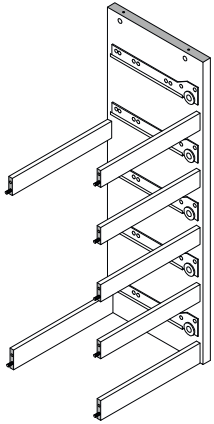

## HARDWARE REQUIRED


B  07  
4x65mm

## TOOLS REQUIRED

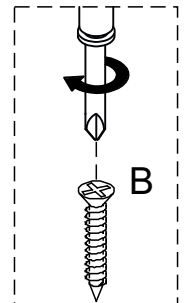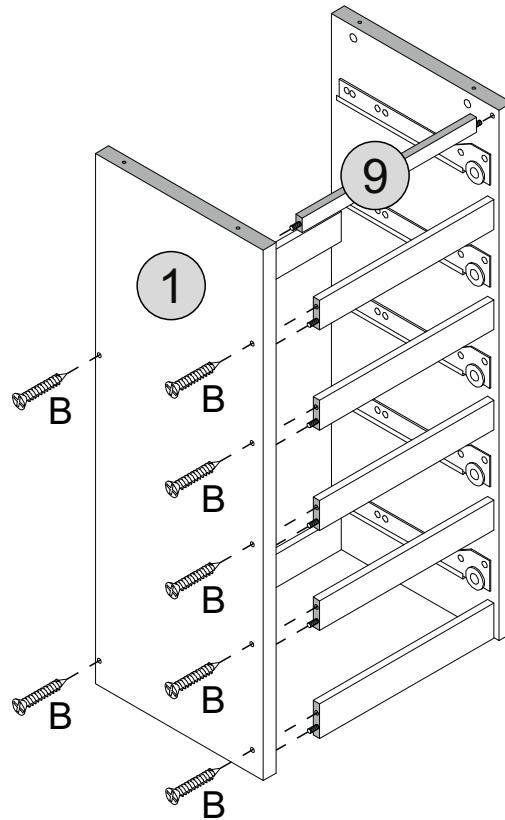


# STEP 6

## PARTS REQUIRED

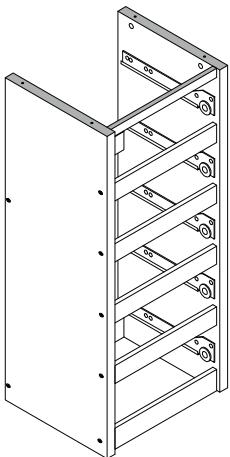


## HARDWARE REQUIRED

F  04

N  14


## TOOLS REQUIRED

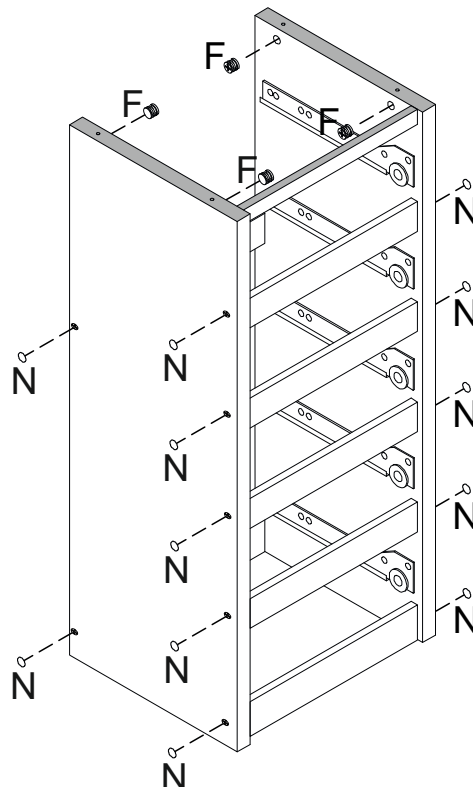

# STEP 7

## PARTS REQUIRED


6 - TOP PANEL x1

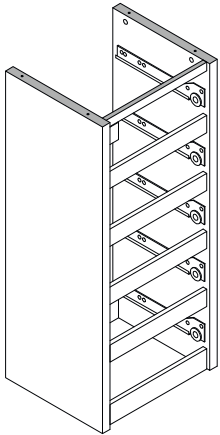





## HARDWARE REQUIRED

C 3.5x14mm 02

## TOOLS REQUIRED




**When Fitting Cams**  
Ensure the starting position is correct before you insert the connecting bolt, turn clockwise until secure.

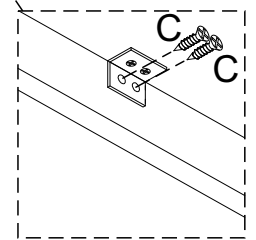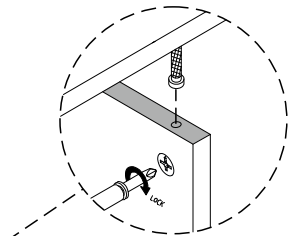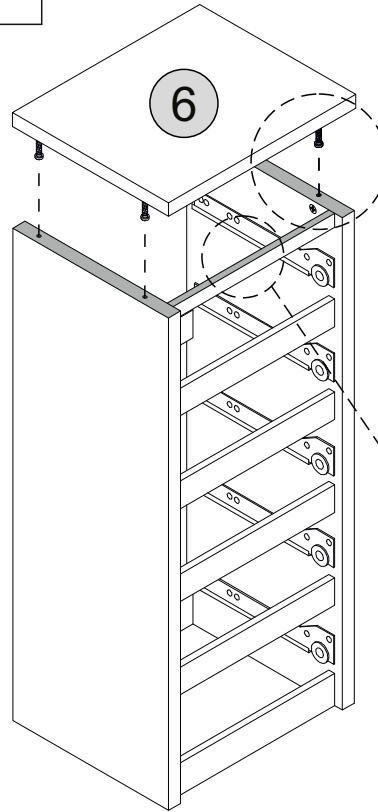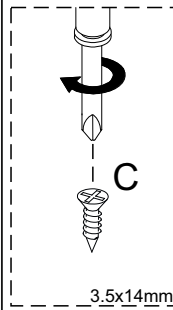

# STEP 8

## PARTS REQUIRED

12 - BACK PANEL x2





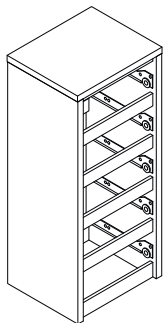


## HARDWARE REQUIRED

C 3.5x14mm 02

L 28

## TOOLS REQUIRED

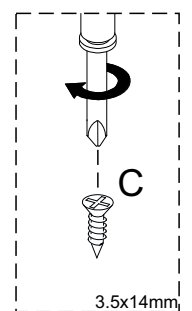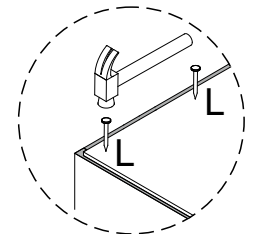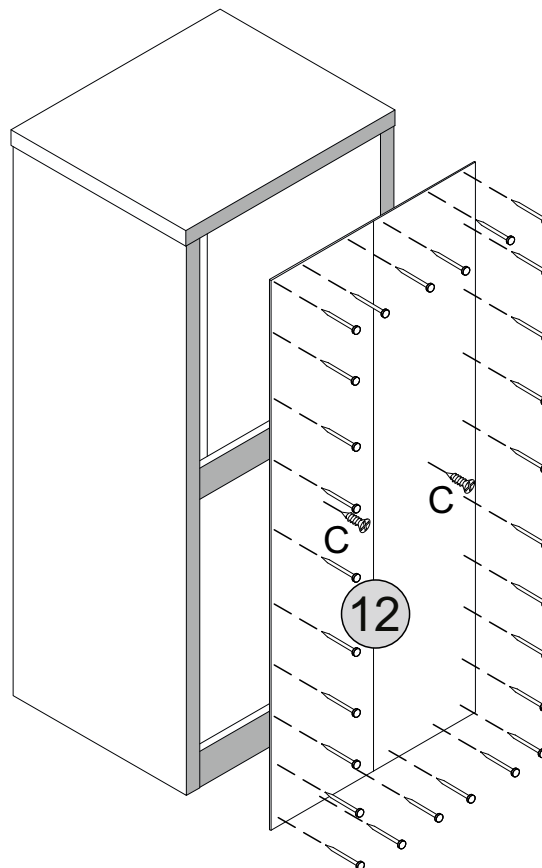




# STEP 9



## PARTS REQUIRED

3 - DRAWER FRONT	x5
4 - LEFT DRAWER SIDE	x5
5 - RIGHT DRAWER SIDE	x5

## HARDWARE REQUIRED

A		20
E		10
F		10

## TOOLS REQUIRED

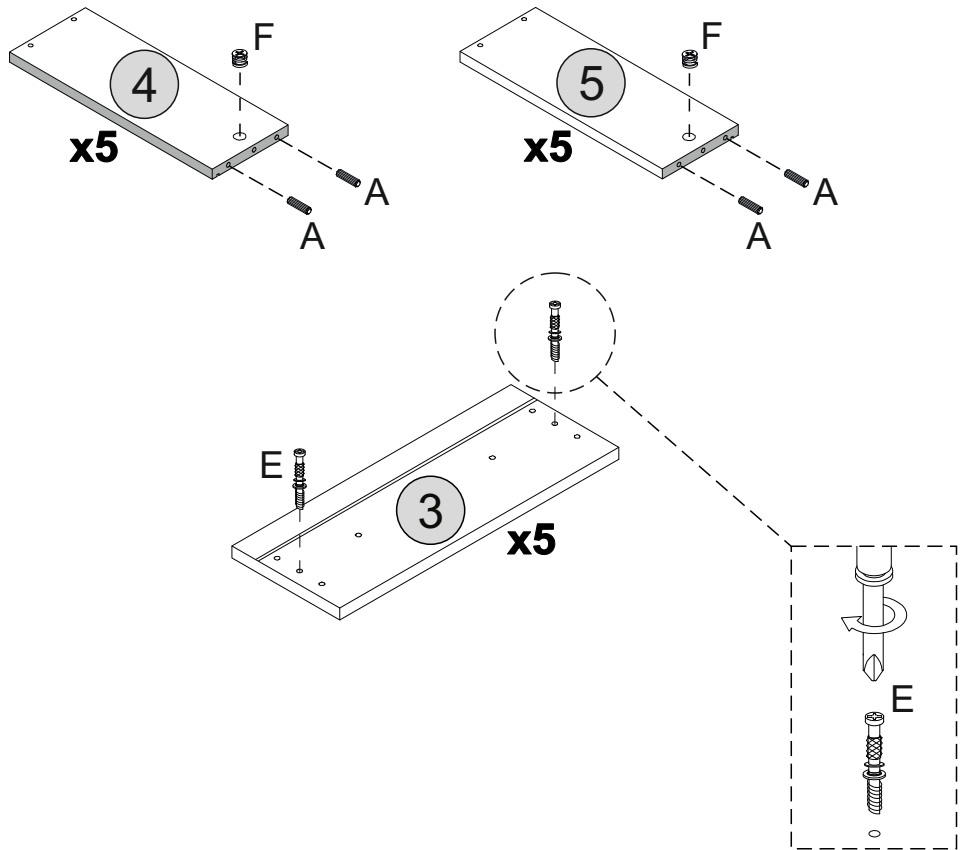

# STEP 10



## PARTS REQUIRED

4 - LEFT DRAWER SIDE	x5
5 - RIGHT DRAWER SIDE	x5
10- DRAWER BACK	x5

## HARDWARE REQUIRED

D	 4x38mm	20
---	--	----

## TOOLS REQUIRED

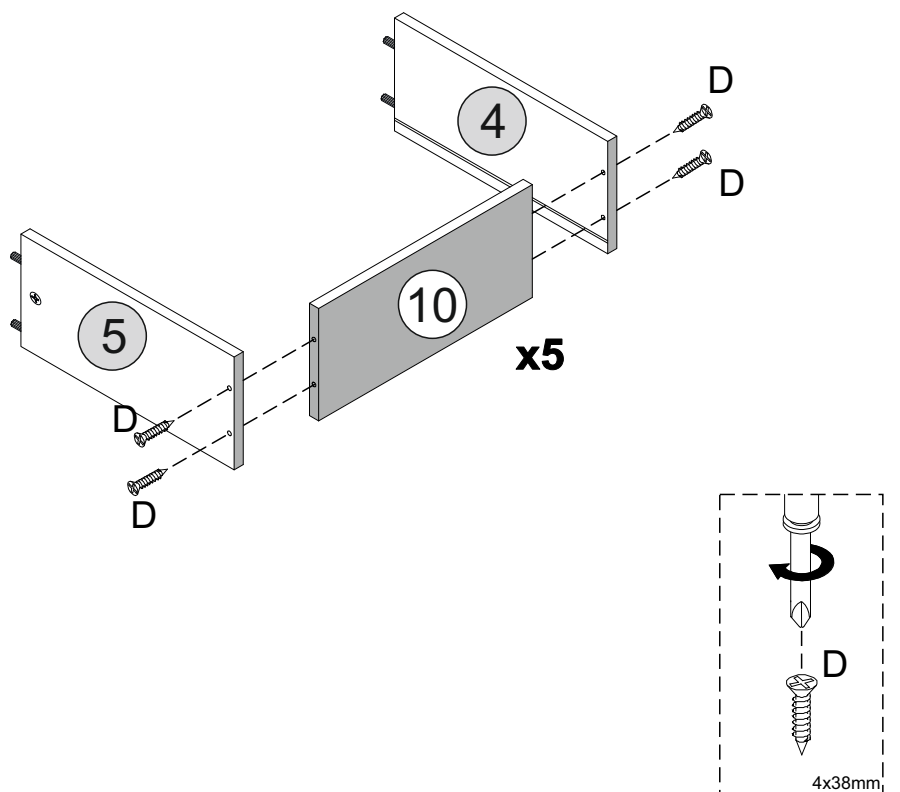




# STEP 11


## PARTS REQUIRED

11 - DRAWER BASE x5

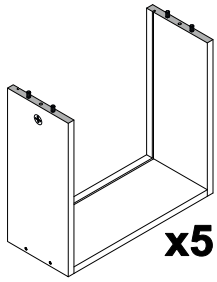

## HARDWARE REQUIRED


## TOOLS REQUIRED

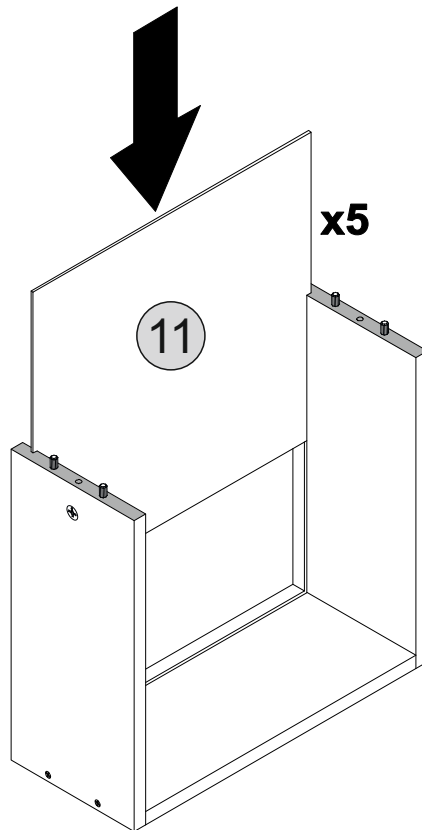

# STEP 12


## PARTS REQUIRED

3 - DRAWER FRONT x5


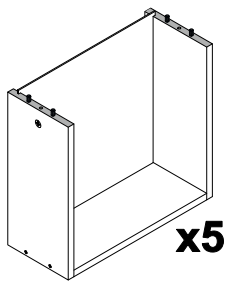


## HARDWARE REQUIRED

## TOOLS REQUIRED




**When Fitting Cams**  
 Ensure the starting position is correct before you insert the connecting bolt, turn clockwise until secure.

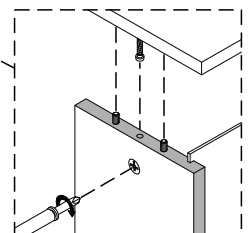
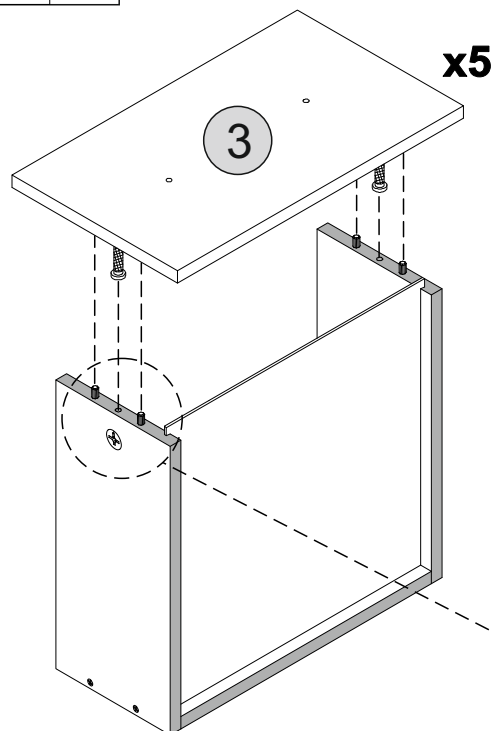


# STEP 13



**PARTS REQUIRED**

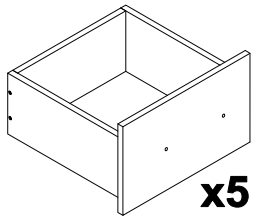

**HARDWARE REQUIRED**




**TOOLS REQUIRED**

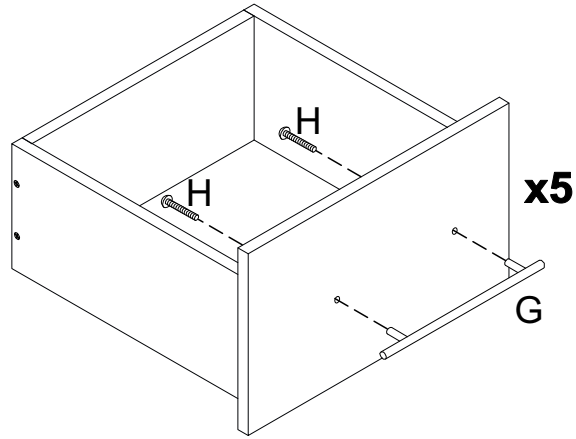

# STEP 14





**PARTS REQUIRED**

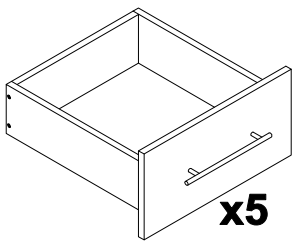

**HARDWARE REQUIRED**





**TOOLS REQUIRED**

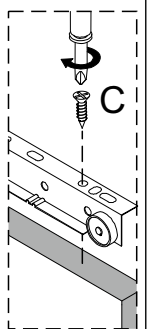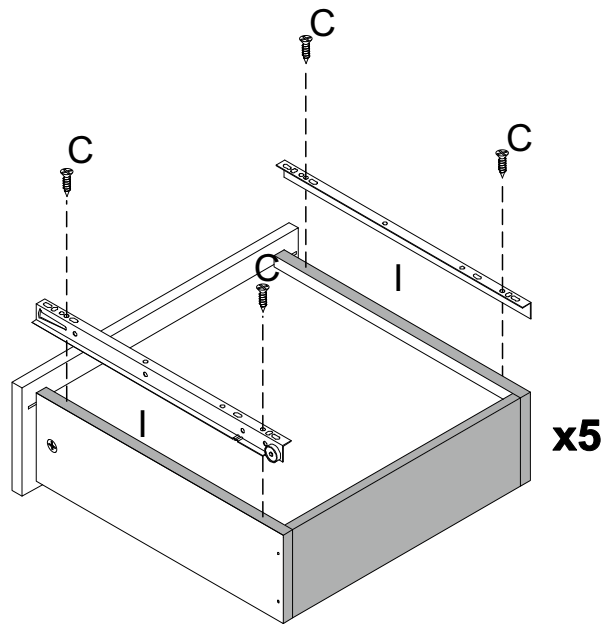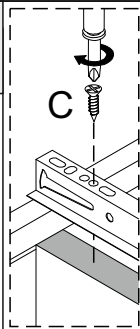


# STEP 15

PARTS REQUIRED

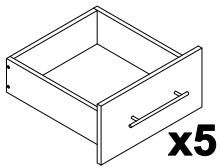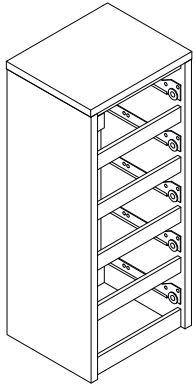

HARDWARE REQUIRED

TOOLS REQUIRED

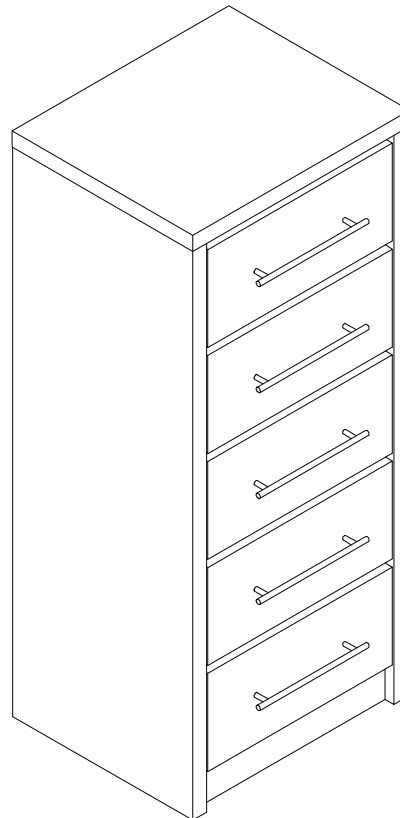


PLEASE NOTE THE CLEAR PROTECTIVE FILM WHICH NEEDS REMOVING FROM THE GLOSS FINISH.

# STEP 16

## WARNING

**Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.**

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.

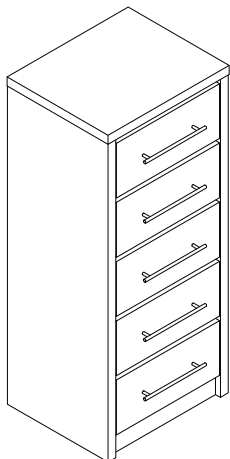

HARDWARE REQUIRED



TOOLS REQUIRED

