
NORDIC 3 DRAWER CHEST ASSEMBLY INSTRUCTIONS

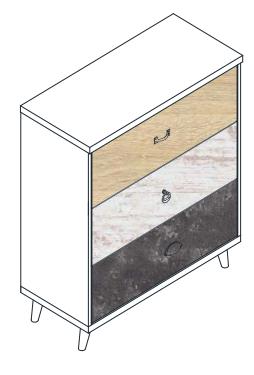





FOR DOMESTIC USE ONLY IMPORTANT PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.


ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTING KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES, IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXINGS.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET). <u>DO</u> NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.

THIS SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

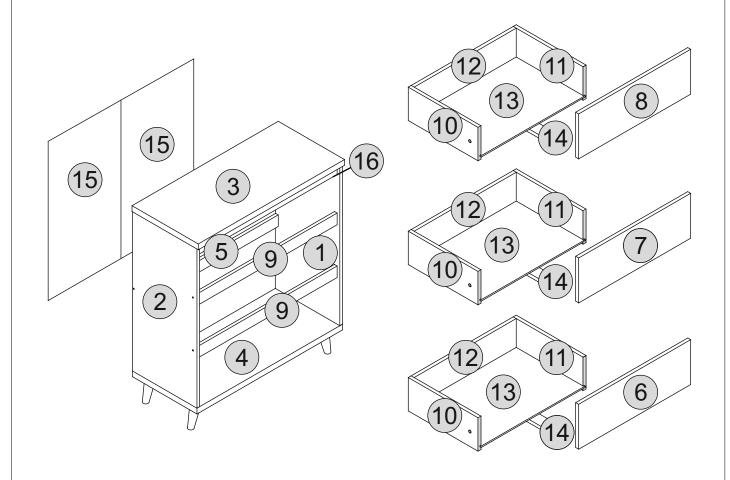


PART LIST


Part Number	Part Code	Part Description	Quantity	<u>Carton</u>
1	S100-102-097-TA1-01	Right Side Panel	1	1/1
2	S100-102-097-TA1-02	Left Side Panel	1	1/1
3	S100-102-097-TA1-03	Top Panel	1	1/1
4	S100-102-097-TA1-04	Bottom Panel	1	1/1
5	S100-102-097-TA1-05	Back Support Panel	1	1/1
6	S100-102-097-TA1-06	Drawer Front	1	1/1
7	S100-102-097-TA1-07	Drawer Front	1	1/1
8	S100-102-097-TA1-08	Drawer Front	1	1/1
9	S100-102-097-TA1-09	Support Panel	2	1/1
10	S100-102-097-TA1-10	Left Drawer Side	3	1/1
11	S100-102-097-TA1-11	Right Drawer Side	3	1/1
12	S100-102-097-TA1-12	Drawer Back	3	1/1
13	S100-102-097-TA1-13	Drawer Base	3	1/1
14	S100-102-097-TA1-14	Drawer Support	3	1/1
15	S100-102-097-TA1-15	Back Panel	2	1/1
16	S100-102-097-TA1-16	Top Support Panel	1	1/1

HARDWARE LIST

No.	Part Name		Qty	No.	Part Name		Qty
А	Wooden Dowel (6x30mm)		x28	ı	14" Drawer Slide	6	x3
В	45mm Screw (4x45mm)	4x45mm	x10	J	Screw Cover	(A)	х6
С	14mm Screw (3.5x14mm)	3.5x14mm	x46	К	Wall Fixings (4x20mm=1pc)	-	x1
D	38mm Screw (4x38mm)	4x38mm	x15	L	Handle+Screw (3.5x14mm=4pcs)		x 1
Е	Cam Bolt	(a)—1888) 1)	x13	М	Handle+Screw (4x20mm=1pc)	6-	x1
F	Cam Nut	W. C.	x13	N	Handle+Screw (3.5x14mm=2pcs)	-0	x1
G	Wood Leg + Plastic Foot		х4	0	PVC L- Bracket		x1
Н	6/8" Nail	0-	x30				

TIPS FOR FITTINGS CAM-LOCKS

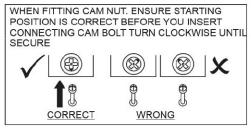

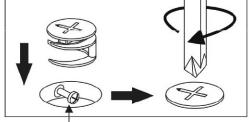

Cam bolt head needs to be in centre

CAMBOLT

Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example below)

Shoulder

Panel

Panel





2 - LEFT SIDE PANEL x1

HARDWARE REQUIRED



TOOLS REQUIRED



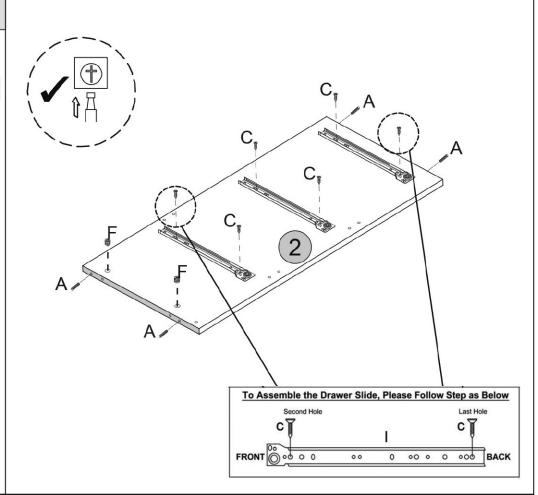


STEP 2


PARTS REQUIRED

1 - RIGHT SIDE PANEL x1

HARDWARE REQUIRED





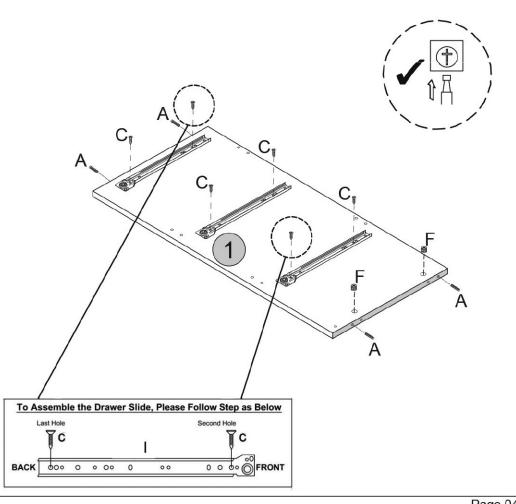


STEP 3


PARTS REQUIRED


3 - TOP PANEL x1

HARDWARE REQUIRED



TOOLS REQUIRED



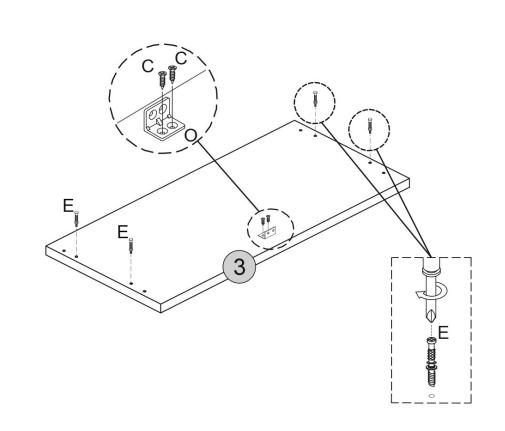

STEP 4

PARTS REQUIRED


5 - BACK SUPPORT PANEL x1

9 - SUPPORT PANEL x2

16 -TOP SUPPORT PANEL x1

HARDWARE REQUIRED



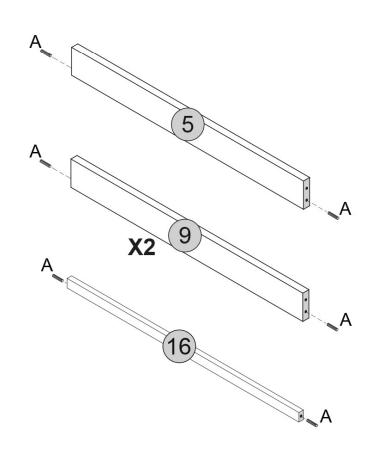





- 2 LEFT SIDE PANEL x1
- 5 BACK SUPPORT PANEL x1
- 9 SUPPORT PANEL x2

HARDWARE REQUIRED



TOOLS REQUIRED



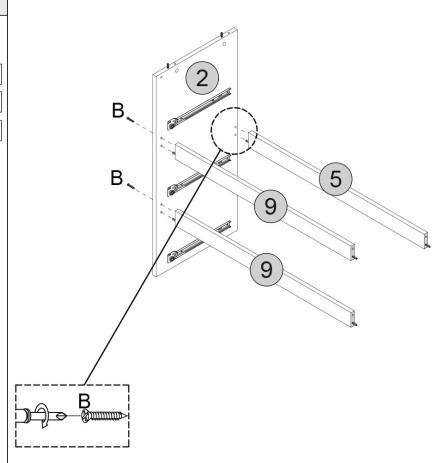

STEP 6


PARTS REQUIRED


1 - RIGHT SIDE PANEL x1


16 -TOP SUPPORT PANEL x1



HARDWARE REQUIRED





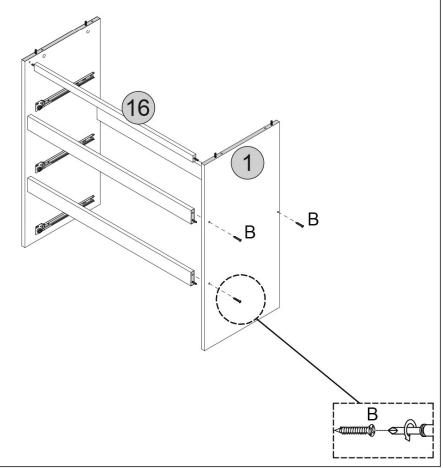







HARDWARE REQUIRED

В	4x45mm	04
С	(∑)))> 3.5x14mm	02

TOOLS REQUIRED



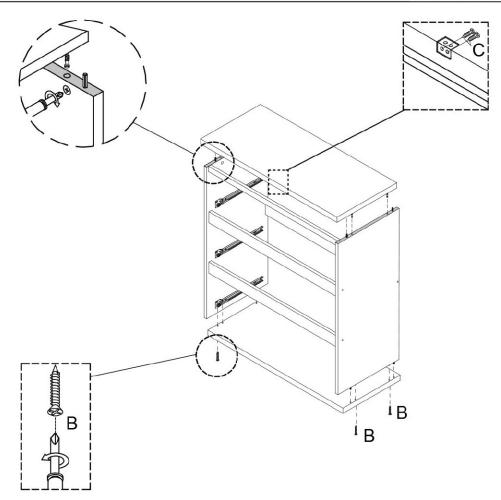

STEP 8


PARTS REQUIRED





HARDWARE REQUIRED

С	3.5x14mm	18
G		04
Н	0	30


TOOLS REQUIRED



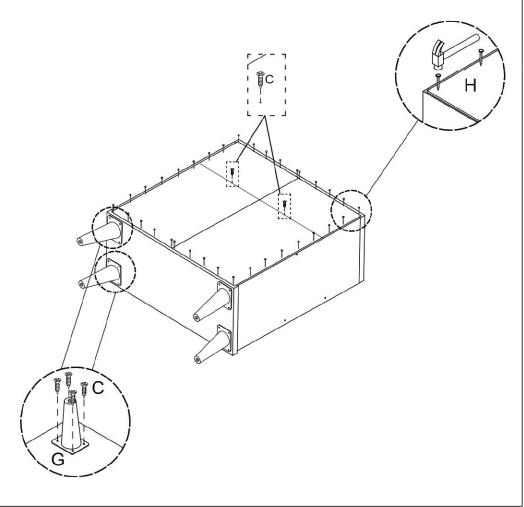


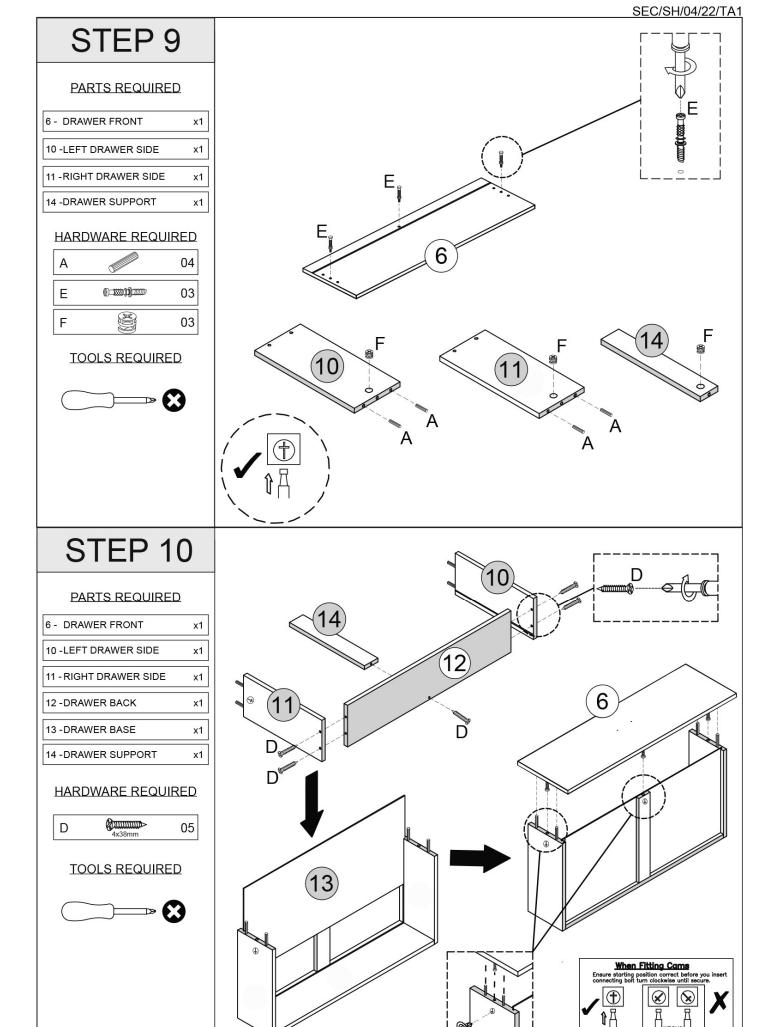






HARDWARE REQUIRED



TOOLS REQUIRED



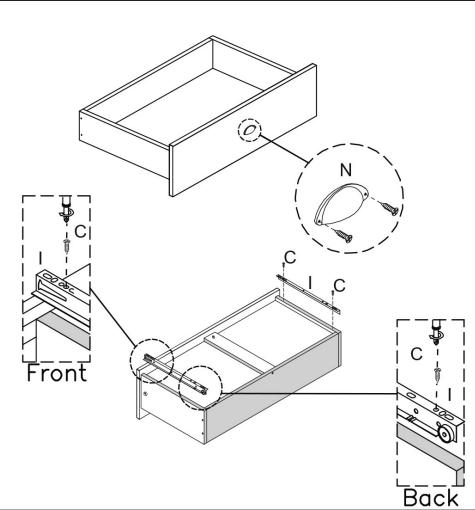


STEP 12


PARTS REQUIRED

7 - DRAWER FRONT	x1
10 -LEFT DRAWER SIDE	x1
11 -RIGHT DRAWER SIDE	x1
14 -DRAWER SUPPORT	x1

HARDWARE REQUIRED





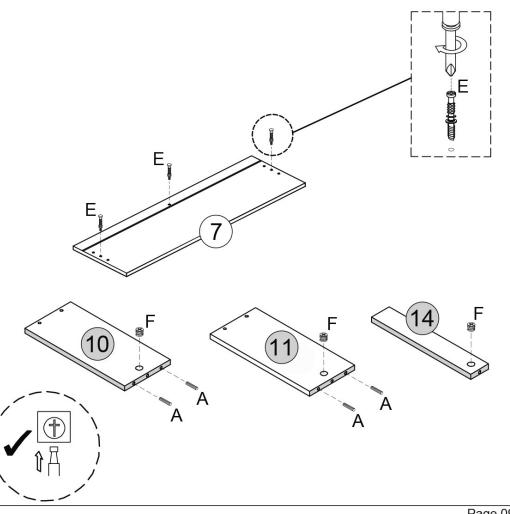





7 - DRAWER FRONT	x1
10 -LEFT DRAWER SIDE	x1
11 -RIGHT DRAWER SIDE	x1
12 -DRAWER BACK	x1
13 -DRAWER BASE	x1
14 -DRAWER SUPPORT	x1

HARDWARE REQUIRED




TOOLS REQUIRED



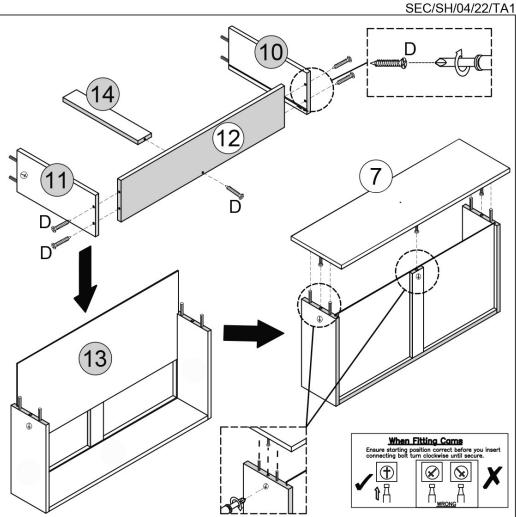


STEP 14


PARTS REQUIRED

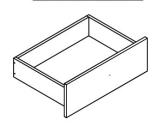

HARDWARE REQUIRED

С	③> 3.5x14mm	04
1	6	01
М		01



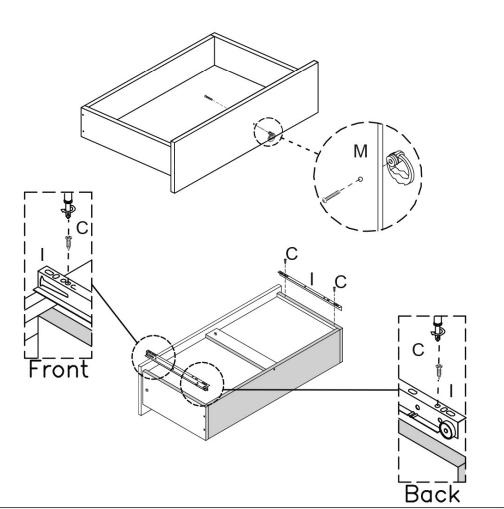




8 - DRAWER FRONT LARGE x1

10 -LEFT DRAWER SIDE x

11 -RIGHT DRAWER SIDE x1


14 -DRAWER SUPPORT x1

HARDWARE REQUIRED



TOOLS REQUIRED



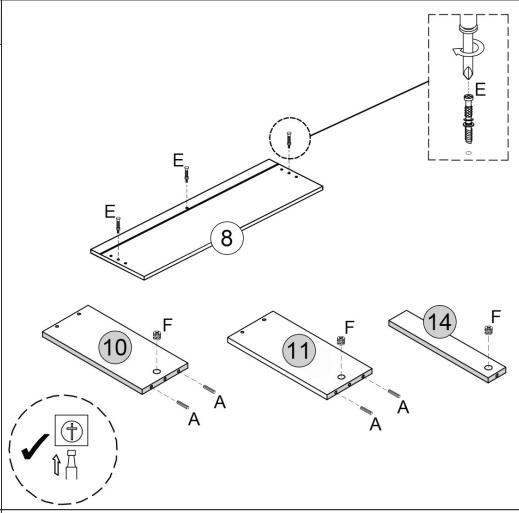


STEP 16


PARTS REQUIRED

08 -DRAWER FRONT	x1
10 -LEFT DRAWER SIDE	x1
11 -RIGHT DRAWER SIDE	x1
12 -DRAWER BACK	x1
13 -DRAWER BASE	x1
14 -DRAWER SUPPORT	x1


HARDWARE REQUIRED





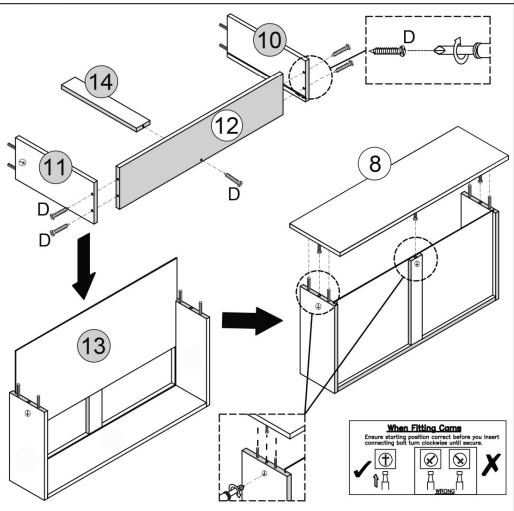






HARDWARE REQUIRED

С	3.5x14mm	04
1		01
L		01

TOOLS REQUIRED




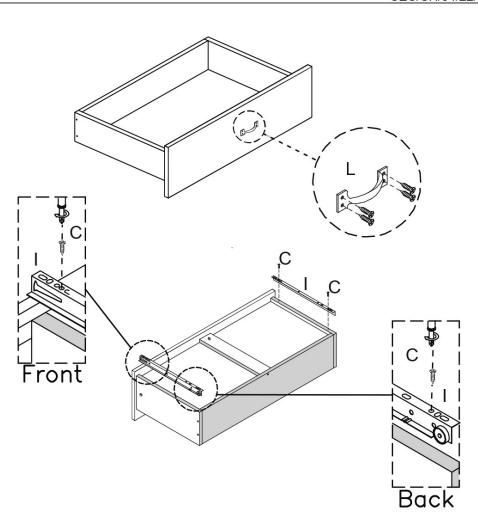

STEP 18


PARTS REQUIRED





HARDWARE REQUIRED



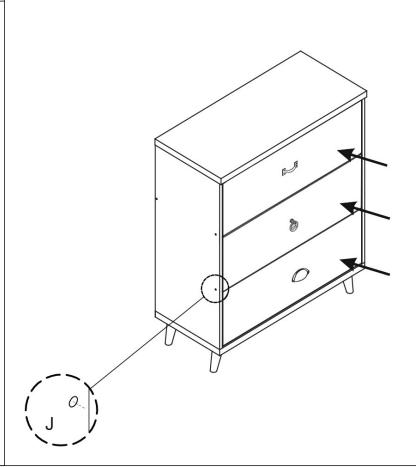

STEP 19

PARTS REQUIRED



HARDWARE REQUIRED



TOOLS REQUIRED



WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.

Please make sure you use fixings suitable for the walls in your home.

