
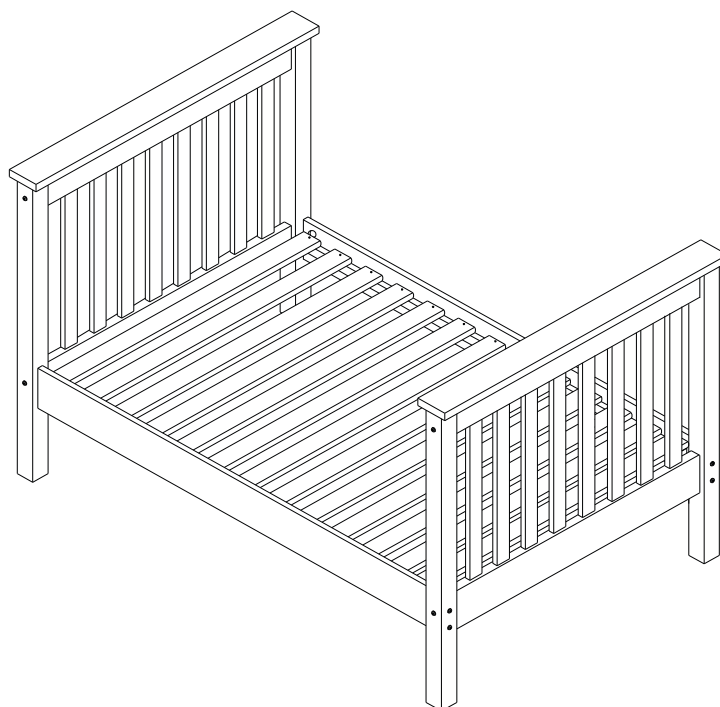


DWP

MONACO 3' HIGH END BED

ASSEMBLY INSTRUCTIONS

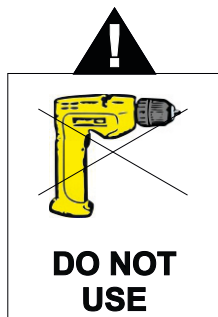


IMPORTANT
PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible.
- Never drag or push products as this could cause damage to the joints making it inferior.
- Do not place this product next to a radiator or in direct sunlight.
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a duster, and do not use detergents of any kind. However, the surface will need to be retreated from time to time. This can be done by using block wax (unperfumed) and rubbing it over the whole item.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.

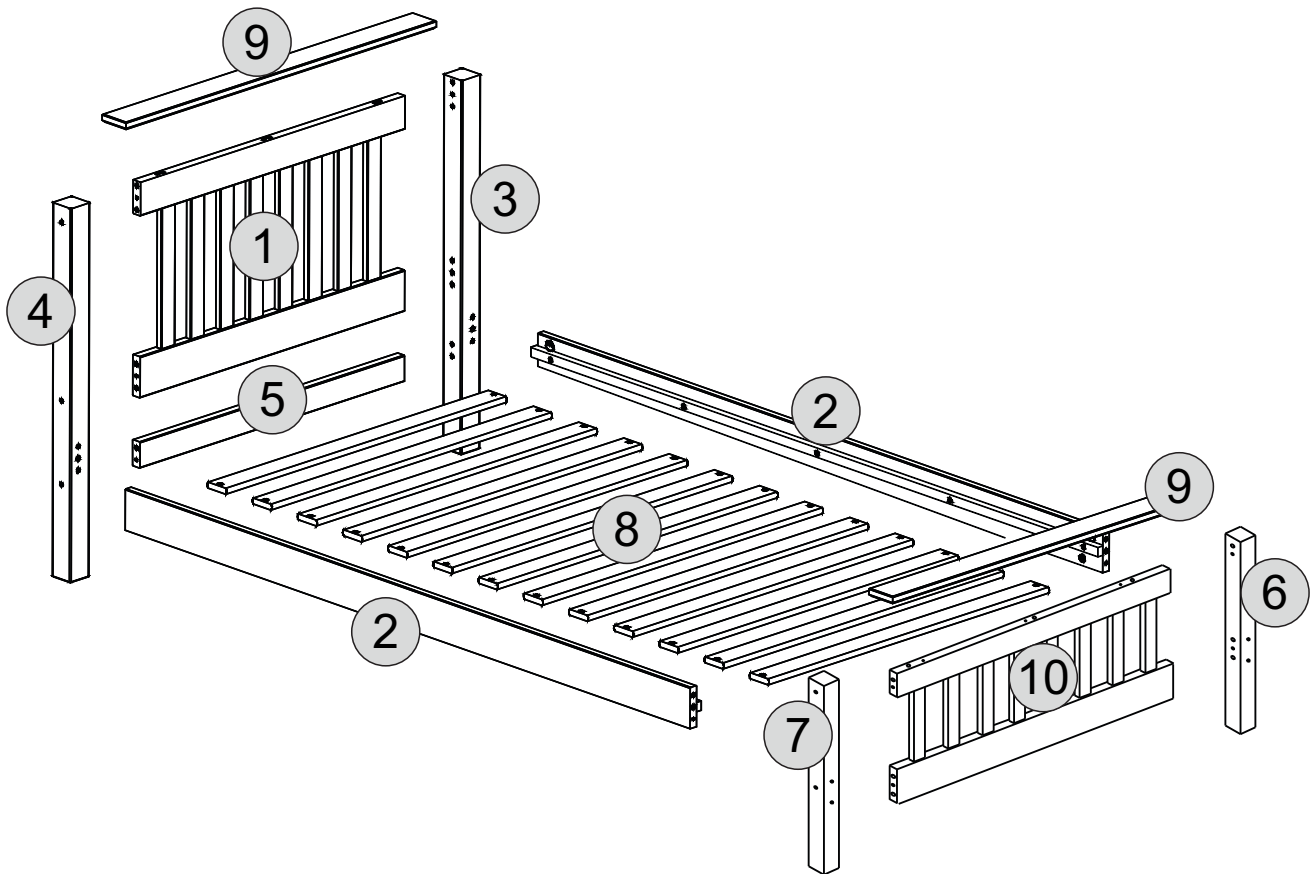

* Use of power tools to assemble this product will invalidate any claim and damage this product making it unsafe !!!
 * Please assemble on a clean soft surface to avoid damage.












* Please check contents and read the instructions before commencing assembly.
 * Assemble this product following the enclosed instructions carefully.
 * Please take care to avoid damaging panels during assembly.





PARTS LIST

| Part Number | Part Code | Part Description | Quantity | Carton |
|-------------|---------------------|----------------------|----------|---------|
| 1 | S200-201-018-LT1-01 | Headboard Panel | 1 | 1/3 |
| 2 | S200-201-018-LT1-02 | Siderails | 2 | 2/3 |
| 3 | S200-201-018-LT1-03 | Right Headboard Post | 1 | 3/3 |
| 4 | S200-201-018-LT1-04 | Left Headboard Post | 1 | 3/3 |
| 5 | S200-201-018-LT1-05 | Headboard Crossbeam | 1 | 1/3 |
| 6 | S200-201-018-LT1-06 | Right Footboard Post | 1 | 3/3 |
| 7 | S200-201-018-LT1-07 | Left footboard Post | 1 | 3/3 |
| 8 | S200-201-018-LT1-08 | Slats | 13 | 2/3-3/3 |
| 9 | S200-201-018-LT1-09 | Plinths | 2 | 3/3 |
| 10 | S200-201-018-LT1-10 | Footboard Panel | 1 | 1/3 |

FITTINGS

| | | | | | |
|----------|--|-----------|----------|--|-----------|
| A |  1/+ Ø12x40mm | 04 | F |  1/+ Ø4,0 x 35mm | 06 |
| B |  2/+ Ø8 x 40mm | 24 | G |  2/+ Ø3,5x 30mm | 26 |
| C |  1/+ 17mm Ø1/4 x 110mm | 08 | H |  01 | |
| D |  1/+ 1/4 | 08 | I |  SPACER 87mm | 02 |
| E |  17mm Ø7 x 100mm | 10 | | | |

TOOLS REQUIRED

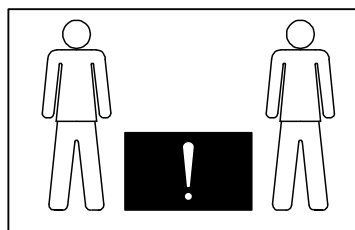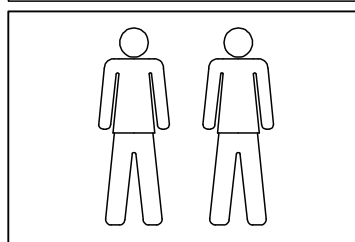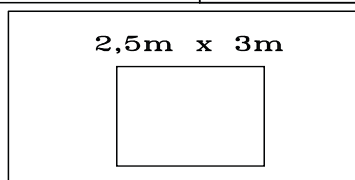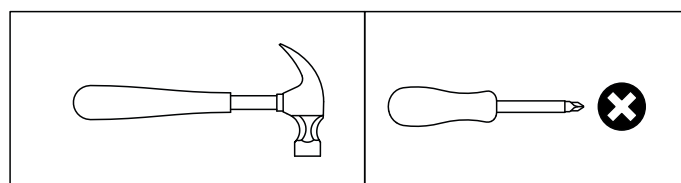

STEP 1

PARTS REQUIRED

2 - SIDERAILS x2


5 - HEADBOARD CROSSBEAM x1

HARDWARE REQUIRED



A  04

B  02

TOOLS REQUIRED

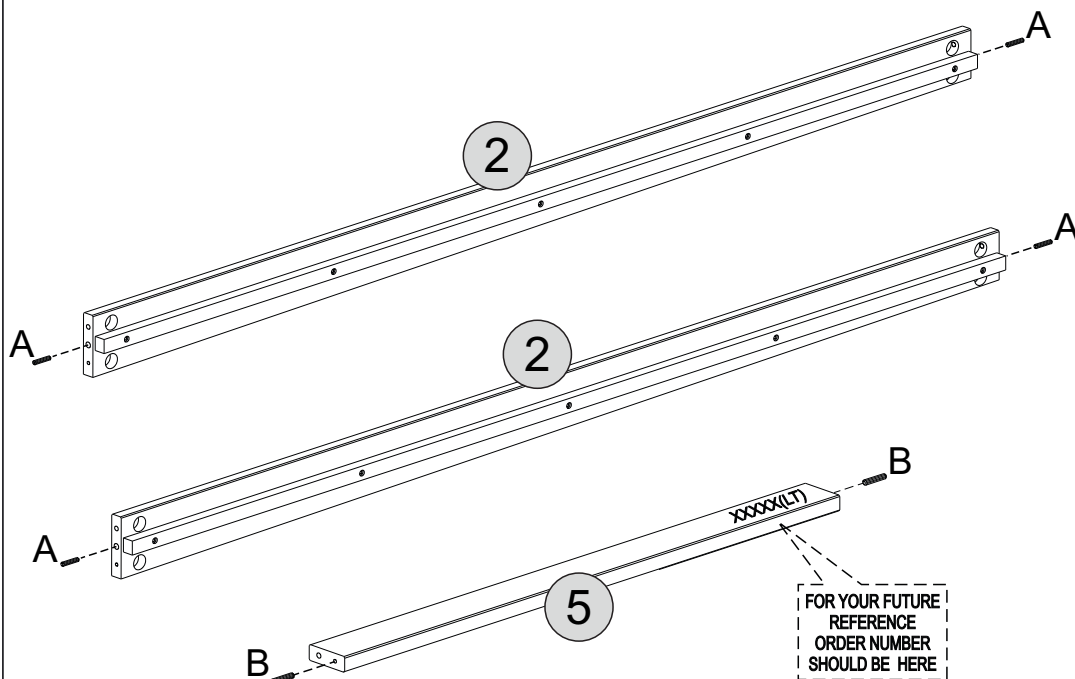

Please assemble on a clean soft surface to avoid damage.

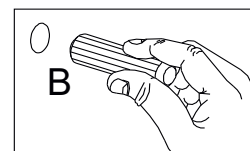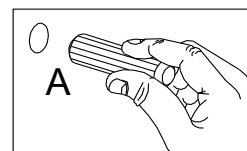

STEP 2

PARTS REQUIRED


1 - HEADBOARD PANEL x1

10 - FOOTBOARD PANEL x1


HARDWARE REQUIRED

B  22

TOOLS REQUIRED

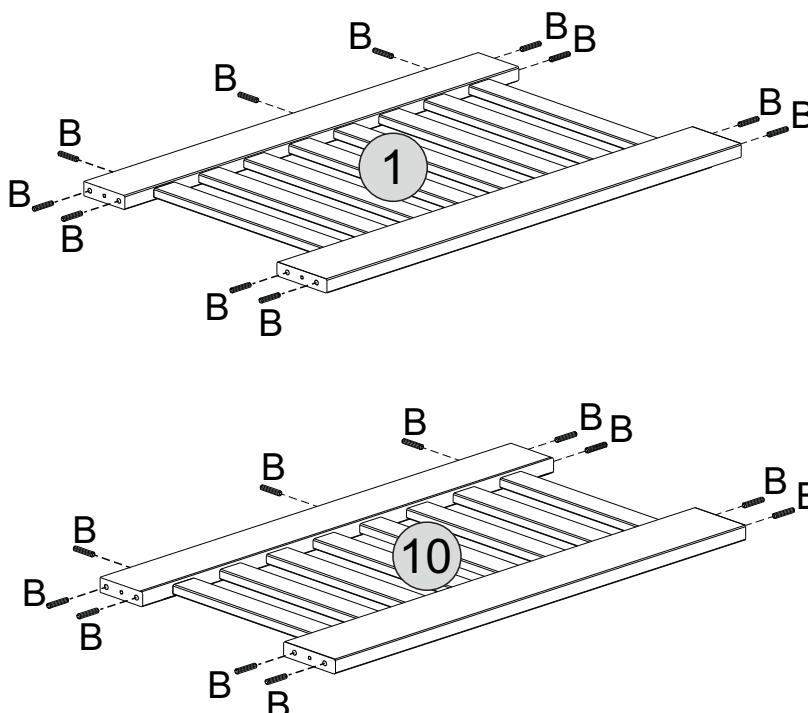

Please assemble on a clean soft surface to avoid damage.

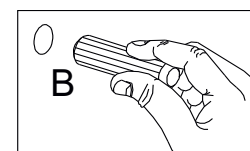


STEP 3




PARTS REQUIRED

- | | |
|--------------------------|----|
| 1 - HEADBOARD PANEL | x1 |
| 3 - RIGHT HEADBOARD POST | x1 |
| 4 - LEFT HEADBOARD POST | x1 |
| 5 - HEADBOARD CROSSBEAM | x1 |

HARDWARE REQUIRED



TOOLS REQUIRED

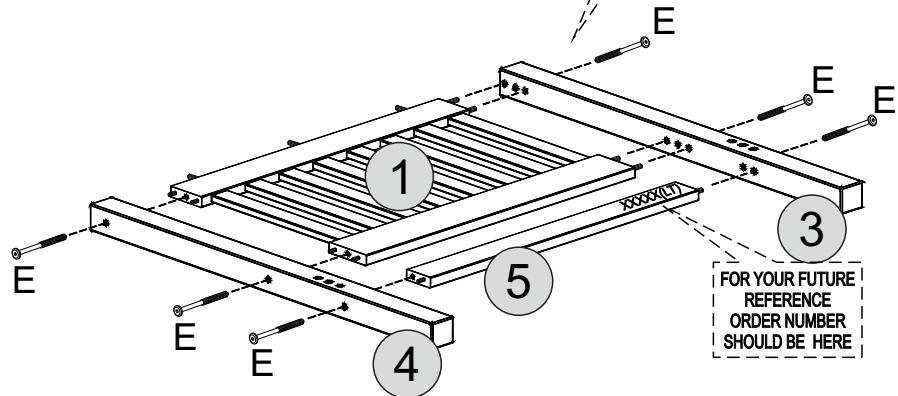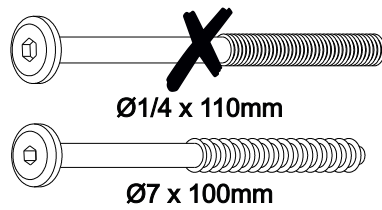


Please assemble on
a clean soft surface
to avoid damage.

STEP 4




PARTS REQUIRED

- | | |
|--------------------------|----|
| 6 - RIGHT FOOTBOARD POST | x1 |
| 7 - LEFT FOOTBOARD POST | x1 |
| 11 - FOOTBOARD PANEL | x1 |

HARDWARE REQUIRED



TOOLS REQUIRED

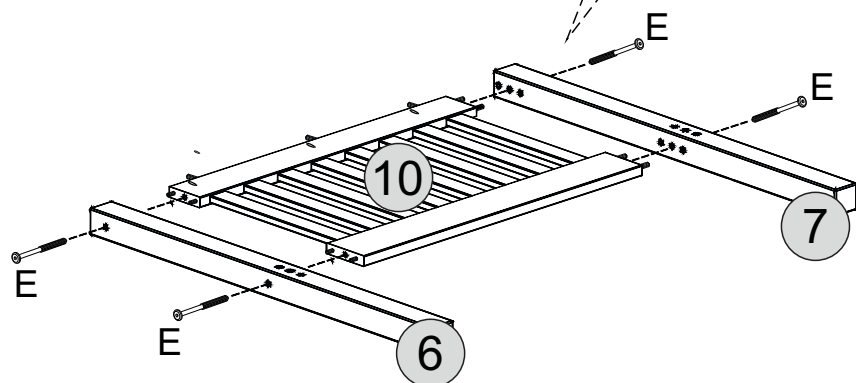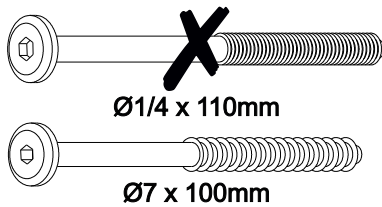


Please assemble on
a clean soft surface
to avoid damage.

STEP 5


PARTS REQUIRED

2 - SIDERAILS




x2

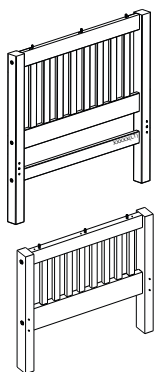

HARDWARE REQUIRED

C  17mm $\varnothing 1/4 \times 110\text{mm}$ 08D  1/4 08

TOOLS REQUIRED

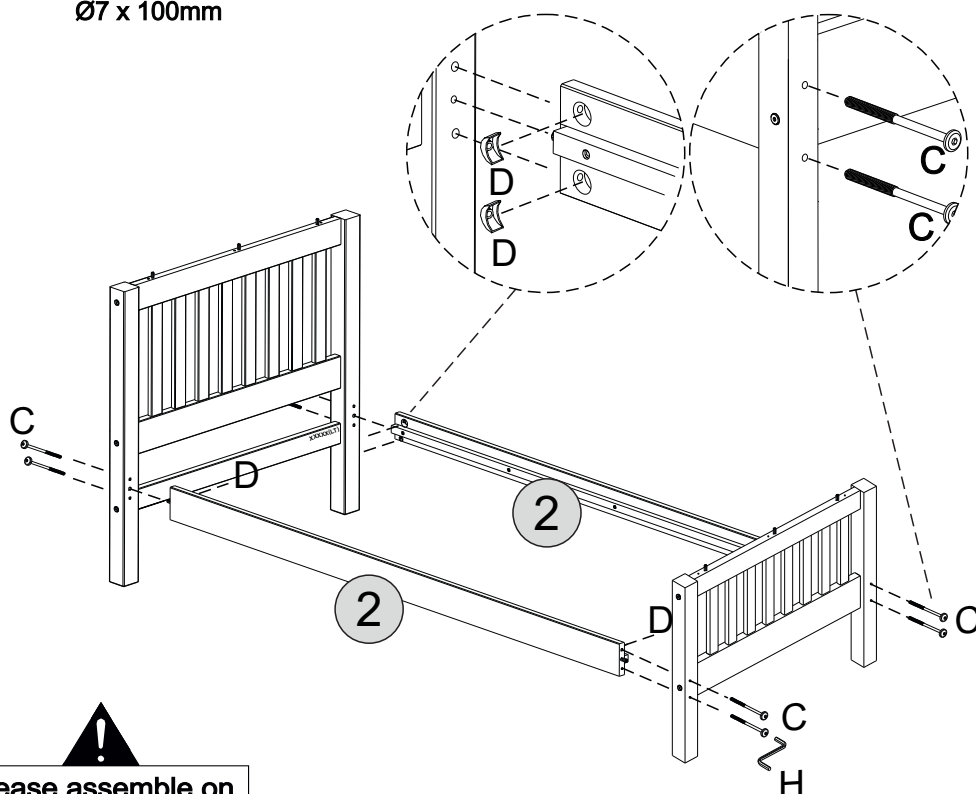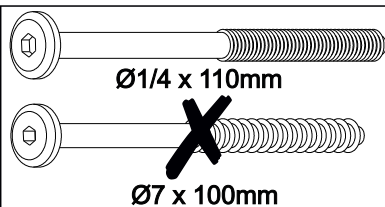


!
Please assemble on
a clean soft surface
to avoid damage.

STEP 6


PARTS REQUIRED

12 - PLINTHS



x2

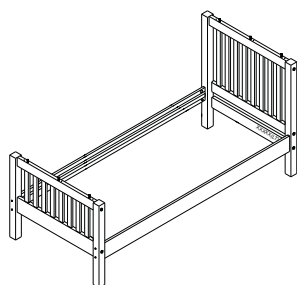

HARDWARE REQUIRED

F  $\varnothing 4,0 \times 35\text{mm}$ 06

TOOLS REQUIRED

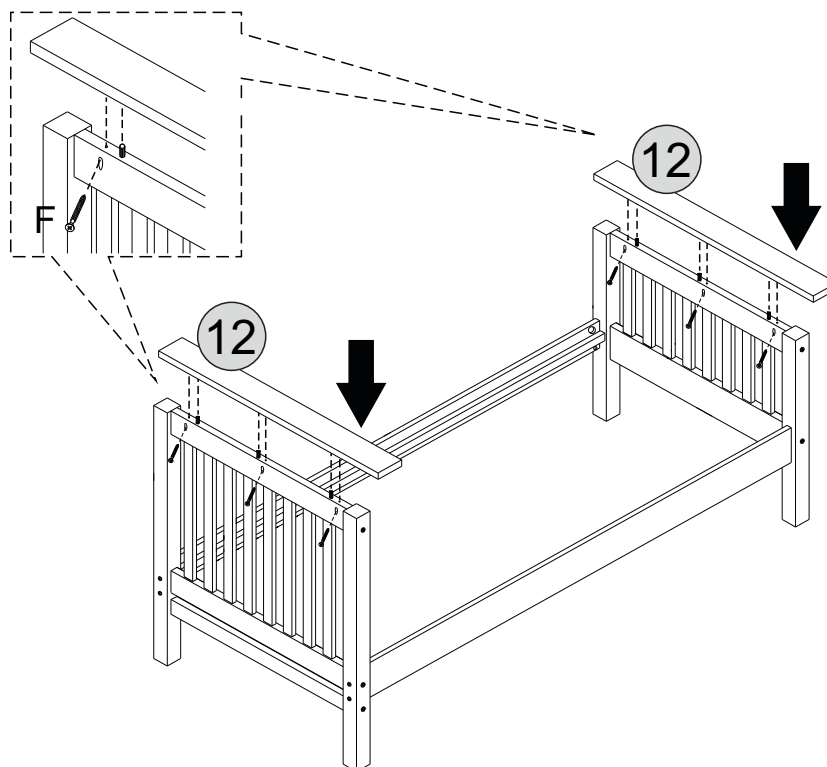


!
Please assemble on
a clean soft surface
to avoid damage.


STEP 7

PARTS REQUIRED

8 - SLATS x13




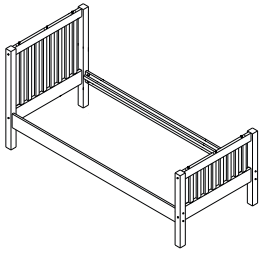


HARDWARE REQUIRED

G  26
Ø3,5x 30mm

I  02

TOOLS REQUIRED

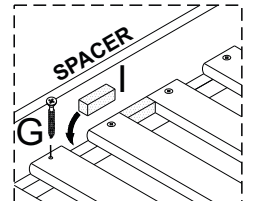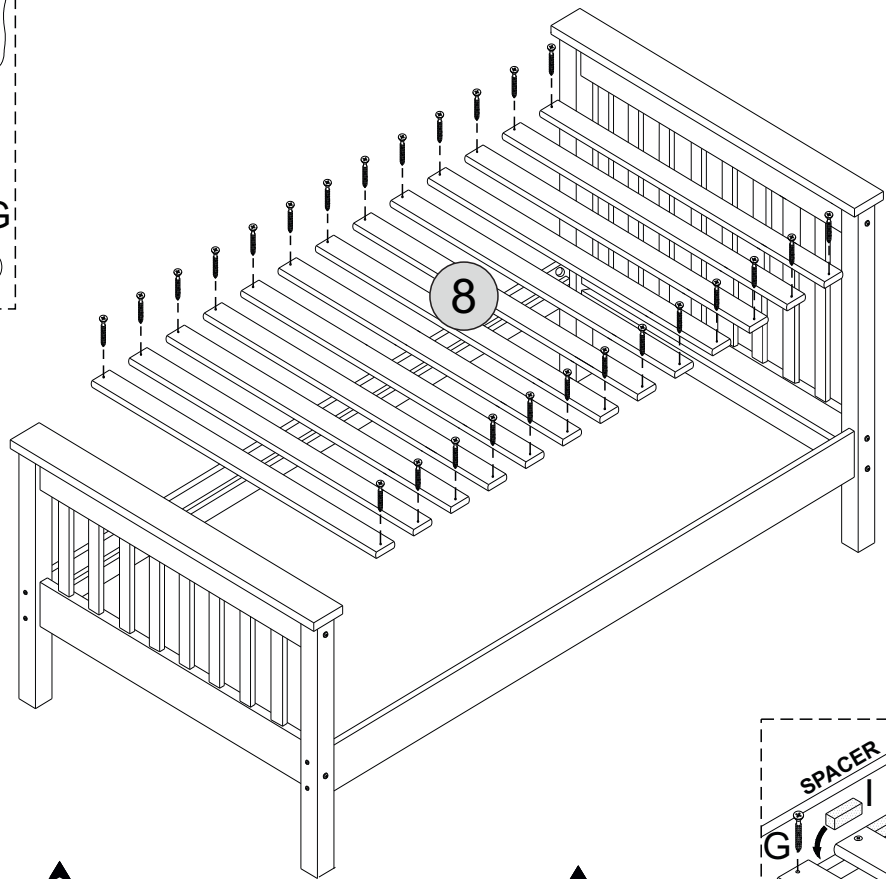

Please assemble on a clean soft surface to avoid damage.


Please fix the first slats adjacent to the headboard and footboard and work towards the middle of the bed using the spacer (I) as shown to ensure the correct spacing. Fix all the slats to one siderail first then push the second siderail tight against the slats and fix.

STEP 8

PARTS REQUIRED

HARDWARE REQUIRED

TOOLS REQUIRED

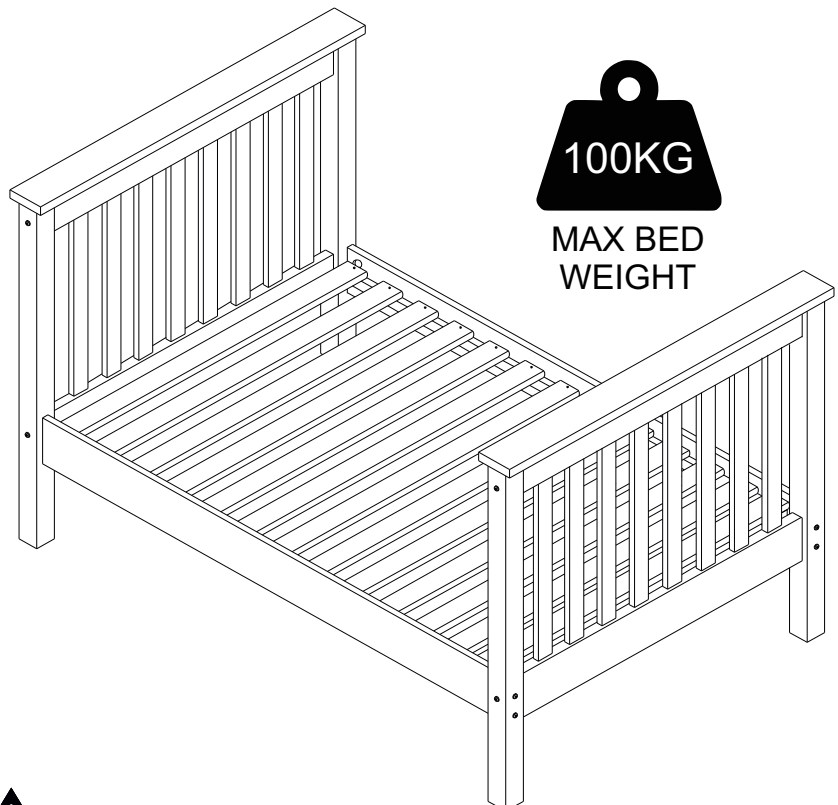

MAX BED WEIGHT

Please assemble on a clean soft surface to avoid damage.