
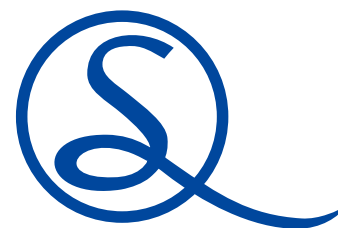
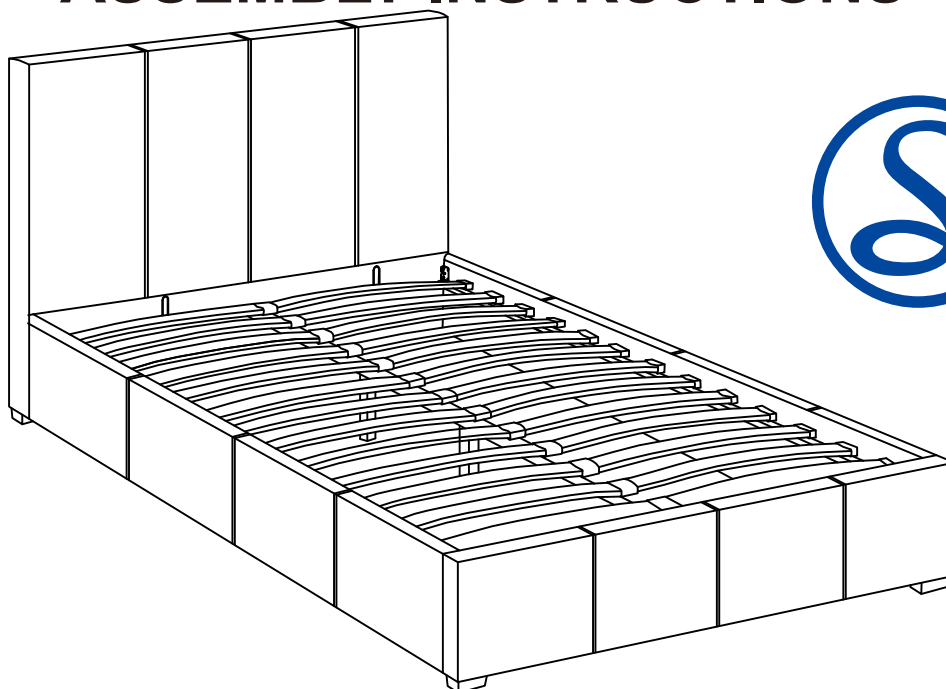


# BLACK PU WAVERLEY 4'6" STORAGE BED ASSEMBLY INSTRUCTIONS

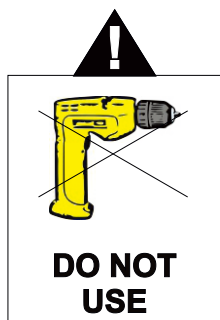

## FOR DOMESTIC USE ONLY IMPORTANT

PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.

ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.


DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE.  
DO NOT OVERTIGHTEN FIXINGS.

**FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET) DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS**






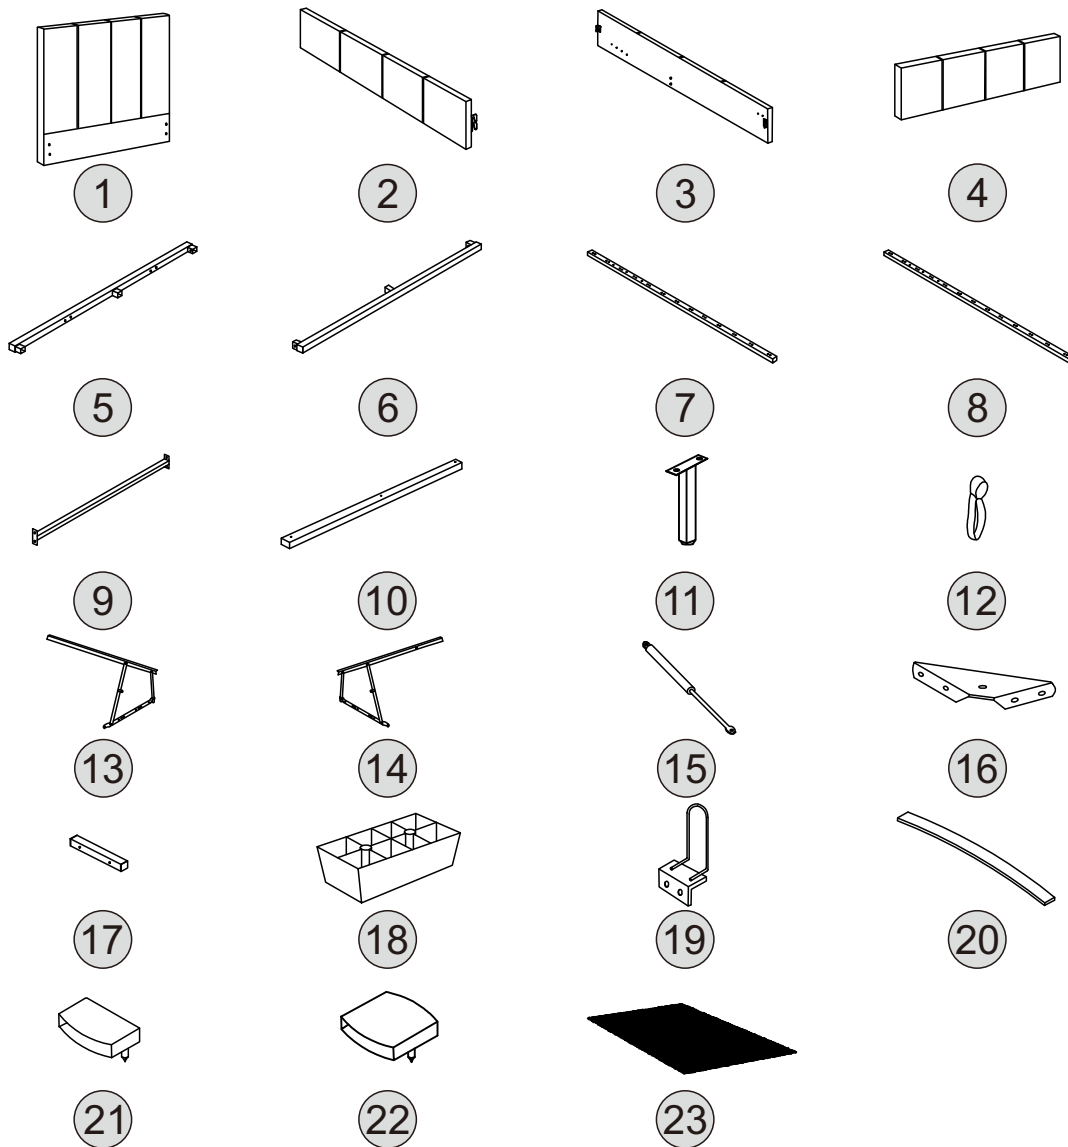





THIS PRODUCT MAY STAIN OR MARK IF ALLOWED TO COME INTO CONTACT WITH WET OR DAMP OBJECTS AS MATERIALS USED HAVE NOT BEEN SCOTCH GUARDED.

THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.



Part Number	Part Code	Part Description	Quantity	Carton
1	S200-203-047-BY1-01	Headboard	1	1/2
2	S200-203-047-BY1-02	Footboard	1	2/2
3	S200-203-047-BY1-03	Left Side Rail	1	2/2
4	S200-203-047-BY1-04	Right Side Rail	1	2/2
5	S200-203-047-BY1-05	Front Frame Rail	1	2/2
6	S200-203-047-BY1-06	Back Frame Rail	1	2/2
7	S200-203-047-BY1-07	Frame Centre Rail	1	2/2
8	S200-203-047-BY1-08	Front Side Rail	2	2/2
9	S200-203-047-BY1-09	Centre Frame Rail	1	2/2
10	S200-203-047-BY1-10	Cross Rail	1	2/2
11	S200-203-047-BY1-11	Support Leg	2	2/2
12	S200-203-047-BY1-12	Strap	1	2/2
13	S200-203-047-BY1-13	Left Lifting Arm	1	2/2
14	S200-203-047-BY1-14	Right Lifting Arm	1	2/2
15	S200-203-047-BY1-15	Gas Lift	2	2/2
16	S200-203-047-BY1-16	Corner Bracket	2	2/2
17	S200-203-047-BY1-17	Support Block	1	2/2
18	S200-203-047-BY1-18	Feet	4	2/2
19	S200-203-047-BY1-19	Mattress Support	2	2/2
20	S200-203-047-BY1-20	Sprung Slats	26	1/2
21	S200-203-047-BY1-21	Plastic Slat Caps	26	2/2
22	S200-203-047-BY1-22	Centre Slat Caps	13	2/2
23	S200-203-047-BY1-23	Woven fabric	1	1/2


## **HARDWARE LIST**

REF		HARDWARE NAME	QTY
A		5/16x2" BOLT	5 PCS
B		5/16x1" BOLT	8 PCS
C		5/16x3/4" BOLT	6 PCS
D		1/4x3/4" BOLT	34 PCS
E		5/16"x19mm FLAT WASHER	53 PCS
F		5/16"x13mm SPRING WASHER	33 PCS
G		5/16"x12mm	7 PCS
H		#7*1-1/2 Screw	8 PCS
I		M4 ALLEN KEY	1 PC
J		M5 ALLEN KEY	1 PC
K		12mm SPANNER	1 PC



**PLEASE CHECK THAT YOU HAVE ALL THE PARTS LISTED  
BEFORE YOU START ASSEMBLING. IF YOU DO FIND THAT  
SOMETHING IS MISSING. DO NOT CONTINUE ASSEMBLY.  
PLEASE CONTACT YOUR SUPPLIER IMMEDIATELY.**

# **Important information!**

The gas lifts used in the construction of this product are extremely strong and cannot be operated by hand when not fitted to the ottoman hinges. All gas lifts are tested in the factory for correct pressure and operation before use.

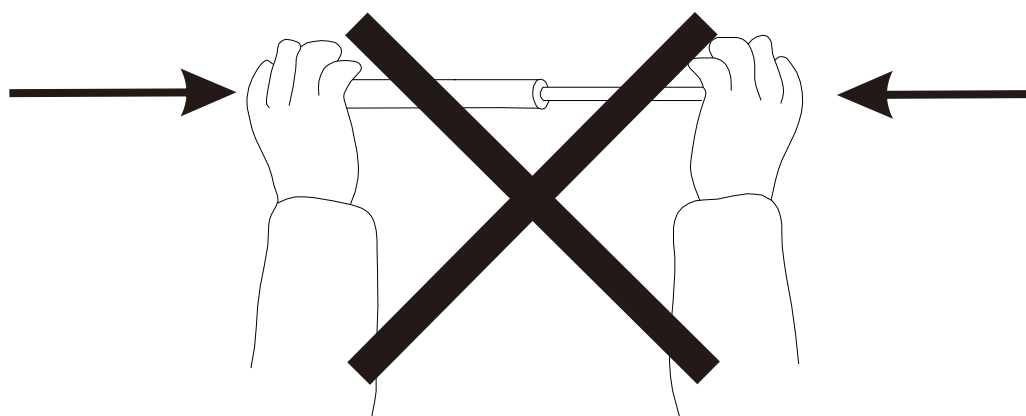

You must ensure the **MATTRESS** is on the bed frame before lifting the mechanism.  
**FAILURE TO DO SO MAY RESULT IN INJURY.**

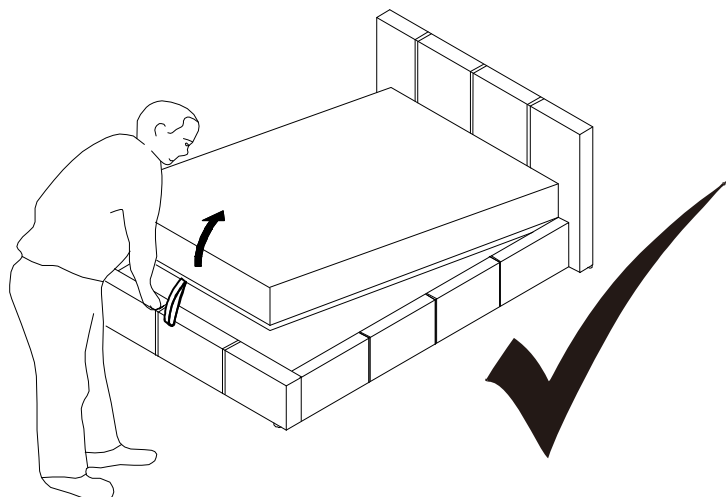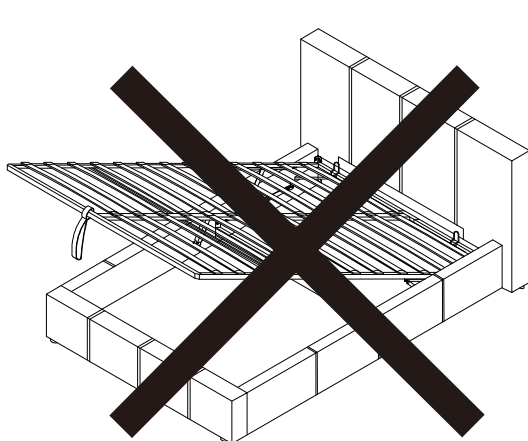

Initially it might appear that the gas lifts are very stiff when opening and closing the ottoman frame, **THIS IS NORMAL.**

After operating the ottoman a few times, the movement of the gas lifts and the opening and closing of the ottoman will become easier.

# STEP 1

## PARTS REQUIRED



1 - HEADBOARD	x1
---------------	----

18 - FEET	x2
-----------	----

## HARDWARE REQUIRED

H		04
---	---	----

## TOOLS REQUIRED

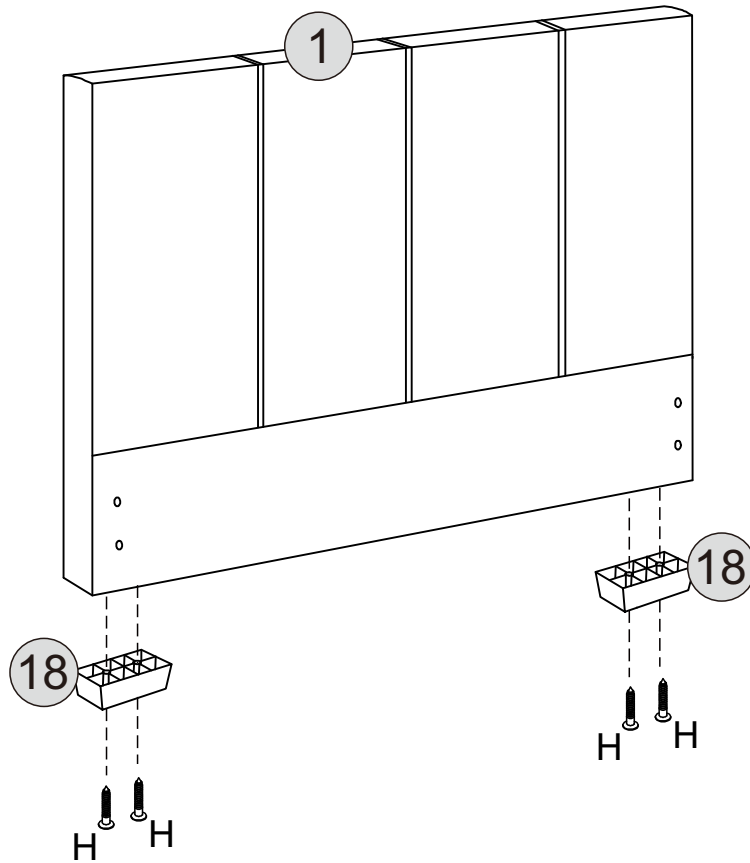

# STEP 2

## PARTS REQUIRED



2 - FOOTBOARD	x1
---------------	----

18 - FEET	x2
-----------	----

## HARDWARE REQUIRED

H		04
---	---	----

## TOOLS REQUIRED

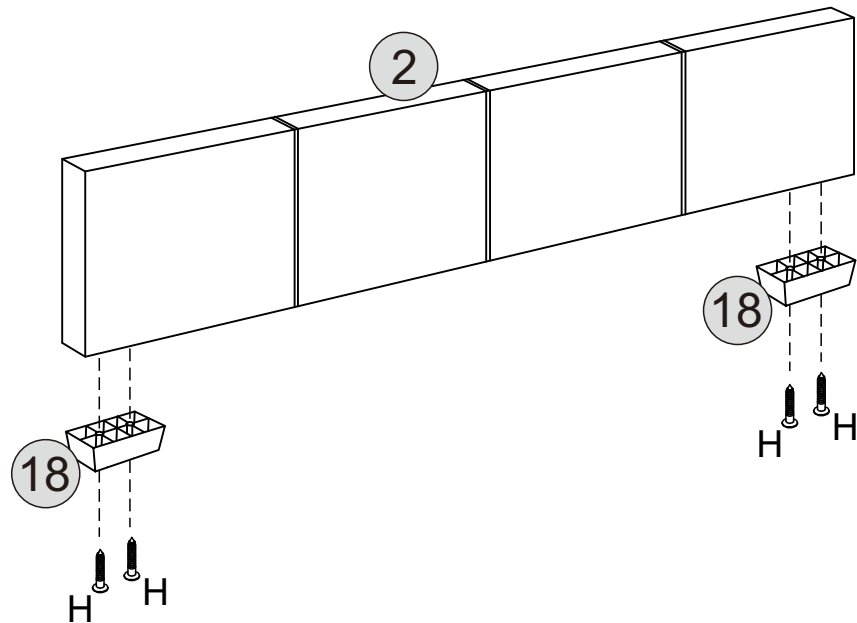

# STEP 3

## PARTS REQUIRED

2 - FOOTBOARD x1




17 - SUPPORT BLOCK x1

## HARDWARE REQUIRED

A  02  
5/16" x 2"

E  02

## TOOLS REQUIRED

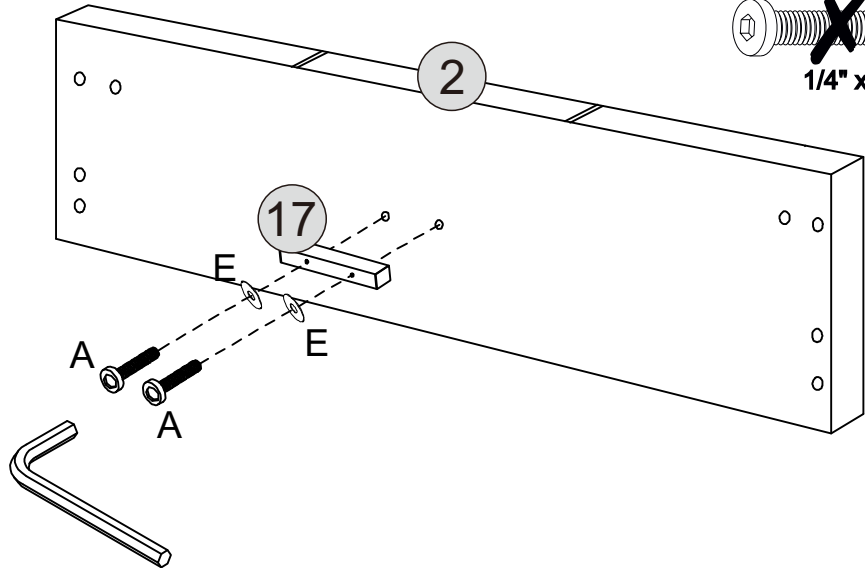

5/16" x 2"



5/16" x 1"



5/16" x 3/4"



1/4" x 3/4"

# STEP 4

## PARTS REQUIRED

1 - HEADBOARD x1

2 - FOOTBOARD x1

3 - LEFT SIDERAIL x1

4 - RIGHT SIDERAIL x1


## HARDWARE REQUIRED

B  08  
5/16" x 1"


E  08

F  08

## TOOLS REQUIRED

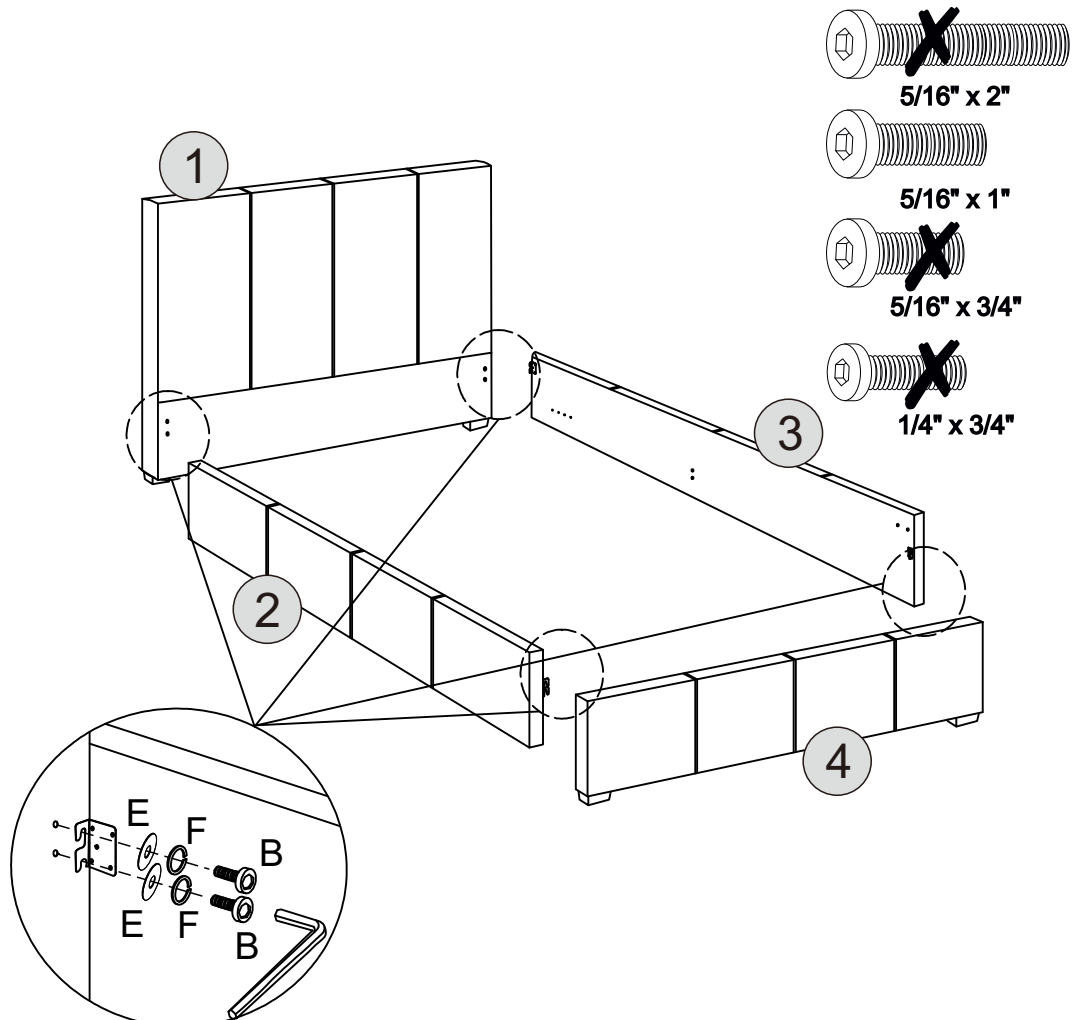


5/16" x 2"



5/16" x 1"



5/16" x 3/4"




1/4" x 3/4"

# STEP 5

## PARTS REQUIRED

16 - CORNER BRACKET x2


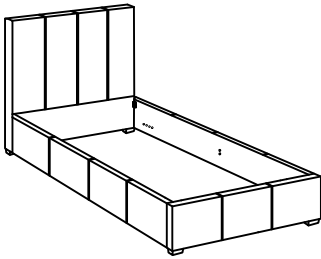


## HARDWARE REQUIRED

D  08  
1/4" x 3/4"

E  08

## TOOLS REQUIRED

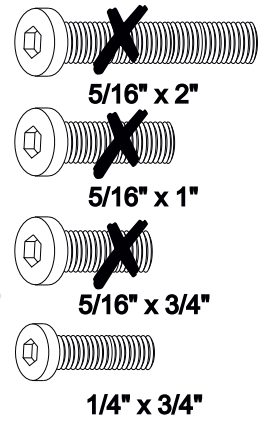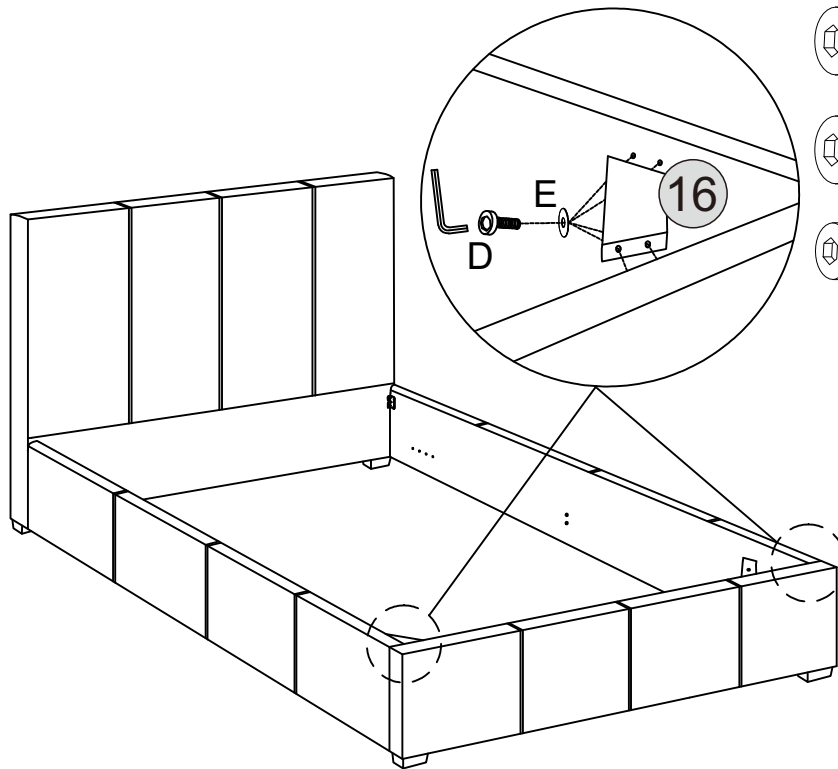

# STEP 6

## PARTS REQUIRED

5 - FRONT FRAME RAIL x1

6 - BACK FRAME RAIL x1

7 - FRAME CENTRE RAIL x1

8 - FRONT SIDE RAIL x2

12 - STRAP x1




## HARDWARE REQUIRED

C  06  
5/16" x 3/4"

E  06

F  06

## TOOLS REQUIRED

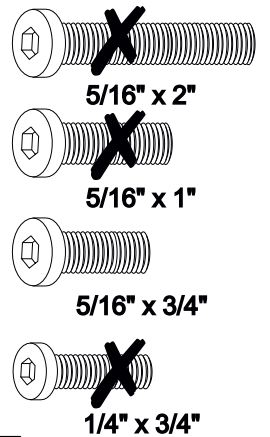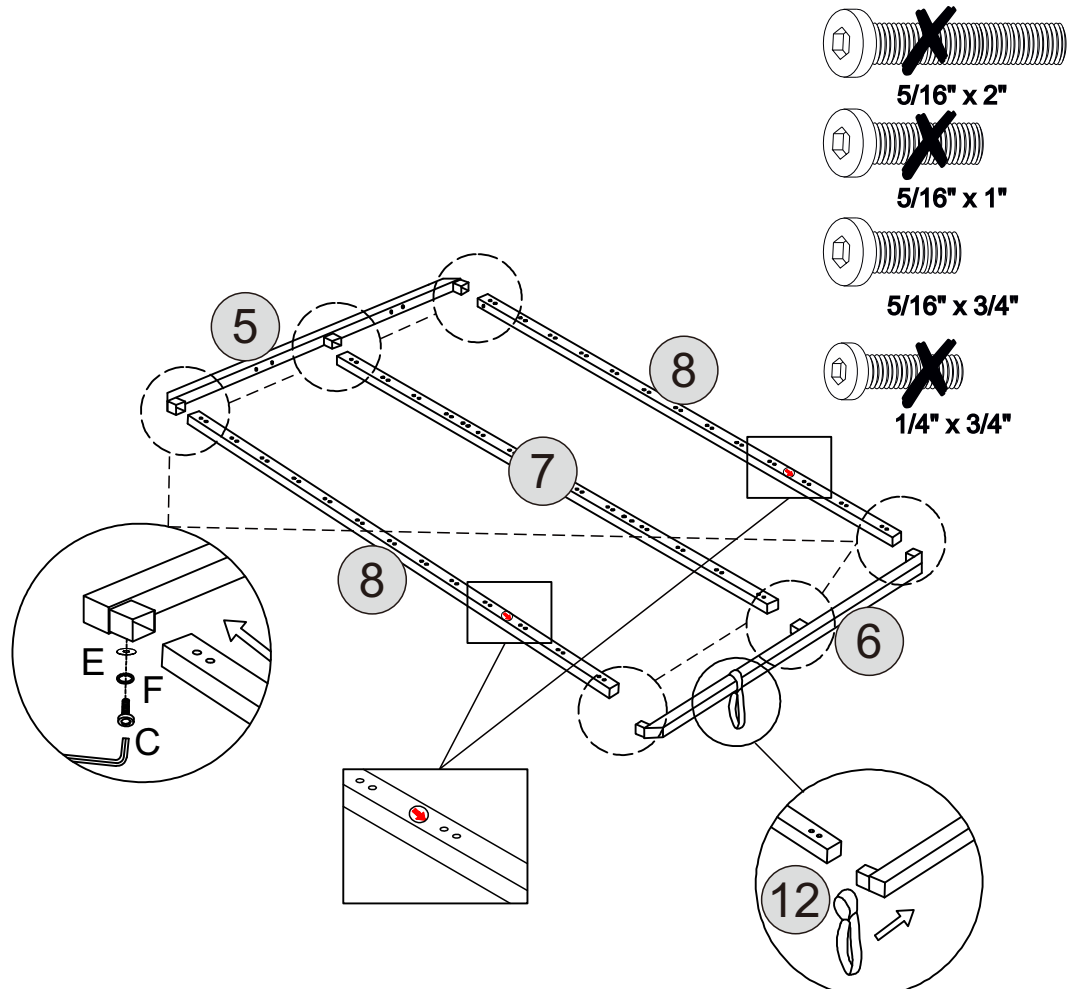


# STEP 7

## PARTS REQUIRED

10 - CROSSRAIL x1

19 - MATTRESS SUPPORT x2

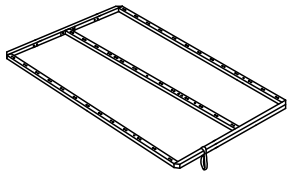

## HARDWARE REQUIRED

A 03






D 04

E 07

F 07

G 03


## TOOLS REQUIRED

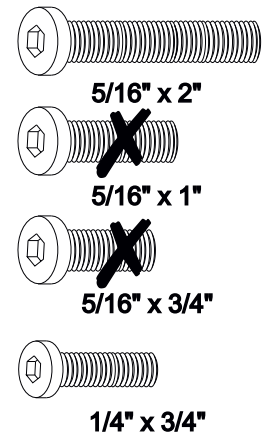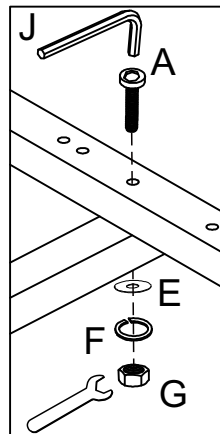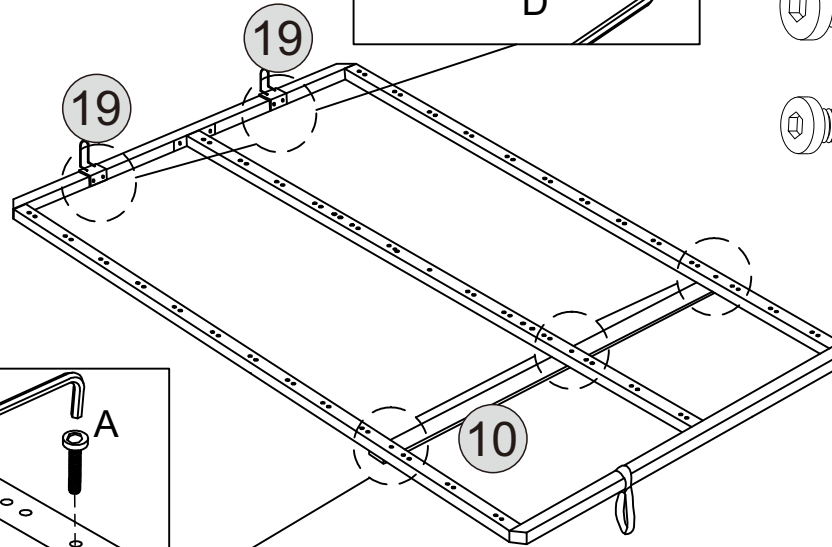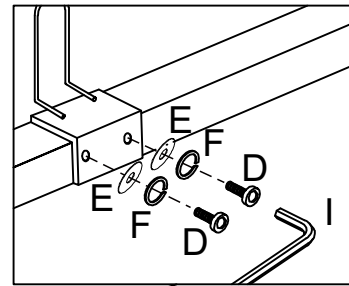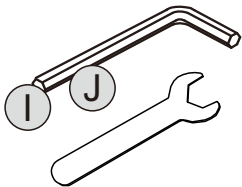

# STEP 8

## PARTS REQUIRED

11 - SUPPORT LEG x2

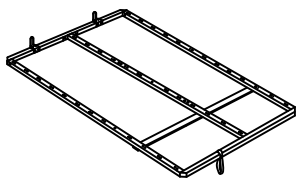





## HARDWARE REQUIRED

D 04

E 04

F 04

## TOOLS REQUIRED

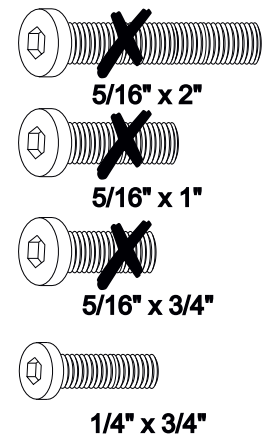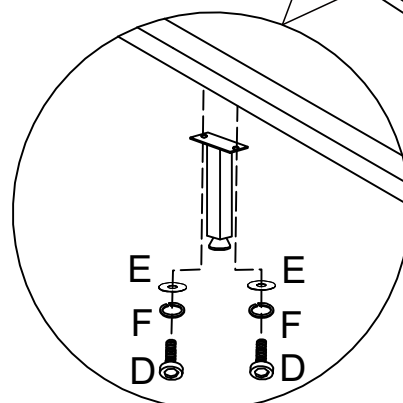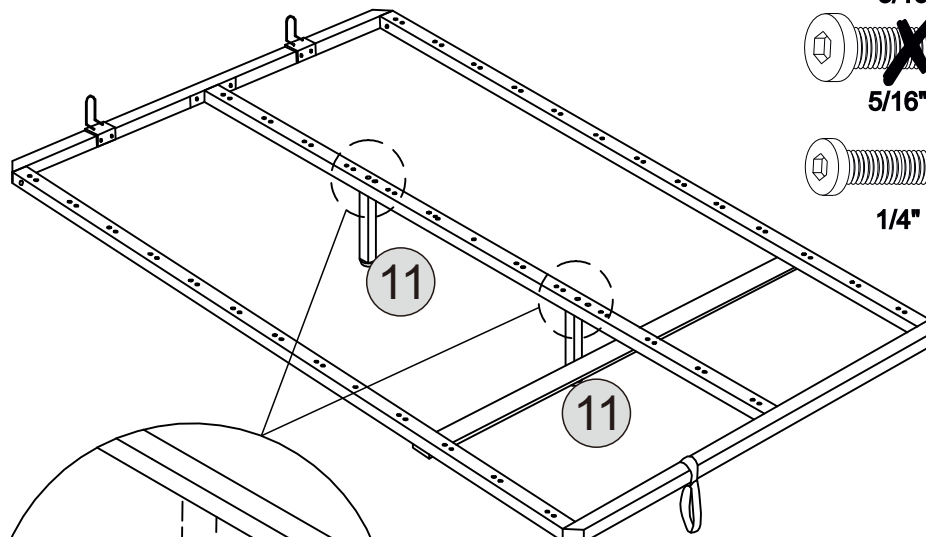



# STEP 9

## PARTS REQUIRED

13 - LEFT LIFTING ARM x1





14 - RIGHT LIFTING ARM x1

15 - GAS LIFT x2

## HARDWARE REQUIRED

G  04

## TOOLS REQUIRED

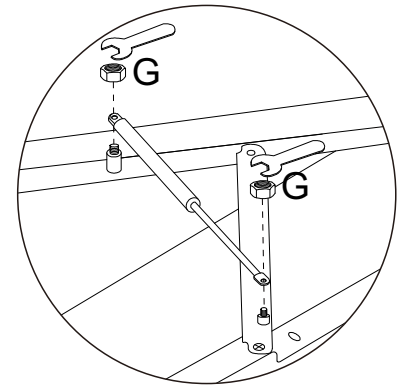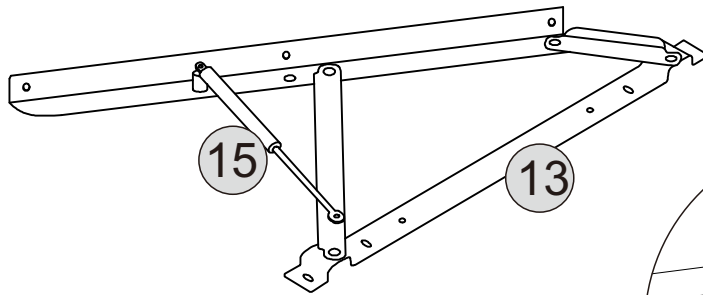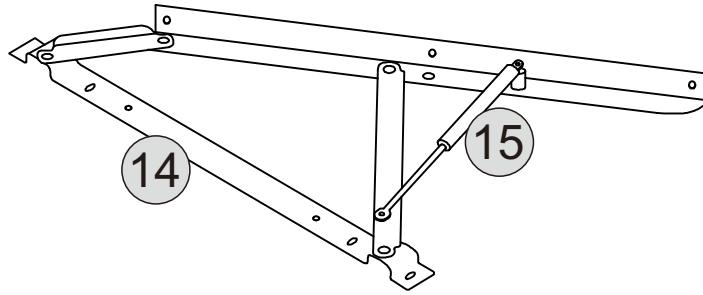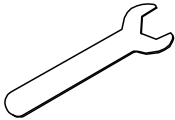


# STEP 10

## PARTS REQUIRED

9 - CENTRE FRAME RAIL x1

13 - LEFT LIFTING ARM x1

14 - RIGHT LIFTING ARM x1

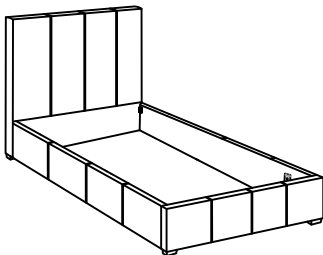






## HARDWARE REQUIRED

D  12

E  12


F  08

## TOOLS REQUIRED

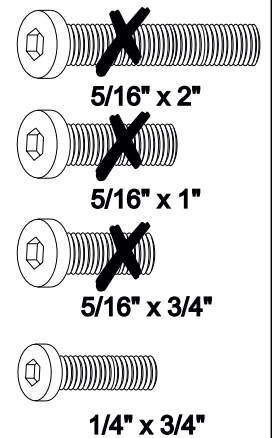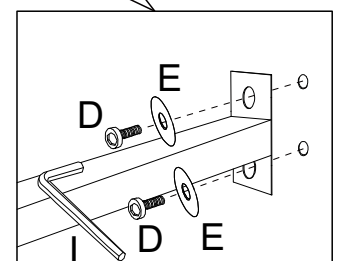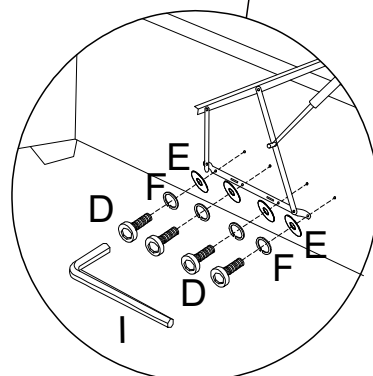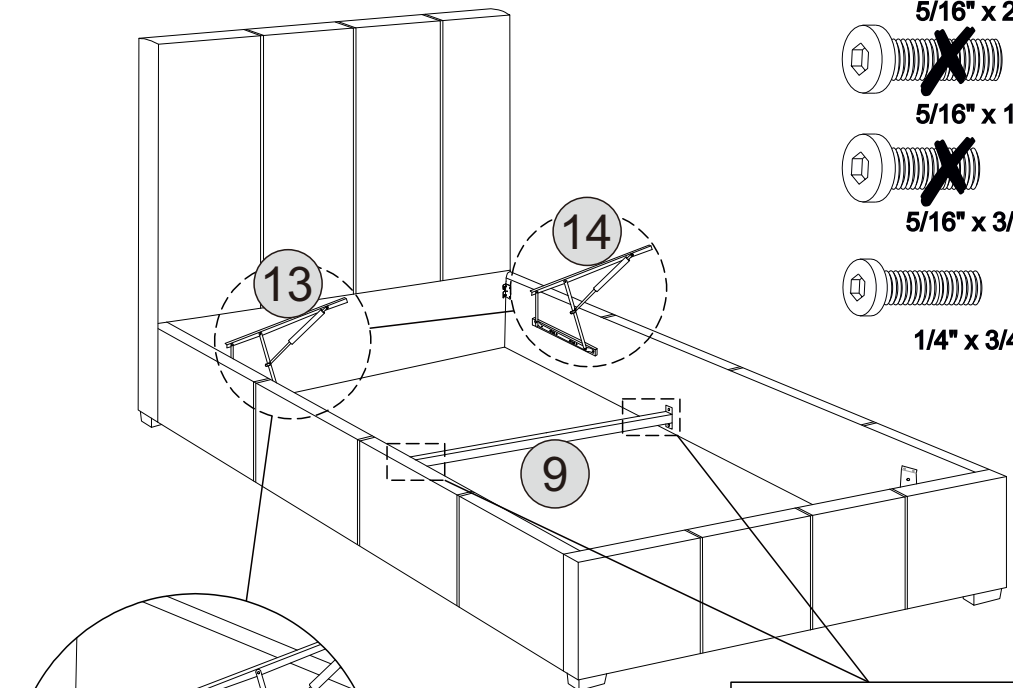



# STEP 11



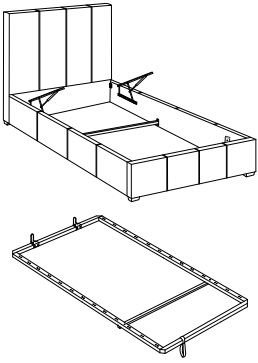
## PARTS REQUIRED



## HARDWARE REQUIRED

D		06
E		06


## TOOLS REQUIRED

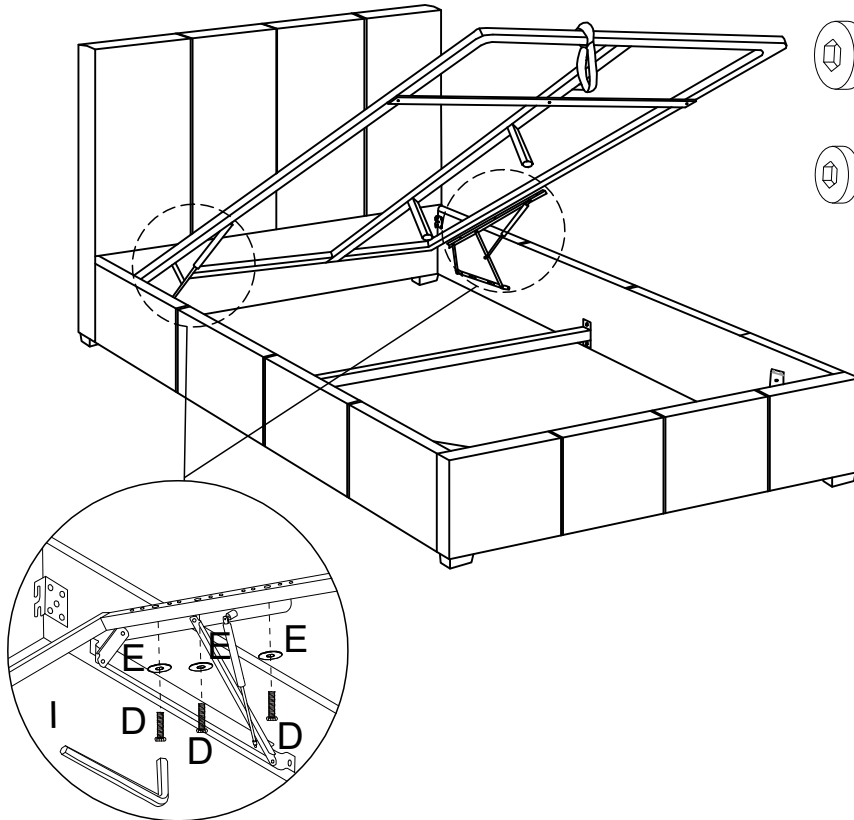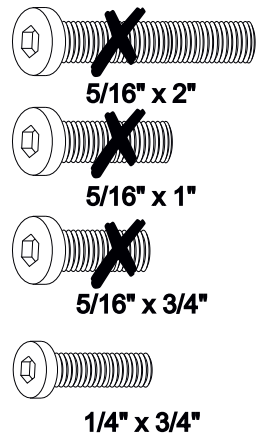

# STEP 12


## PARTS REQUIRED

23 - WOVEN FABRIC	x1
-------------------	----

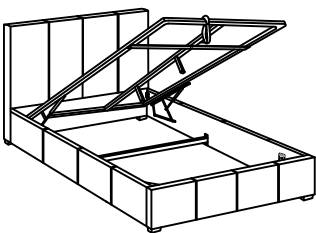

## HARDWARE REQUIRED

## TOOLS REQUIRED

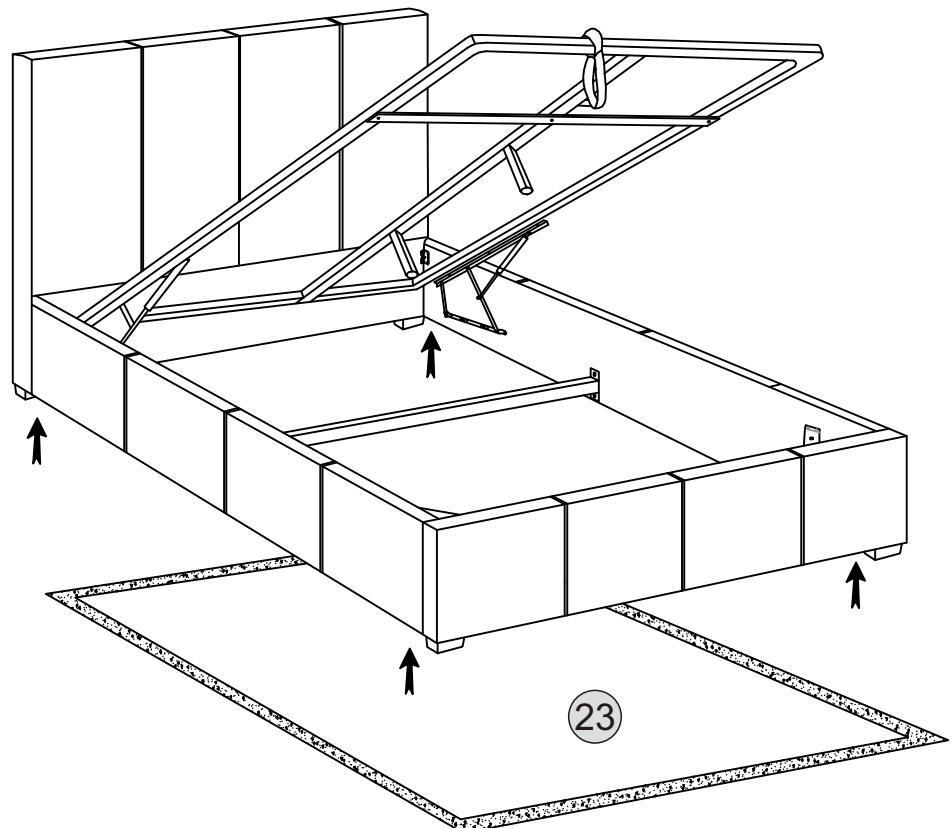


# STEP 13

## PARTS REQUIRED

20 - SPRUNG SLATS x26


21 - PLASTIC SLAT CAPS x26

22 - CENTRE SLAT CAPS x13

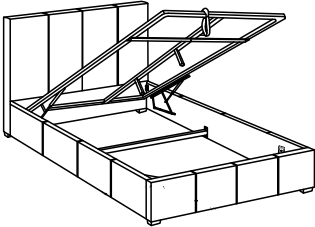

## HARDWARE REQUIRED

## TOOLS REQUIRED

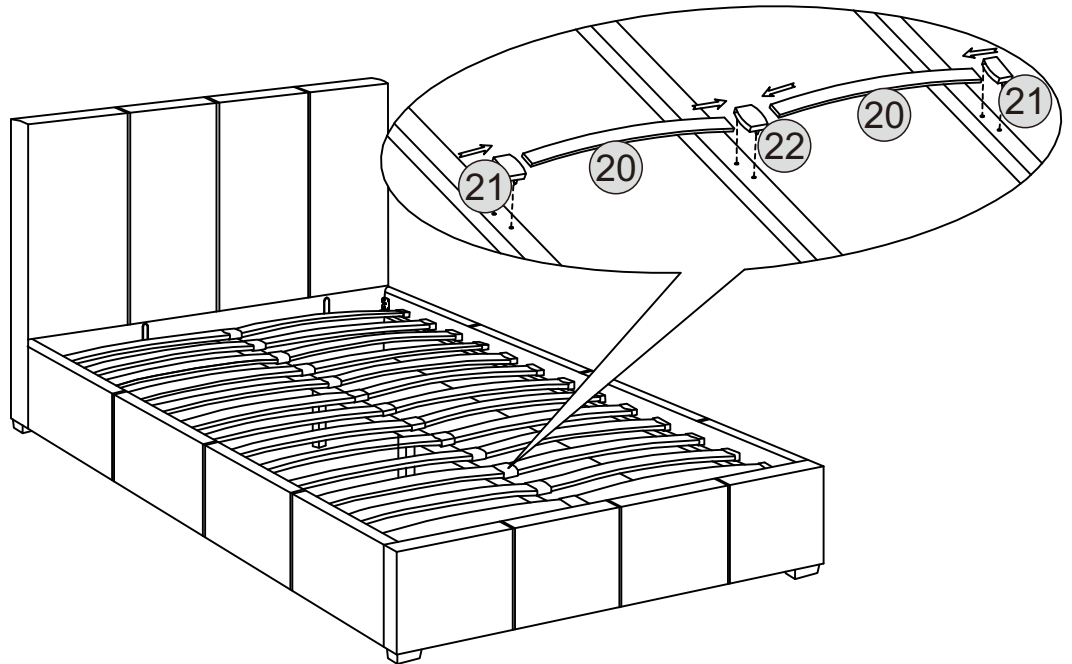


# STEP 14

## PARTS REQUIRED

## HARDWARE REQUIRED

## TOOLS REQUIRED

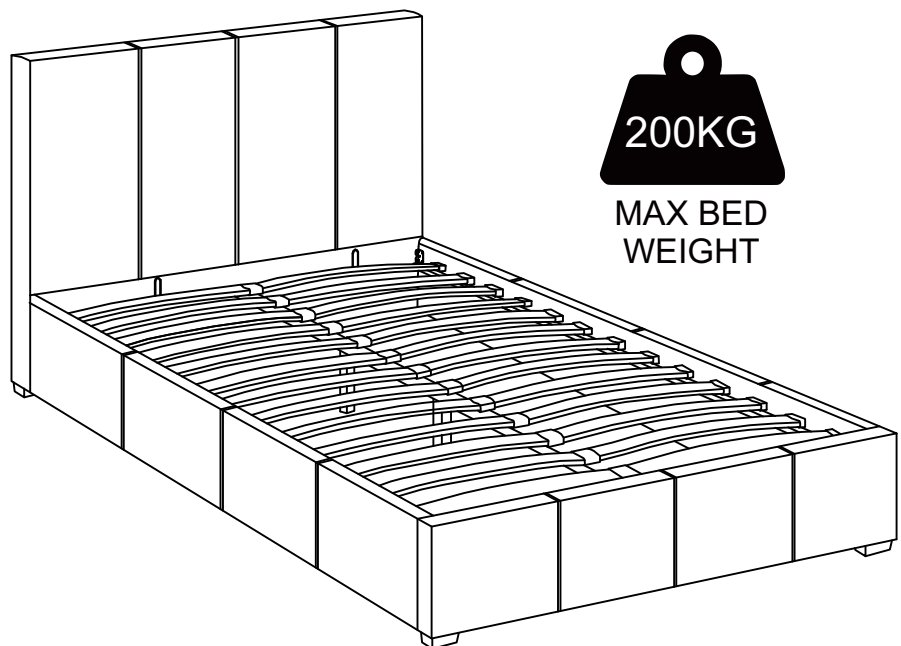

MAX BED  
WEIGHT