
CORONA NEST OF TABLES ASSEMBLY INSTRUCTIONS

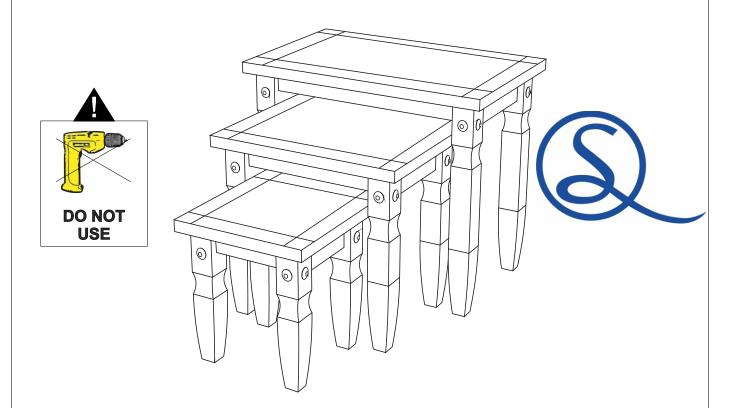



IMPORTANT PLEASE READ BEFORE YOU CONTINUE FURTHER


FOR DOMESTIC USE ONLY CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible.
- Never drag or push products as this could cause damage to the joints making it inferior.
- Do not place this product next to a radiator or in direct sunlight.
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a duster, and do not use detergents of any kind. However, the surface will need to be retreated from time to time. This can be done by using block wax (unperfumed) and rubbing it over the whole item.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.

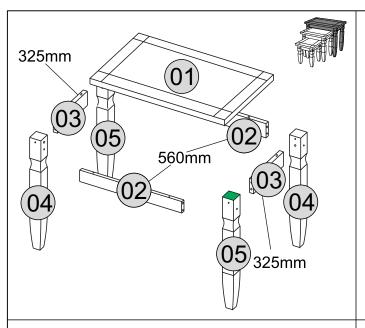

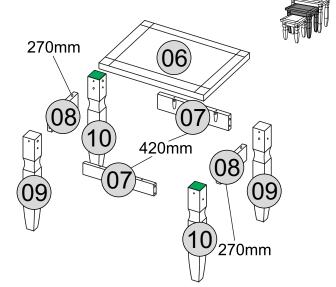

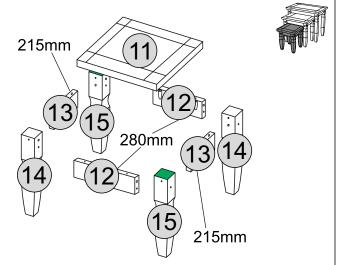



- * Use of power tools to assemble this product will invalidate any claim and damage this product making it unsafe!!!
- * Please assemble on a clean soft surface to avoid damage.
- * Please check carton contents and read the instructions before commencing assembly.
- * Assemble this product following the enclosed instructions carefully.
- * Please take care to avoid damaging panels during assembly.

PARTS LIST


Part Number	Part Code	Part Description	Quantity	<u>Carton</u>
01	S300-303-010-MY1-01	Top Panel (Large)	1	1/1
02	S300-303-010-MY1-02	Front/Rear Panel (Large) (560mm)	2	1/1
03	S300-303-010-MY1-03	Side Panel (Large) (325mm)	2	1/1
04	S300-303-010-MY1-04	Leg Natural (Large)	2	1/1
05	S300-303-010-MY1-05	Leg Green (Large)	2	1/1
06	S300-303-010-MY1-06	Top Panel (Medium)	1	1/1
07	S300-303-010-MY1-07	Front/Rear Panel (Medium) (420mm)	2	1/1
08	S300-303-010-MY1-08	Side Panel (Medium) (270mm)	2	1/1
09	S300-303-010-MY1-09	Leg Natural (Medium)	2	1/1
10	S300-303-010-MY1-10	Leg Green (Medium)	2	1/1
11	S300-303-010-MY1-11	Top Panel (Small)	1	1/1
12	S300-303-010-MY1-12	Front/Rear Panel (Small) (280mm)	2	1/1
13	S300-303-010-MY1-13	Side Panel (Small) (215mm)	2	1/1
14	S300-303-010-MY1-14	Leg Natural (Small)	2	1/1
15	S300-303-010-MY1-15	Leg Green (Small)	2	1/1

FITTINGS

Α		16
В	Ø 8 x 30mm	36
С		24

D	Ø 5 x 90mm	24
E	GLUE	02

TOOLS REQUIRED

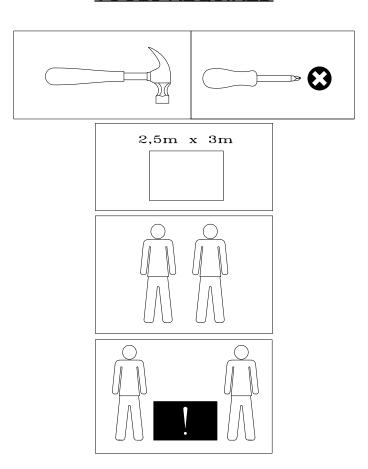



02-FRONT/REAR PANEL (LARGE)(560mm) x2


07-FRONT/REAR PANEL (MEDIUM)(420mm)x2

12-FRONT/REAR PANEL (SMALL)(280mm) x2

HARDWARE REQUIRED



TOOLS REQUIRED

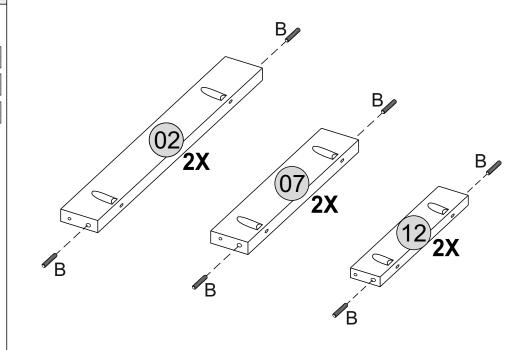




Please assemble on a clean soft surface to avoid damage.



Glue must be added to the dowel holes on part 02, 07, 12.



STEP 2


PARTS REQUIRED

 03 - SIDE PANEL (LARGE)(325mm)
 x2


 08 - SIDE PANEL (MEDIUM)(270mm)
 x2

 13 - SIDE PANEL (SMALL)(215mm)
 x2

HARDWARE REQUIRED




TOOLS REQUIRED

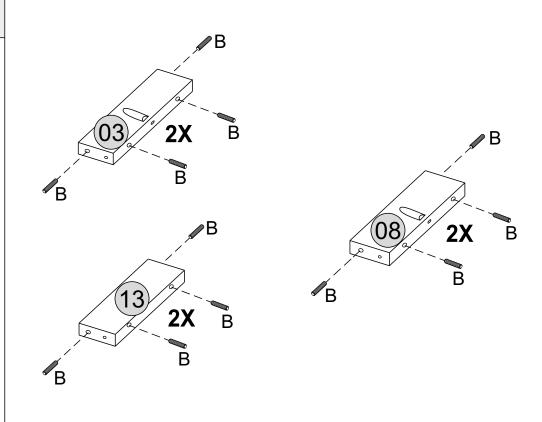



Please assemble on a clean soft surface to avoid damage. Glue must be added to the dowel holes on part 03, 08, 13.







02-FRONT/REAR PANEL (LARGE)(560mm)x2


04-LEG NATURAL (LARGE) x2


05-LEG GREEN (LARGE)

HARDWARE REQUIRED



TOOLS REQUIRED



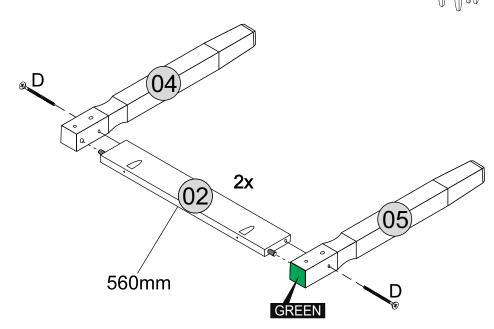



Please assemble on a clean soft surface to avoid damage.




Glue must be added to the dowel holes on part 04 and 05.



STEP 4

PARTS REQUIRED

03 - SIDE PANEL (LARGE)(325mm) x2

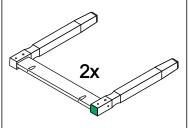


HARDWARE REQUIRED



TOOLS REQUIRED



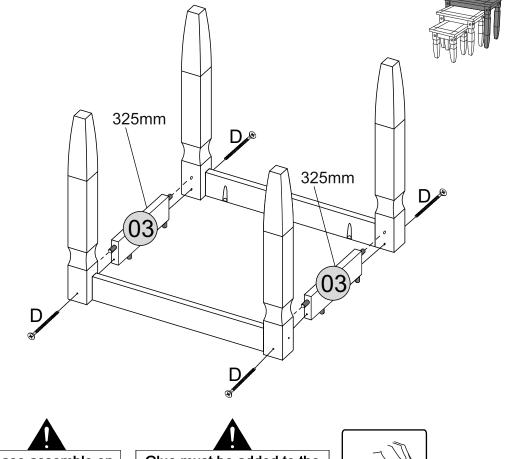

Please assemble on a clean soft surface to avoid damage.


Glue must be added to the dowel holes on part 04 and 05.





x1

01 - TOP PANEL (LARGE)

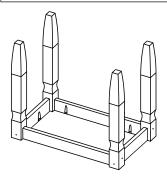


HARDWARE REQUIRED

Α	Ø 3,5 x 35mm	06
F	GLUE	01

TOOLS REQUIRED



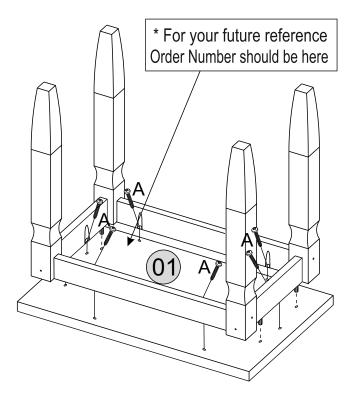



Please assemble on a clean soft surface to avoid damage.




Glue must be added to the dowel holes on part 01.



STEP 6


PARTS REQUIRED

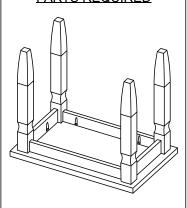

HARDWARE REQUIRED

C 08

TOOLS REQUIRED

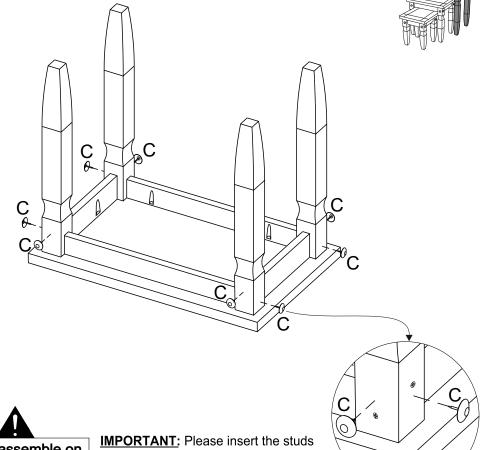

Please assemble on a clean soft surface to avoid damage.


IMPORTANT: Please insert the studs as per the illustration above, 1 stud above the screw and 1 stud below so that both studs line up.




07-FRONT/REAR PANEL (MEDIUM)(420mm)x2


10- LEG GREEN (MEDIUM)

HARDWARE REQUIRED



TOOLS REQUIRED



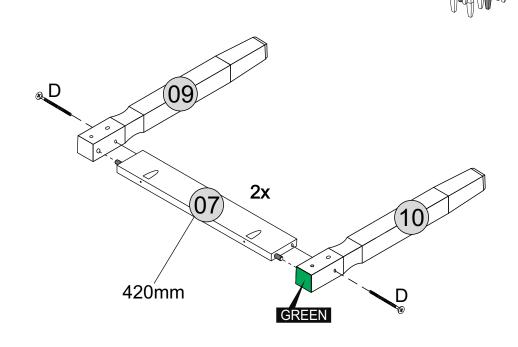



Please assemble on a clean soft surface to avoid damage.




Glue must be added to the dowel holes on part 09 and 10.



STEP 8

PARTS REQUIRED

08 - SIDE PANEL (MEDIUM)(270mm) x2

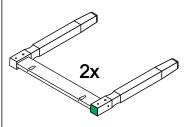


HARDWARE REQUIRED



TOOLS REQUIRED



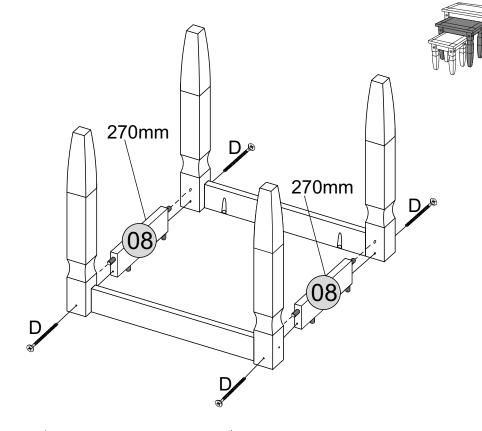



Please assemble on a clean soft surface to avoid damage.




Glue must be added to the dowel holes on part 09 and 10.





06 - TOP PANEL (MEDIUM) x1

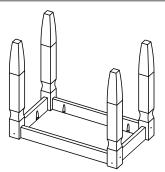


HARDWARE REQUIRED

Α	Ø 3,5 x 35mm	06
F	GLUE	01

TOOLS REQUIRED



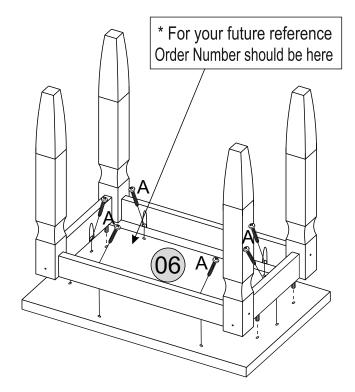



Please assemble on a clean soft surface to avoid damage.




Glue must be added to the dowel holes on part 06.



STEP 10


PARTS REQUIRED

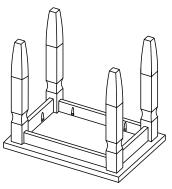

HARDWARE REQUIRED

C 08

TOOLS REQUIRED

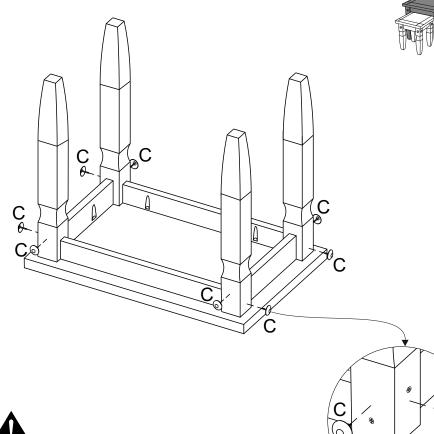




Please assemble on a clean soft surface to avoid damage. **IMPORTANT:** Please insert the studs as per the illustration above, 1 stud above the screw and 1 stud below so that both studs line up.




12- FRONT/REAR PANEL (SMALL)(280mm) x2
14- LEG NATURAL (SMALL) x2


15- LEG GREEN (SMALL)

HARDWARE REQUIRED



TOOLS REQUIRED



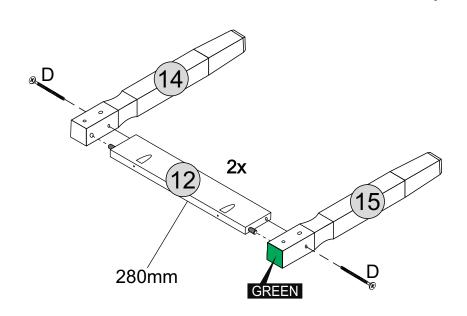



Please assemble on a clean soft surface to avoid damage.




Glue must be added to the dowel holes on part 14 and 15.



STEP 12

PARTS REQUIRED


13 - SIDE PANEL (SMALL)(215mm) x2




HARDWARE REQUIRED



TOOLS REQUIRED



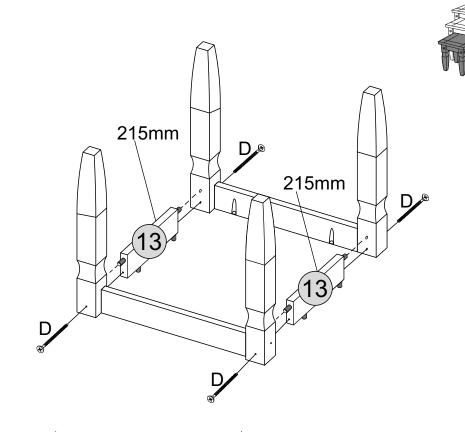



Please assemble on a clean soft surface to avoid damage.




Glue must be added to the dowel holes on part 14 and 15.



STEP 13

PARTS REQUIRED

11 - TOP PANEL (SMALL) x1

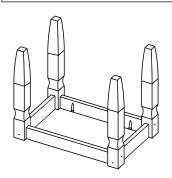


HARDWARE REQUIRED

Α	Ø 3,5 x 35mm	06
_	CILIE	04

TOOLS REQUIRED



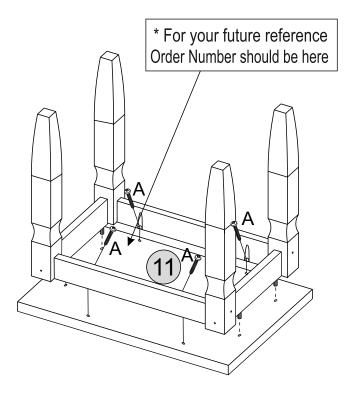



Please assemble on a clean soft surface to avoid damage.




Glue must be added to the dowel holes on part 11.



STEP 14


PARTS REQUIRED

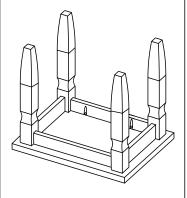

HARDWARE REQUIRED



TOOLS REQUIRED

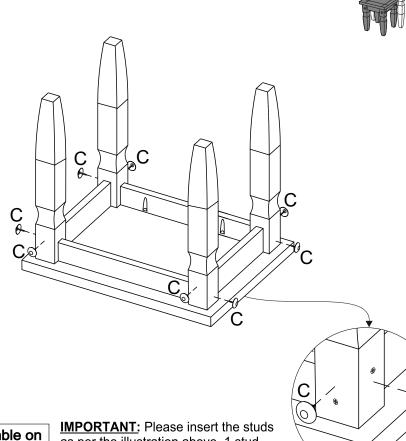



Please assemble on a clean soft surface to avoid damage. **IMPORTANT:** Please insert the studs as per the illustration above, 1 stud above the screw and 1 stud below so that both studs line up.