


BERGEN 1 DOOR 2 DRAWER TV UNIT

OAK EFFECT/WHITE/GREY

ASSEMBLY INSTRUCTIONS

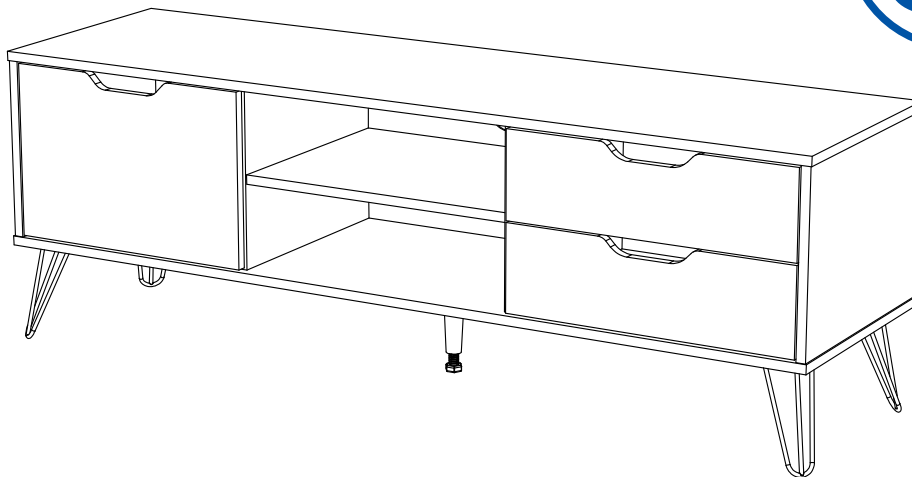

IMPORTANT


FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER


CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

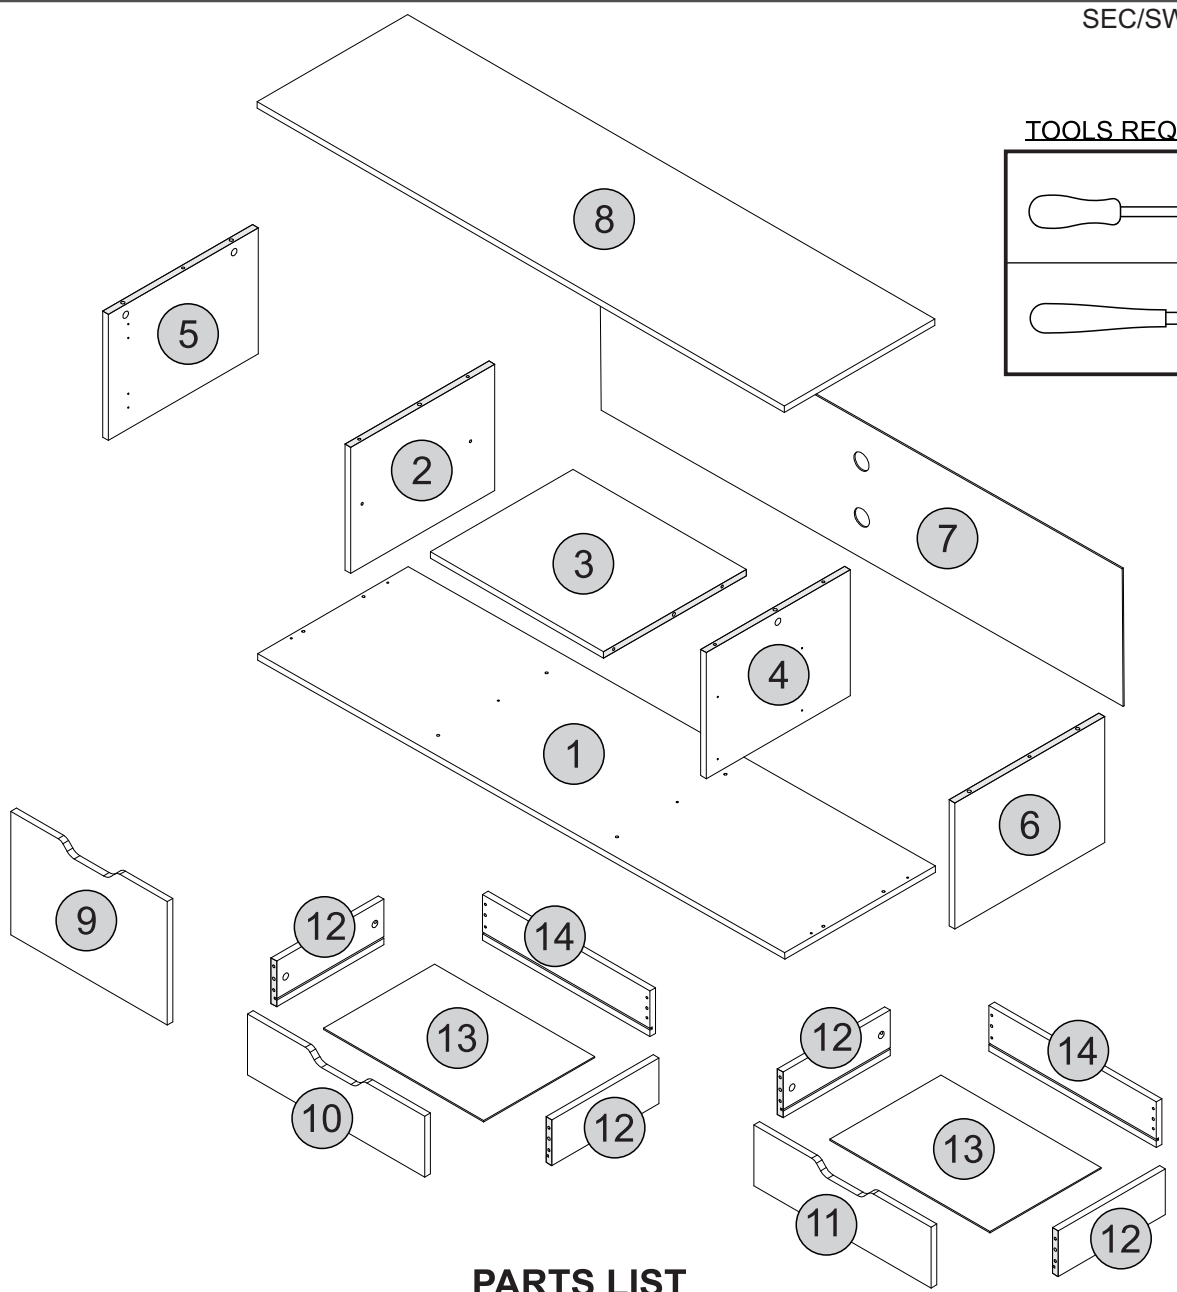

TOOLS REQUIRED

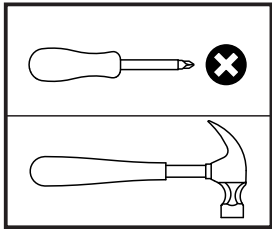













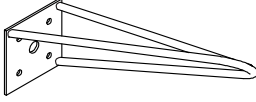
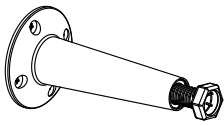

PARTS LIST

Please Note:

The below parts have all been stamped with the part number to help identify them during assembly.


Part Number	Part Code	Part Description	Quantity	Carton
1	S300-305-043-AY1-01	Base Panel	1	1/1
2	S300-305-043-AY1-02	Left Division Panel	1	1/1
3	S300-305-043-AY1-03	Shelf Panel	1	1/1
4	S300-305-043-AY1-04	Right Division Panel	1	1/1
5	S300-305-043-AY1-05	Left Side Panel	1	1/1
6	S300-305-043-AY1-06	Right Side Panel	1	1/1
7	S300-305-043-AY1-07	Back Panel	1	1/1
8	S300-305-043-AY1-08	Top Panel	1	1/1
9	S300-305-043-AY1-09	Door	1	1/1
10	S300-305-043-AY1-10	Upper Drawer Front	1	1/1
11	S300-305-043-AY1-11	Lower Drawer Front	1	1/1
12	S300-305-043-AY1-12	Drawer Side	4	1/1
13	S300-305-043-AY1-13	Drawer Bottom	2	1/1
14	S300-305-043-AY1-14	Drawer Back Panel	2	1/1

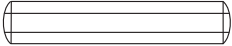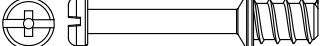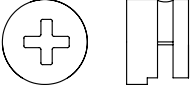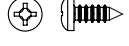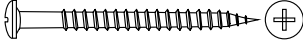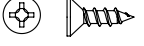
FITTINGS LIST

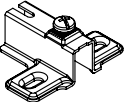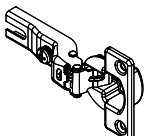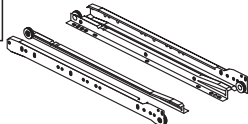
A  2/+ Dowel Ø6,0 x 30mm (34x)	B  2/+ Cam Bolt (14x)	C  2/+ Cam Nut (14x)	D  2/+ Pan Head Screw Ø4 x 14mm (28x)
E  2/+ Pan Head Screw Ø3,5 x 40mm (8x)	F  2/+ Pan Head Screw Ø3,5 x 12mm (20x)	G  2/+ Pan Head Screw Ø3 x 16mm (14x)	H  2/+ Plastic Corner (14x)
I  Hinge Plate (2x)	J  Hinge (2x)	K  Drawer Runners (2x)	L  Glue (2x)
M  Metal Leg (4x)	N  Adjustable Leg (1x)	O  2/+ Hole Plugs (16x)	


TIPS FOR FITTINGS CAM-LOCKS


WHEN FITTING CAM NUT. ENSURE STARTING POSITION IS CORRECT BEFORE YOU INSERT CONNECTING CAM BOLT TURN CLOCKWISE UNTIL SECURE


↑
CORRECT


↓
WRONG


↓
WRONG



X

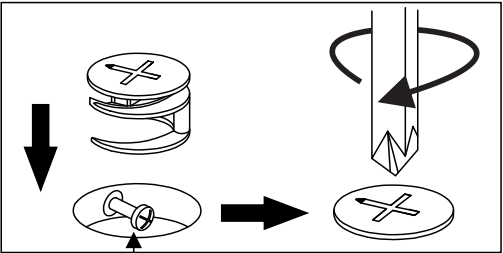

Cam bolt head needs to be in centre

CAMBOLT

Tighten until shoulder inflush with panel. Do not overtighten or undertighten (see example below)

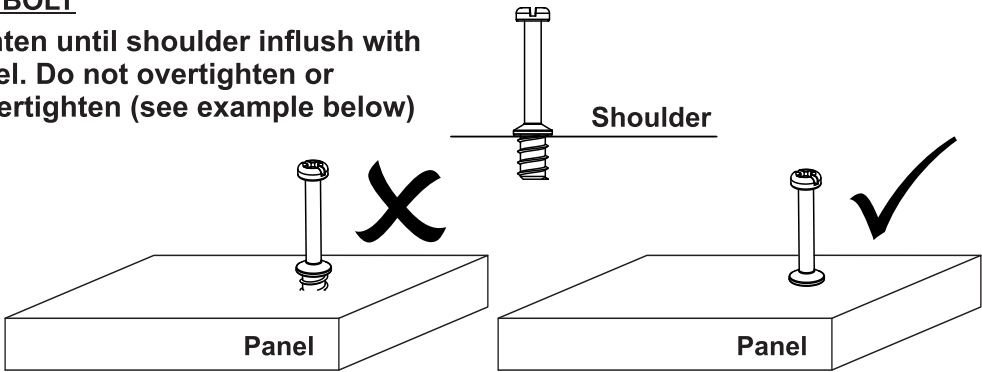


STEP 1




PARTS REQUIRED

8 - TOP PANEL x1

HARDWARE REQUIRED

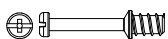B  06

TOOLS REQUIRED

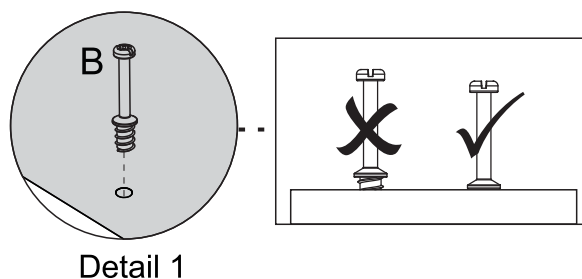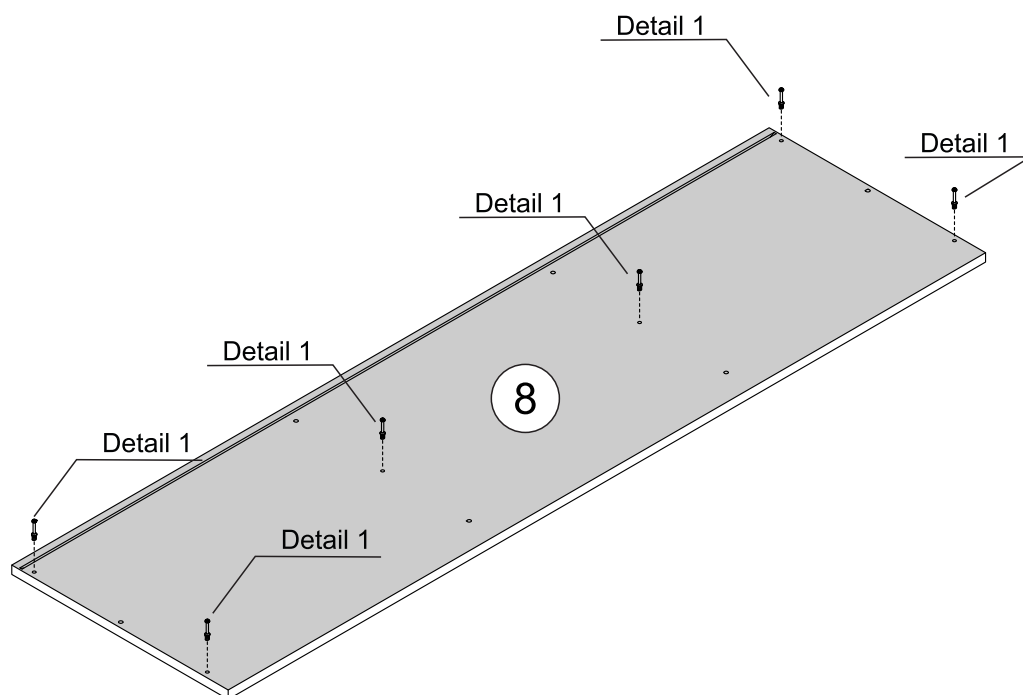


STEP 2

PARTS REQUIRED



3 - SHELF PANEL x1

HARDWARE REQUIRED

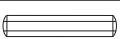A  04

L  01

TOOLS REQUIRED

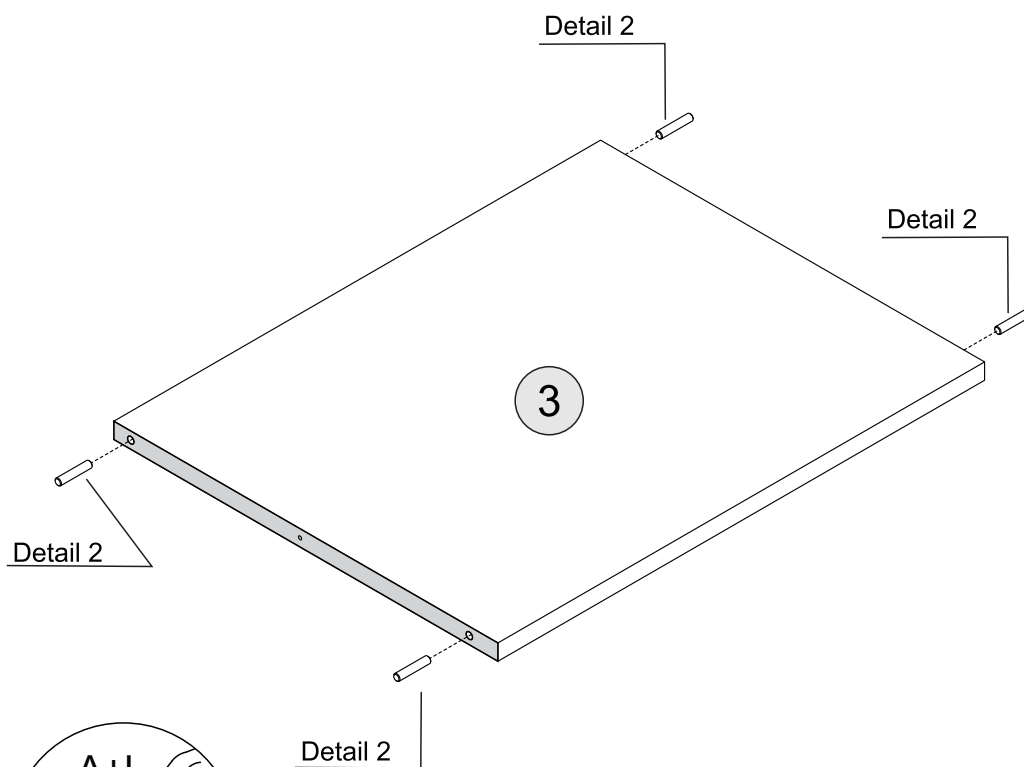





STEP 3



PARTS REQUIRED

5 - LEFT SIDE PANEL x1


HARDWARE REQUIRED

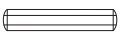A		03
D		04
I		02
L		01

TOOLS REQUIRED

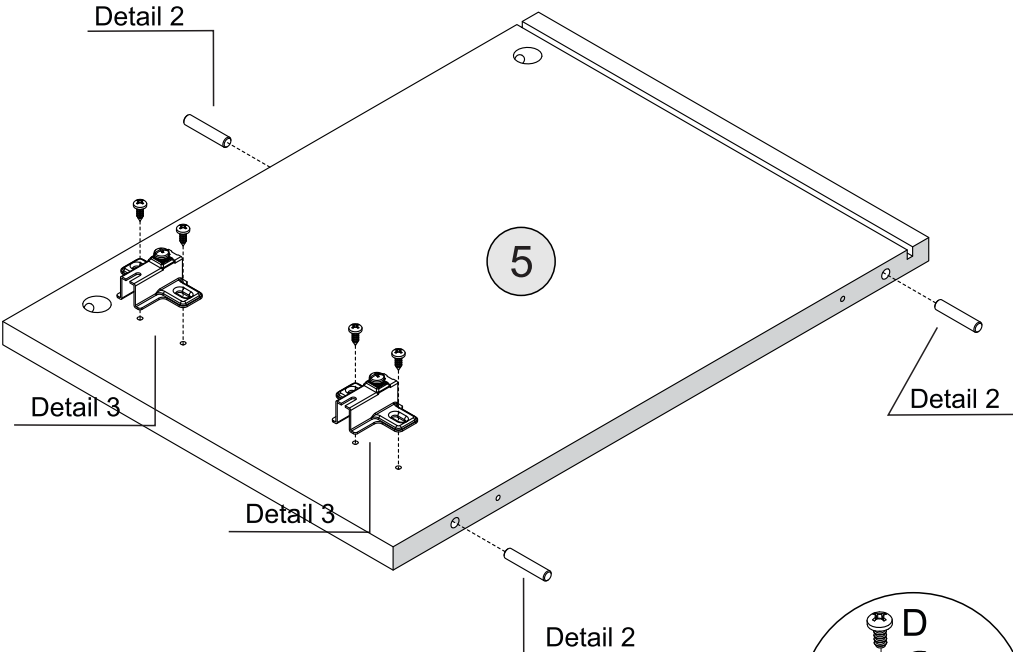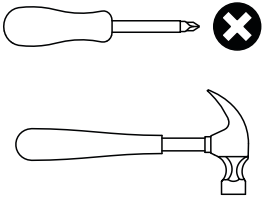

Detail 2

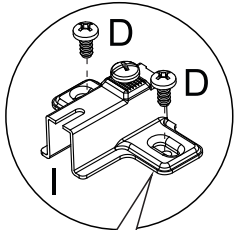

Please note:
Pre-marked
Holes





Detail 3

STEP 4



PARTS REQUIRED

6 - RIGHT SIDE PANEL x1

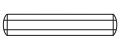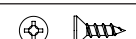
HARDWARE REQUIRED

A		03
F		06
K		02
L		01


TOOLS REQUIRED

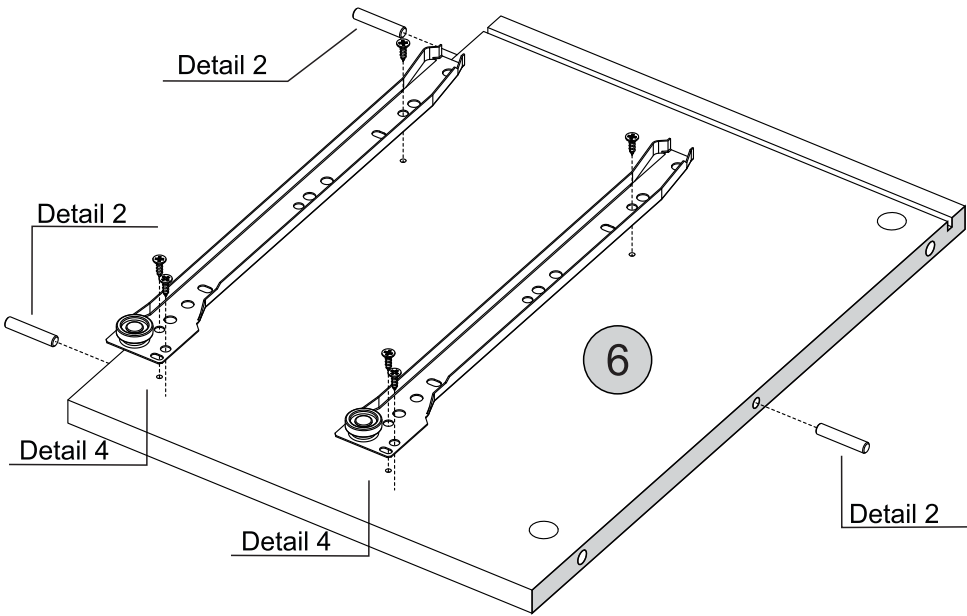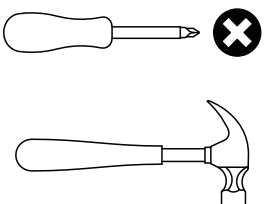

Detail 2

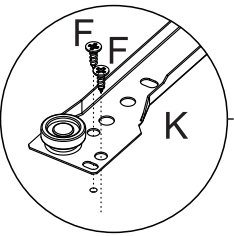

Detail 4

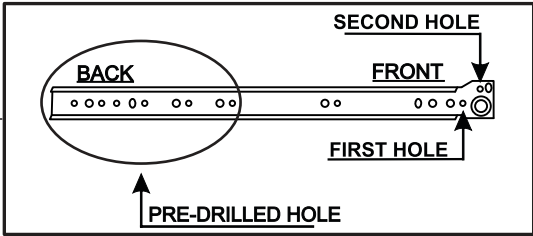


STEP 5

PARTS REQUIRED



2 - LEFT DIVISION PANEL x1

HARDWARE REQUIRED

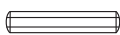A  04

L  01

TOOLS REQUIRED

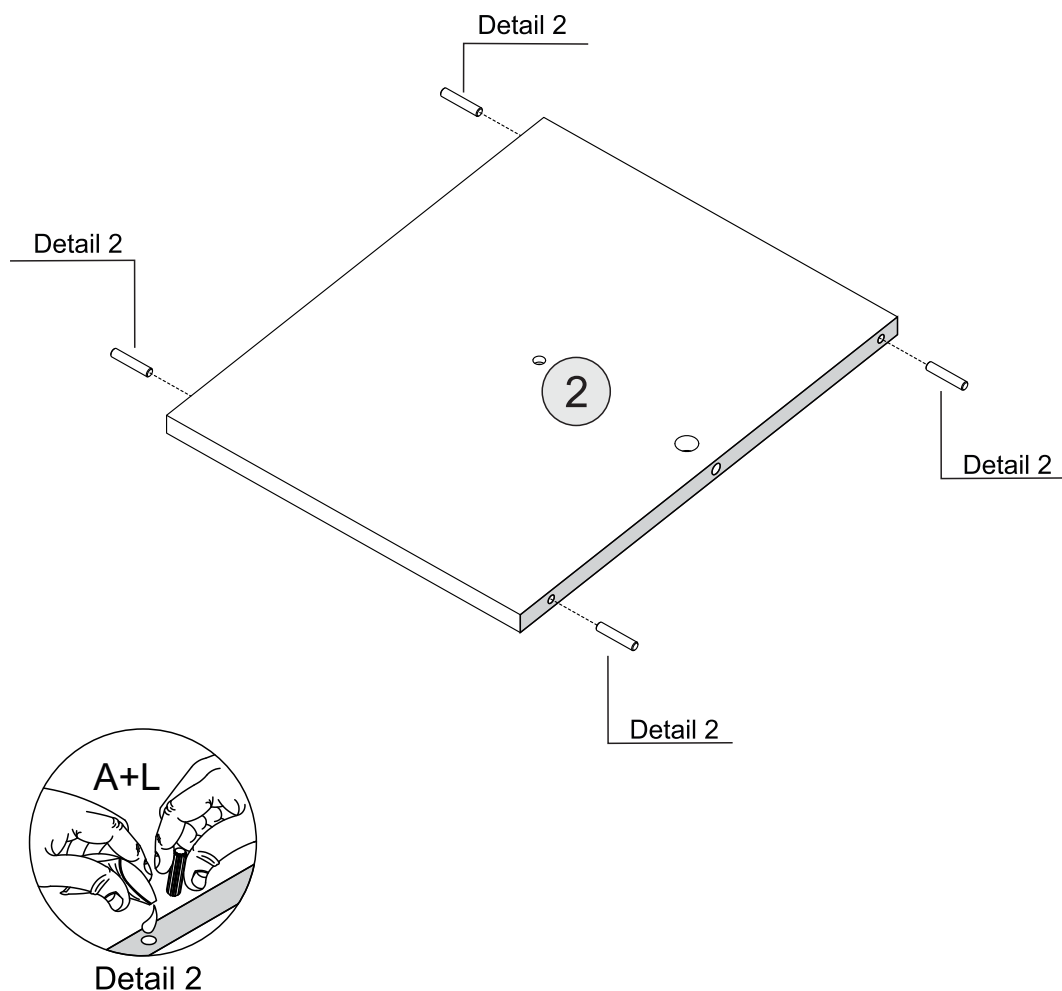

STEP 6

PARTS REQUIRED

4 - RIGHT DIVISION PANEL x1

HARDWARE REQUIRED




A  04

F  06

K  02

L  01

TOOLS REQUIRED

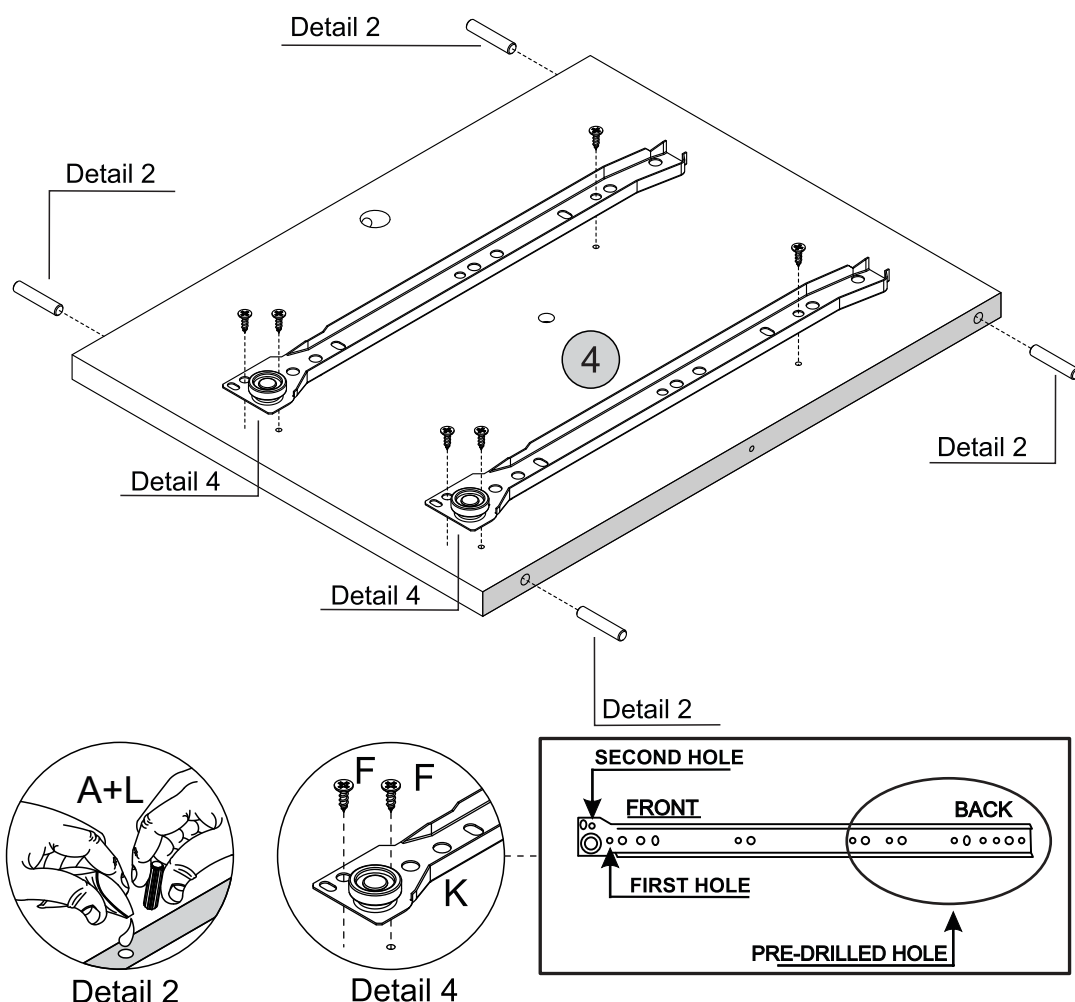

STEP 7


PARTS REQUIRED

2 - LEFT DIVISION PANEL x1



3 - SHELF PANEL

4 - RIGHT DIVISION PANEL x1

HARDWARE REQUIRED

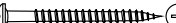E  02L  01O  02


TOOLS REQUIRED

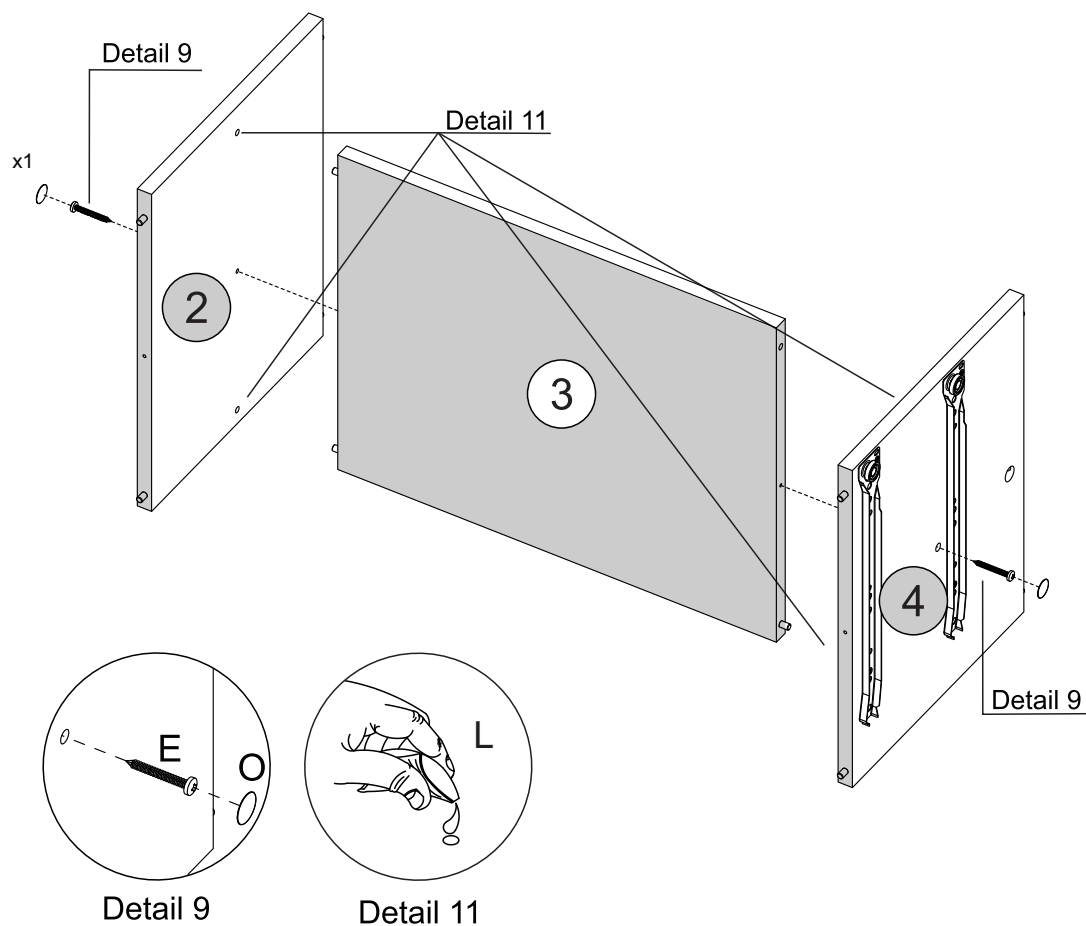


STEP 8

PARTS REQUIRED



1 - BASE PANEL x1

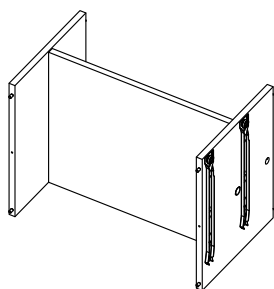

HARDWARE REQUIRED

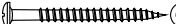E  02L  01

TOOLS REQUIRED

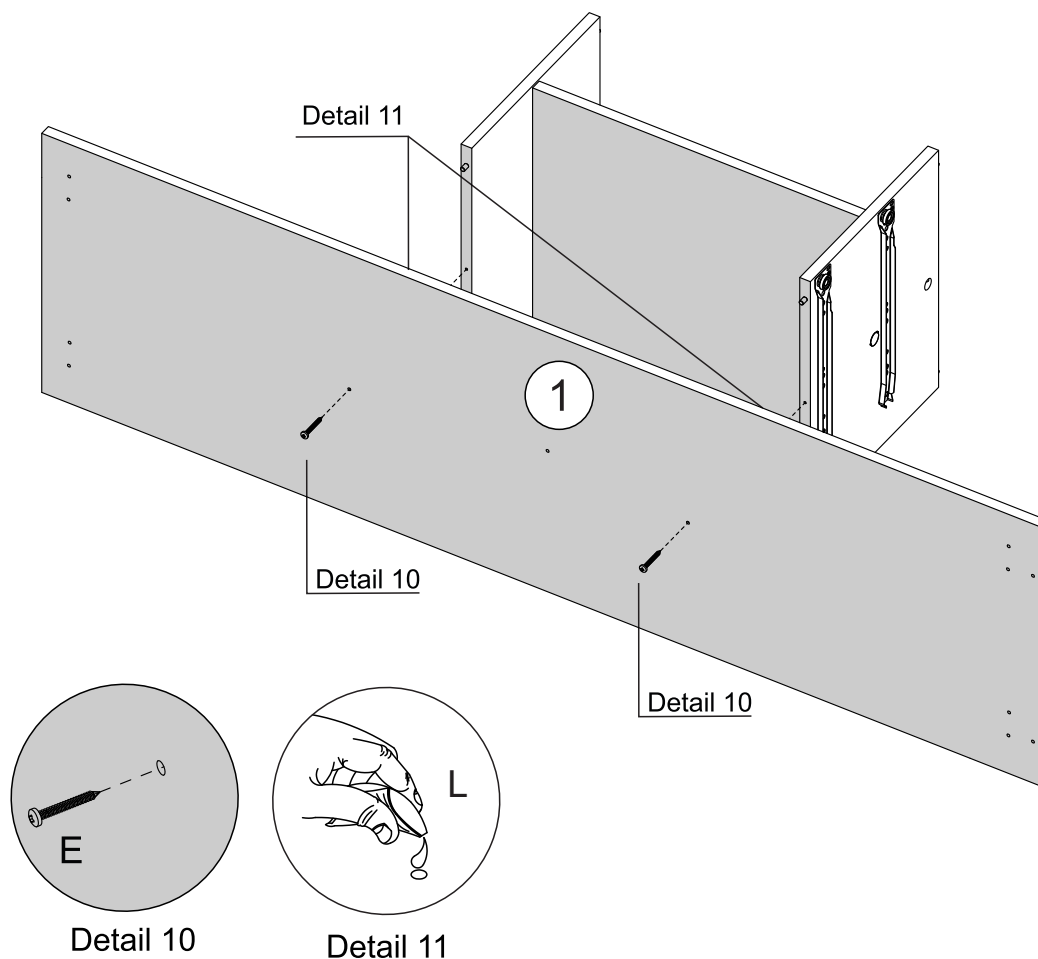


STEP 9


PARTS REQUIRED

5 - LEFT SIDE PANEL x1



6 - RIGHT SIDE PANEL x1

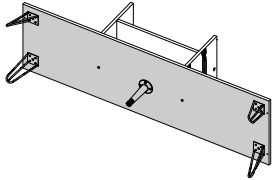

HARDWARE REQUIRED


E  04L  01

TOOLS REQUIRED

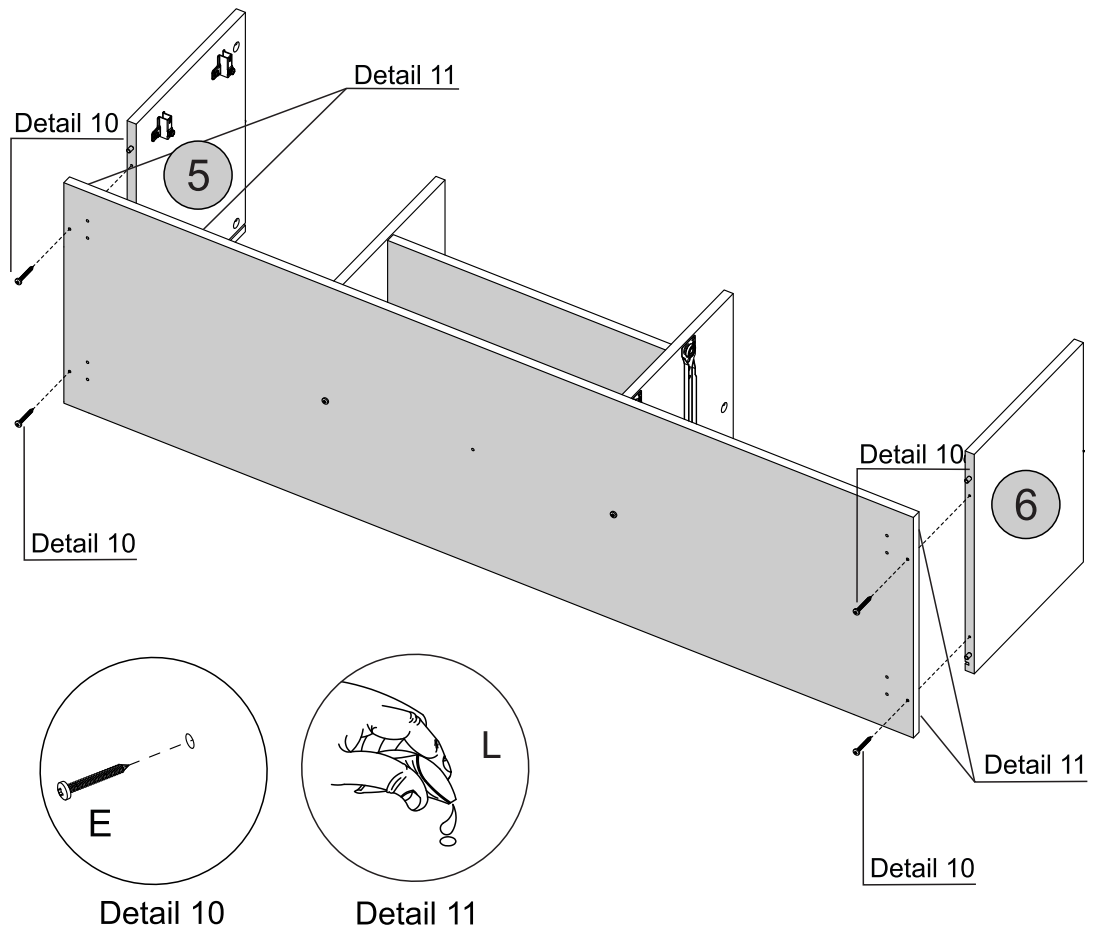


STEP 10



PARTS REQUIRED

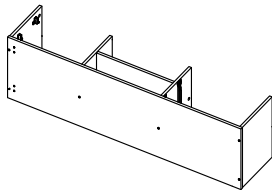

HARDWARE REQUIRED

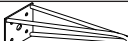D  20M  04N  01


TOOLS REQUIRED

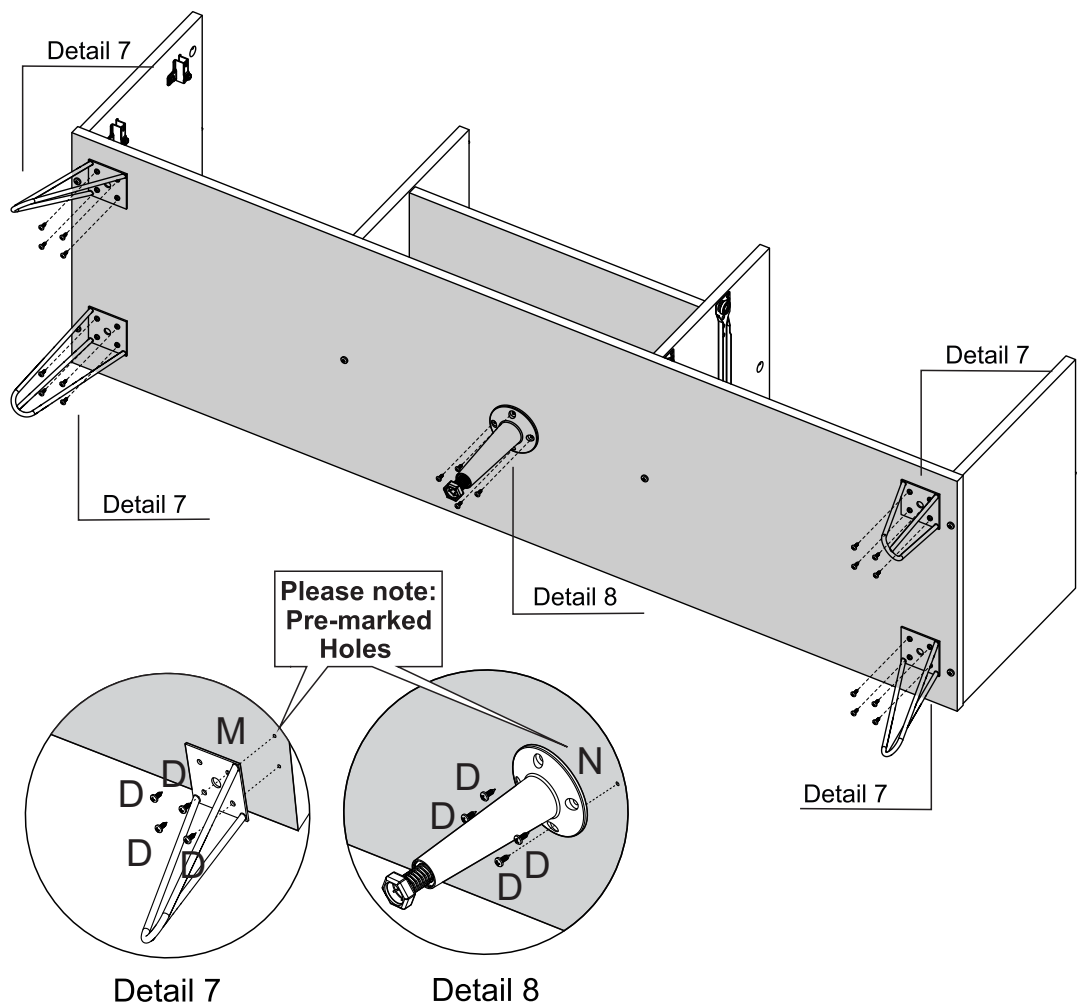

STEP 11


PARTS REQUIRED

7 - BACK PANEL x1

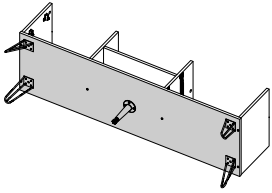

HARDWARE REQUIRED


TOOLS REQUIRED

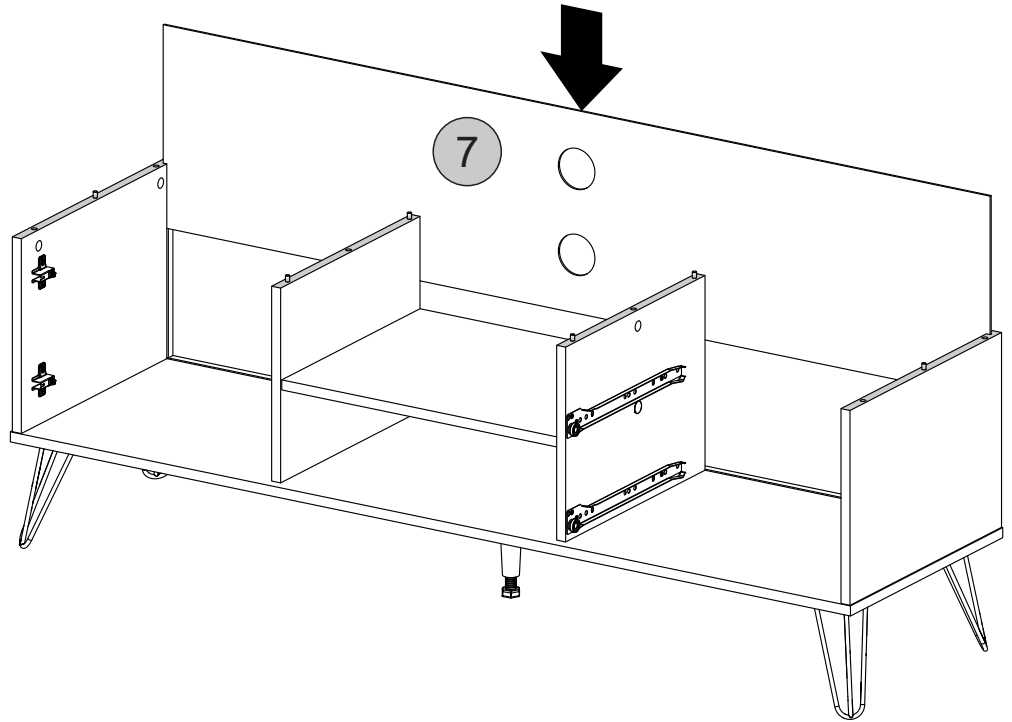


STEP 12

PARTS REQUIRED

8 - TOP PANEL x1

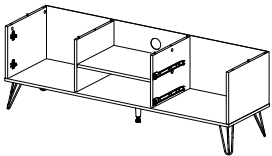




HARDWARE REQUIRED

C  06



O  06

L  01

TOOLS REQUIRED

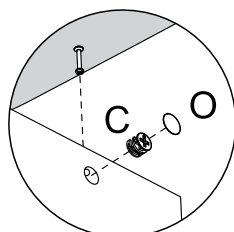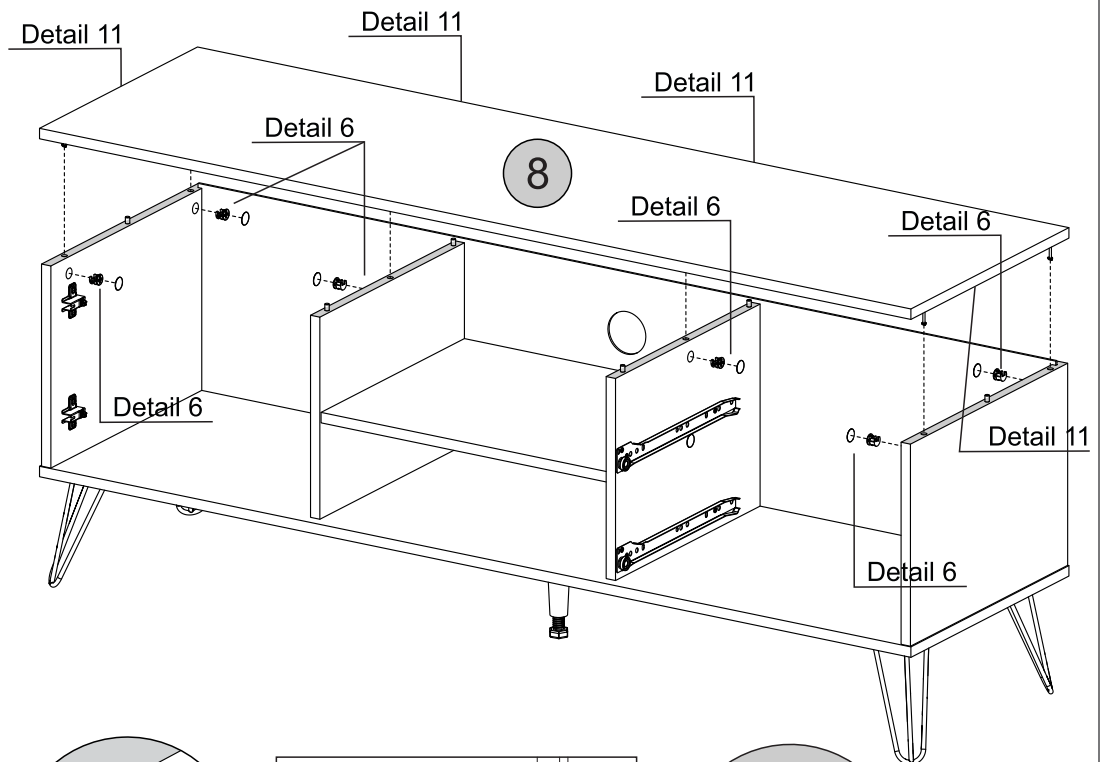


Detail 6

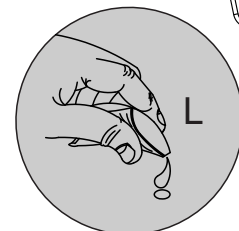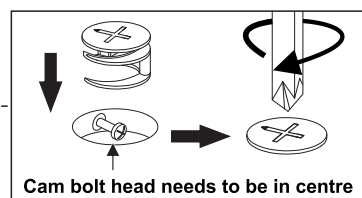


Detail 11

STEP 13




PARTS REQUIRED

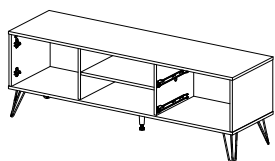


HARDWARE REQUIRED



TOOLS REQUIRED

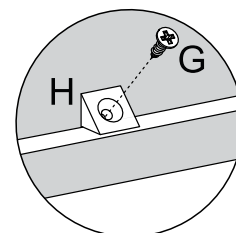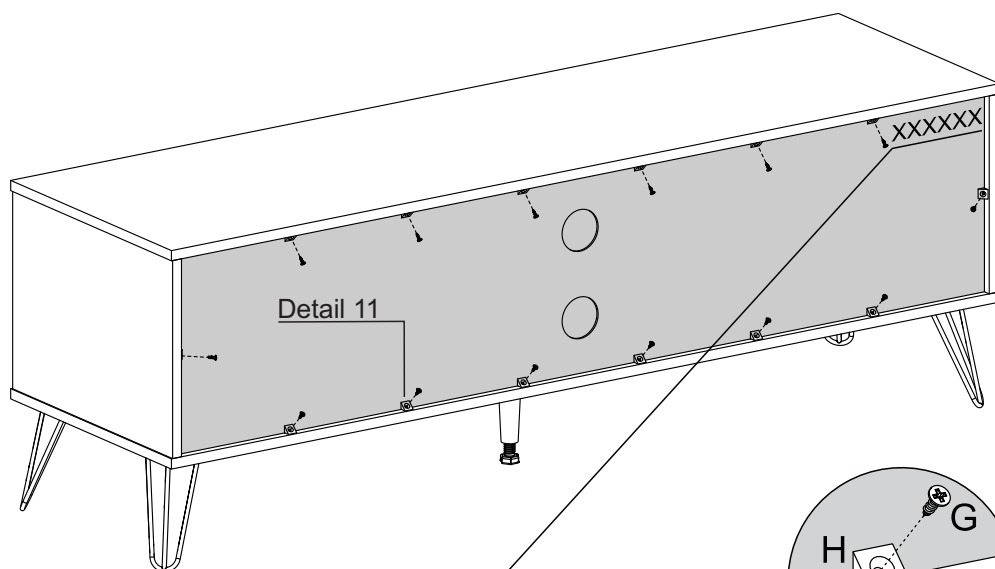

Detail 11

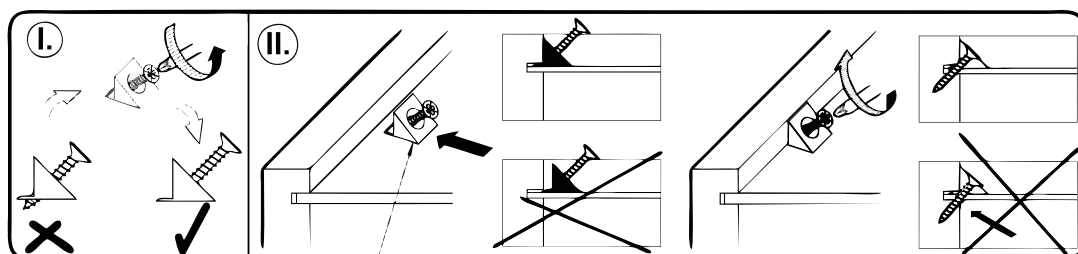


STEP 14




PARTS REQUIRED

9 - DOOR	x1
----------	----

HARDWARE REQUIRED



TOOLS REQUIRED

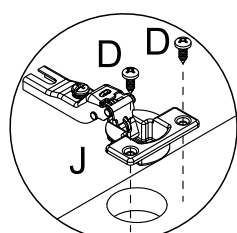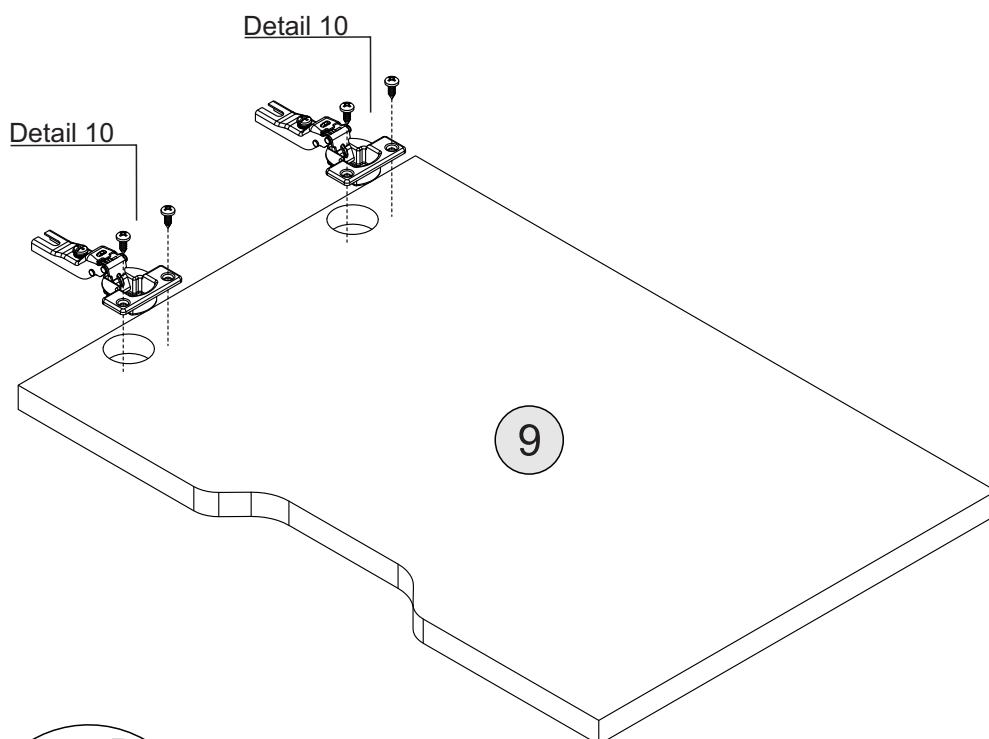


Detail 10

STEP 15




PARTS REQUIRED

9 - DOOR x1

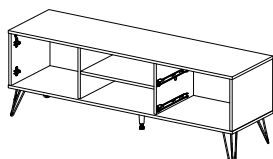


HARDWARE REQUIRED

TOOLS REQUIRED

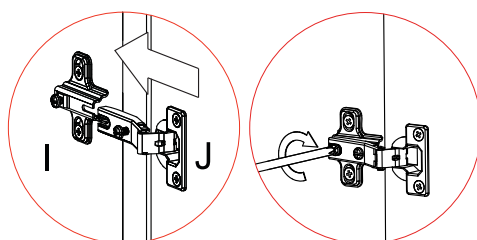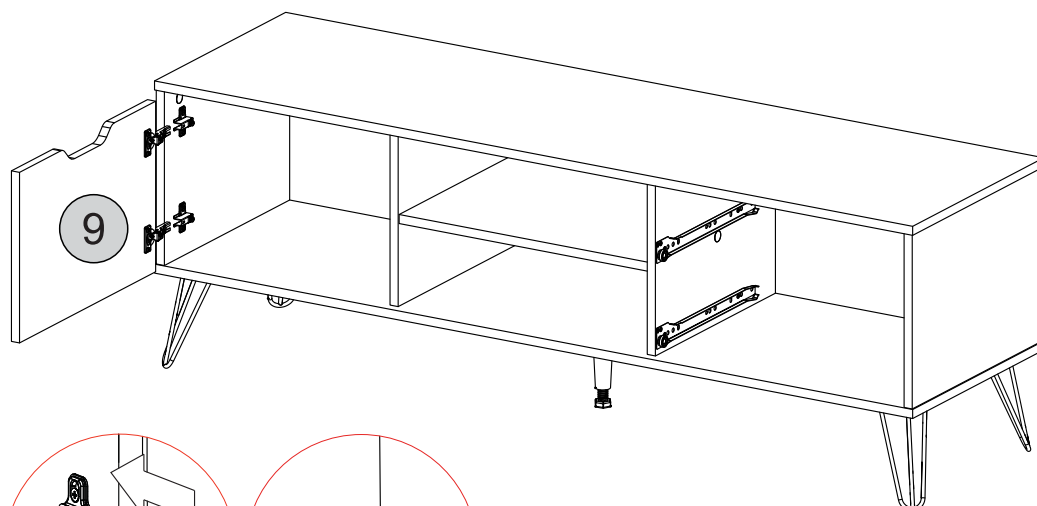


ADJUSTMENTS



Depth Adjustment

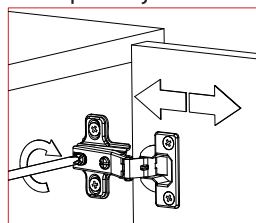

Height Adjustment

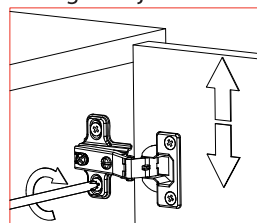

Internal Adjustment

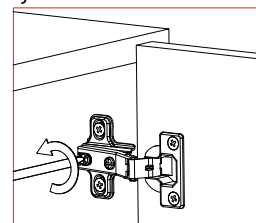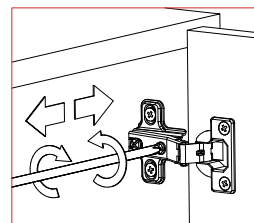

STEP 16

PARTS REQUIRED

10 - UPPER DRAWER FRONT x1

11 - LOWER DRAWER FRONT x1

12 - DRAWER SIDE x1

12 - DRAWER BACK PANEL x1





HARDWARE REQUIRED

A 16



B 08

L GLUE 01

TOOLS REQUIRED

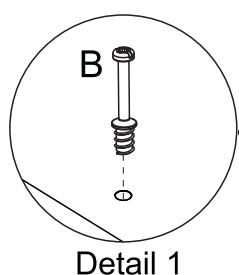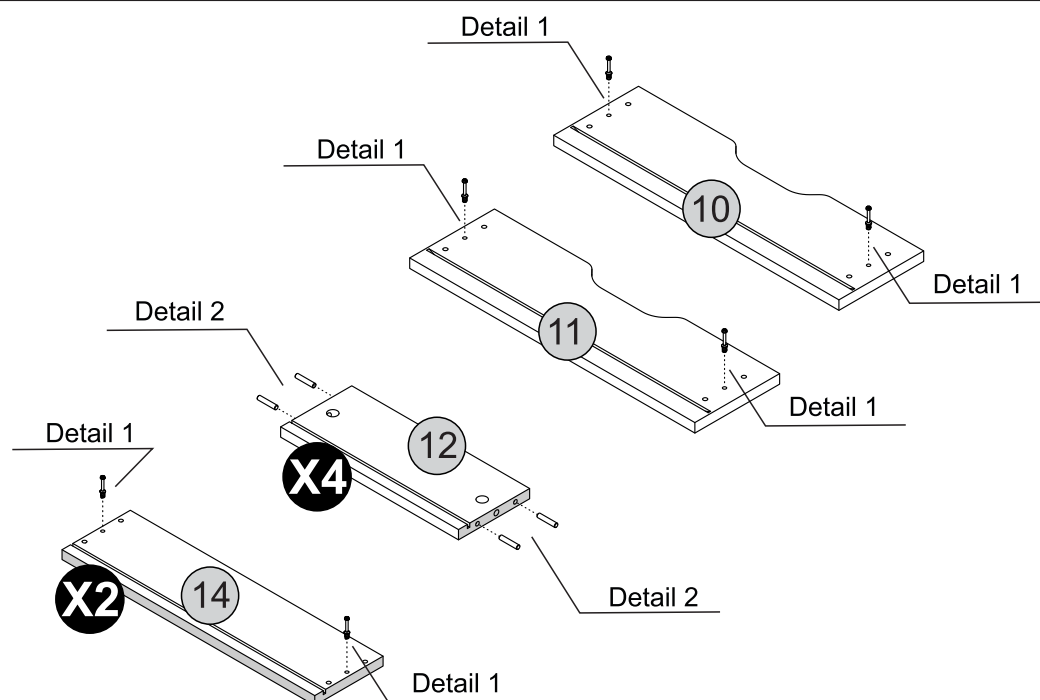

Detail 1

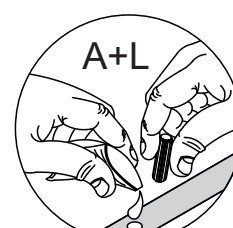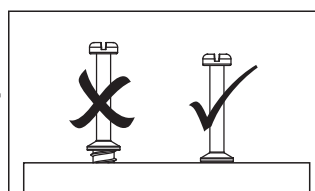

Detail 2

STEP 17

PARTS REQUIRED

12 - DRAWER SIDE x2





13 - DRAWER BOTTOM x2

14 - DRAWER BACK PANEL x2


HARDWARE REQUIRED

C  04O  04L  01

TOOLS REQUIRED

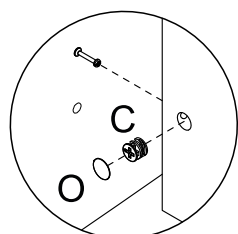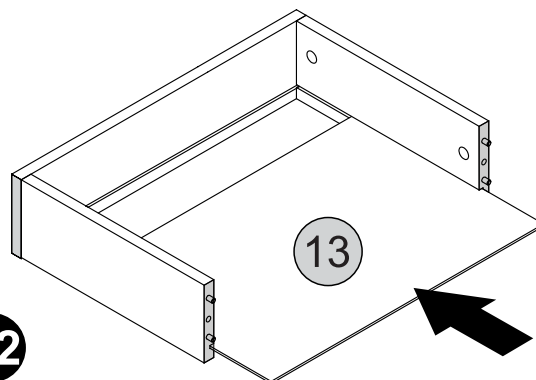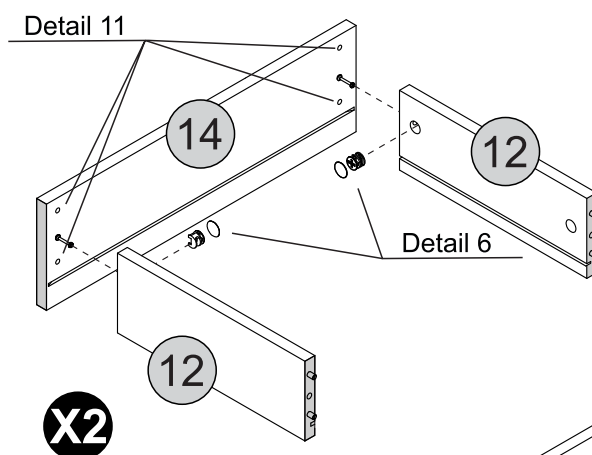

Detail 6

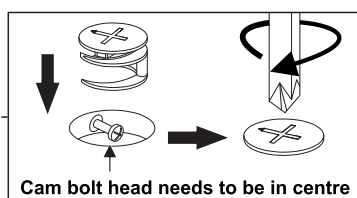

Cam bolt head needs to be in centre




Detail 11

STEP 18

PARTS REQUIRED

10 - UPPER DRAWER FRONT x1


11 - LOWER DRAWER FRONT x1

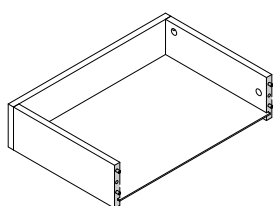



HARDWARE REQUIRED

C  04O  04L  01


TOOLS REQUIRED




X2

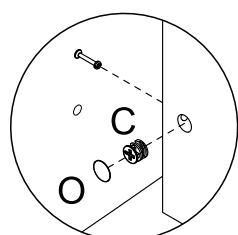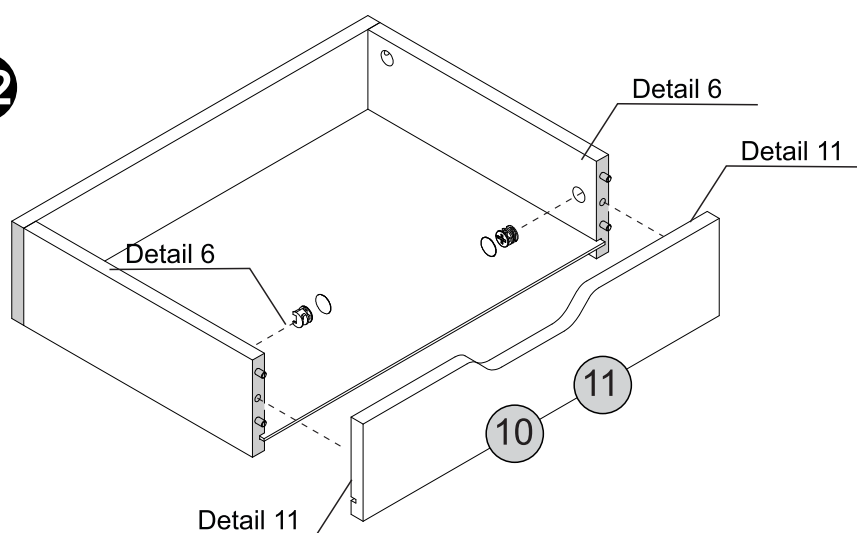

Detail 6

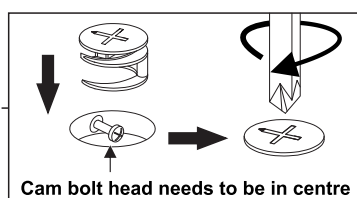


Cam bolt head needs to be in centre

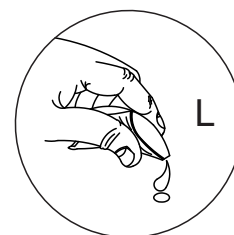


Detail 11

STEP 19





PARTS REQUIRED

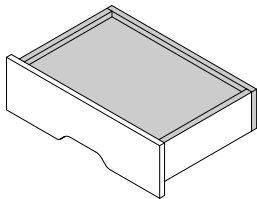

HARDWARE REQUIRED





TOOLS REQUIRED

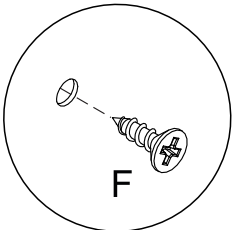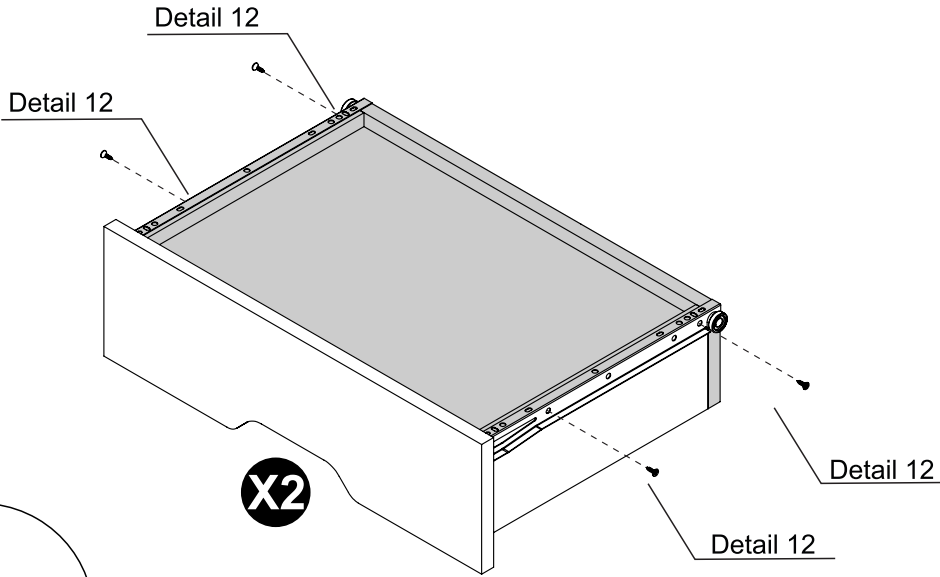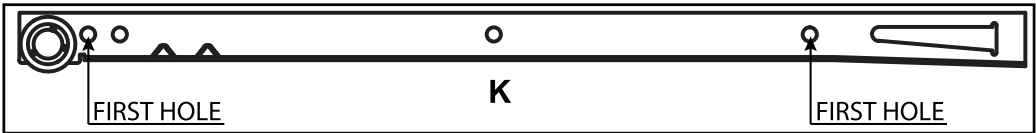

Detail 12



STEP 20

PARTS REQUIRED

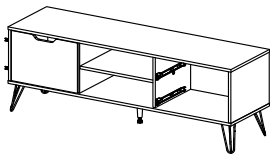

HARDWARE REQUIRED

TOOLS REQUIRED

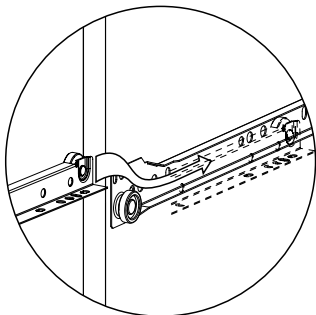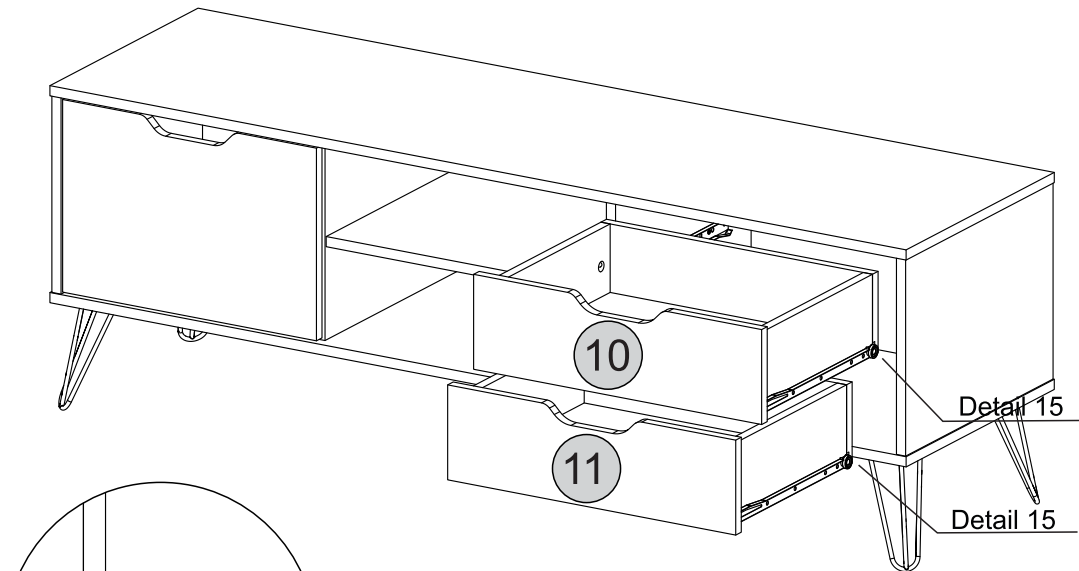

Detail 15

STEP 21

SEC/SW/06/22/AY1

PARTS REQUIRED

HARDWARE REQUIRED

TOOLS REQUIRED

