
# RIMINI DINING CHAIR ASSEMBLY INSTRUCTIONS

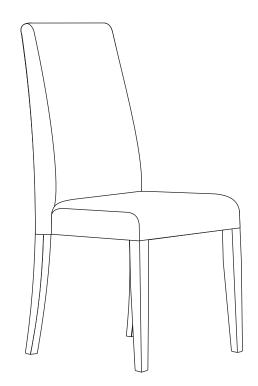







### **IMPORTANT**

### FOR DOMESTIC USE ONLY

#### PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.

ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.


DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE.

DO NOT OVERTIGHTEN FIXINGS.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET). DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.

THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

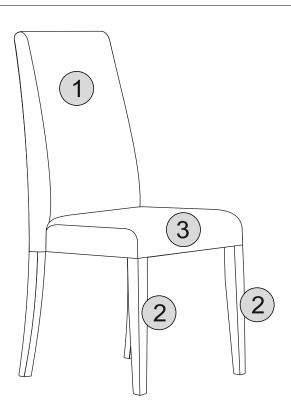

### **PARTS LIST**

| Part Number | Part Code           | Part Description | <b>Quantity</b> | <u>Carton</u> |
|-------------|---------------------|------------------|-----------------|---------------|
| 1           | S400-402-081-PU1-01 | Chair Back       | 1               | 1/1           |
| 2           | S400-402-081-PU1-02 | Front Leg        | 2               | 1/1           |
| 3           | S400-402-081-PU1-03 | Cushion Seat     | 1               | 1/1           |

### **HARDWARE LIST**


| REF |    | HARDWARE NAME    | QTY  |
|-----|----|------------------|------|
| Α   |    | JCBC BOLTS (M70) | 4PCS |
| В   |    | JCBC BOLTS (M50) | 4PCS |
| С   | () | JCBC BOLTS (M40) | 1PC  |
| D   | 0  | FLAT WASHER      | 9PCS |
| Е   |    | SPRING WASHER    | 9PCS |
| F   |    | ALLEN KEY        | 1PC  |

PLEASE CHECK THAT YOU HAVE ALL THE PARTS LISTED BEFORE YOU START ASSEMBLING.IF YOU DO FIND THAT SOMETHING IS MISSING.DO NOT CONTINUE ASSEMBLY. PLEASE CONTACT YOUR SUPPLIER IMMEDIATELY.


# STEP 1


#### PARTS REQUIRED

#### HARDWARE REQUIRED



#### **TOOLS REQUIRED**



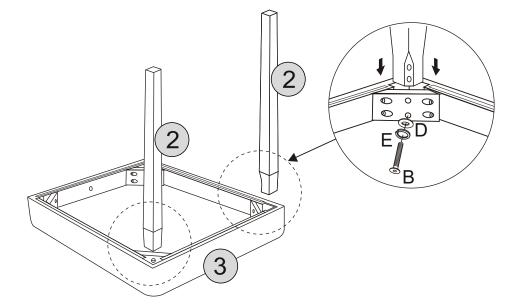





FULLY TIGHTEN ALL BOLTS !!

# STEP 2

#### **PARTS REQUIRED**

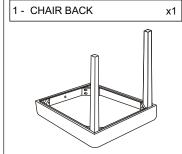


#### HARDWARE REQUIRED



#### **TOOLS REQUIRED**



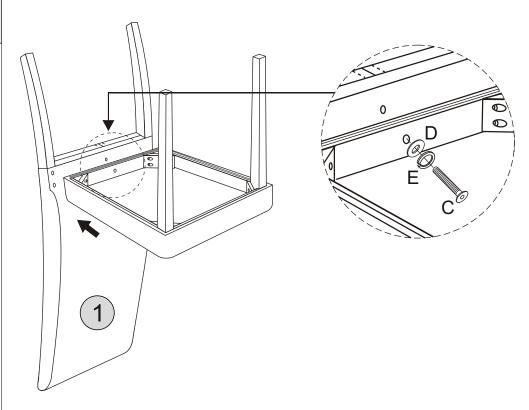



DO NOT FULLY TIGHTEN THE BOLTS AT THIS STAGE !!

# STEP 3

#### PARTS REQUIRED




**HARDWARE REQUIRED** 

| Α |   | 04 |
|---|---|----|
| D | 0 | 04 |
| Е |   | 04 |

**TOOLS REQUIRED** 



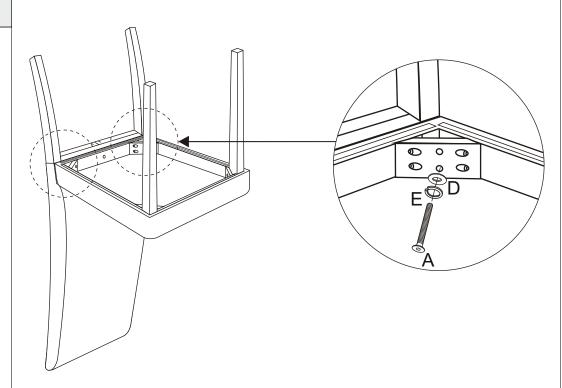




DO NOT FULLY TIGHTEN THE BOLTS AT THIS STAGE!!

## STEP 4


#### **PARTS REQUIRED**



**HARDWARE REQUIRED** 



After all parts have been loosely bolted together, put the chair on the floor and make it level. Finally tighten all bolts carefully.

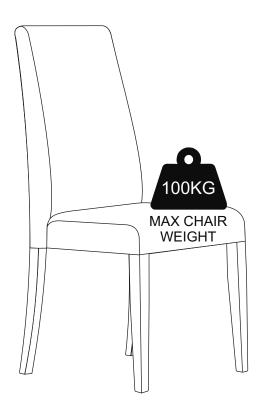



FULLY TIGHTEN ALL BOLTS !!