
AUSTIN DINING CHAIR ASSEMBLY INSTRUCTIONS

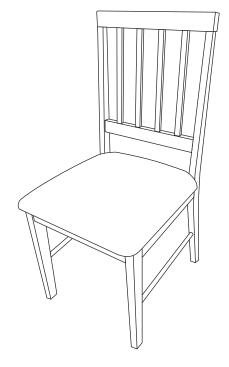







IMPORTANT FOR DOMESTIC USE ONLY PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.

ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.


DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE.

DO NOT OVERTIGHTEN FIXINGS.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET). <u>DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.</u>

THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

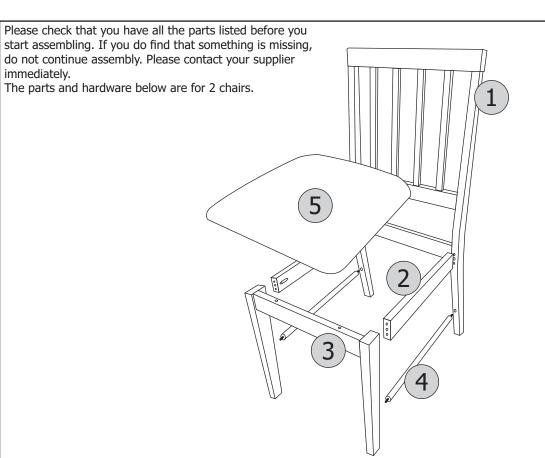

PART LIST

Part Number	Part Code	Part Description	Quantity	<u>Carton</u>
1	S400-402-144-PU1-01C	Chair Back	2	1/1
2	S400-402-144-PU1-02C	Side Stretcher	4	1/1
3	S400-402-144-PU1-03C	Front Section	2	1/1
4	S400-402-144-PU1-04C	Bottom Stretcher	4	1/1
5	S400-402-144-PU1-05C	Cushion Seat	2	1/1

HARDWARE LIST

No.	Part Name		Qty	Carton
Α	M6 x 50mm JCBC	0	12	1
В	Spring Washer M6 x 13mm	0	12	1
С	Flat Washer M6 x 13mm	0	12	1
D	M4 x 32mm CSK Screw	8mm-	16	1
Е	Wood Dowel M8 x 30mm		12	1
F	Allen Key M4 x 107mm Ball Head		1	1

STEP 1

PARTS REQUIRED

2 - SIDE STRETCHER x2

HARDWARE REQUIRED








TOOLS REQUIRED



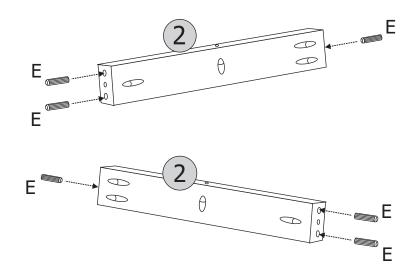


STEP 2


PARTS REQUIRED


- 1 CHAIR BACK x1
- 2 SIDE STRETCHER x2
- 4 BOTTOM STRETCHER x2

HARDWARE REQUIRED

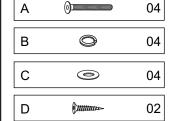

TOOLS REQUIRED



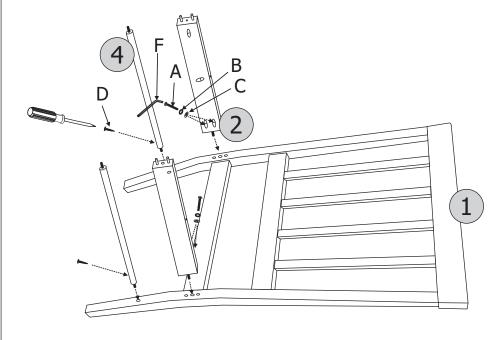

<u>Important</u>
Please **do not** fully tighten the screws before **STEP 3!!**

